



WARNING

CHOKING HAZARD



Small parts can be swallowed and block the airway.
Do not allow children under the age of 3 to use this product.
Use under adult supervision at all times.

FIRE HAZARD

Keep all flame and heat sources away from tent fabric.

Assembly and usage guidelines

- Adult assembly required
- Adult supervision required at all times
- Ages 3+

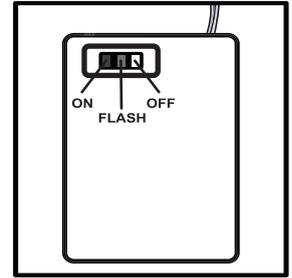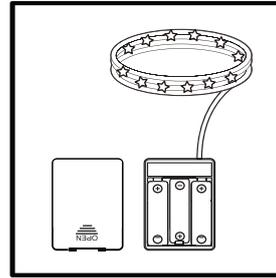

Install Batteries

1. Remove the battery cover. Slide off in the direction indicated on the box.
2. Install 3 AA batteries in the order indicated by the imprints inside of the battery compartment.
3. Reinstall the battery cover.

Batteries

- Use AA batteries.
- Do not mix used and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Remove batteries during periods of non-use.




Pole A -24 Pcs




Pole B -8 Pcs



Pole C -3 Pcs

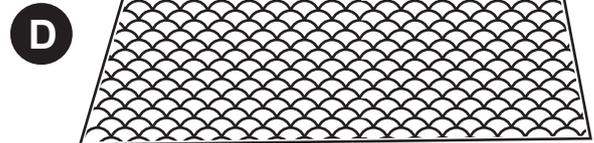

Padded Mat

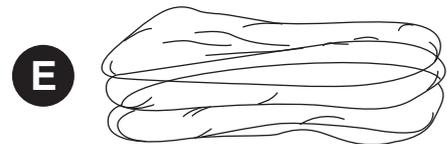

Fabric Cover




Connector Tubes -18 Pcs



Connector Tubes -2 Pcs




Lights

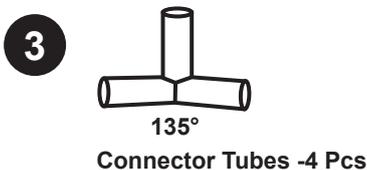


135°

Connector Tubes -4 Pcs

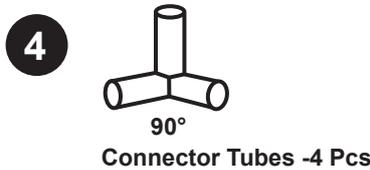

90°


Connector Tubes -4 Pcs

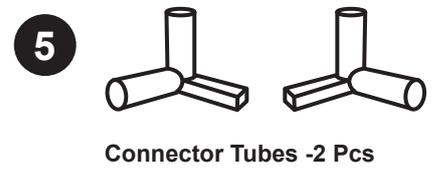

Connector Tubes -2 Pcs




1

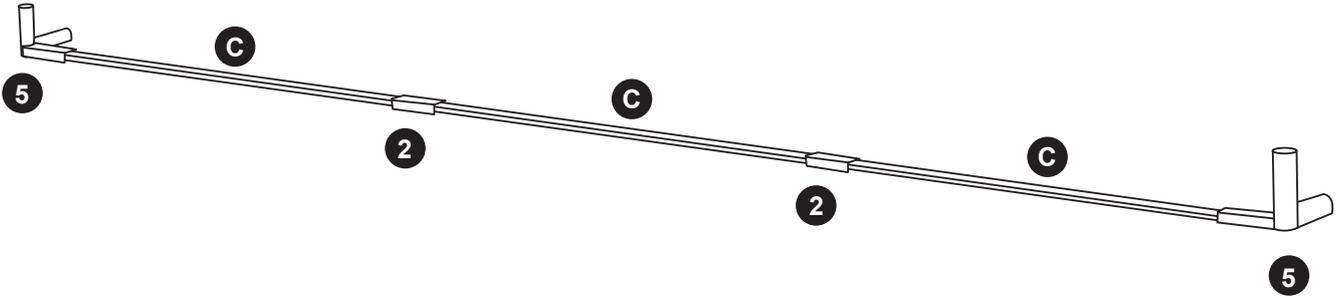


Note: The parts 5 are distinguished between left and right.

2

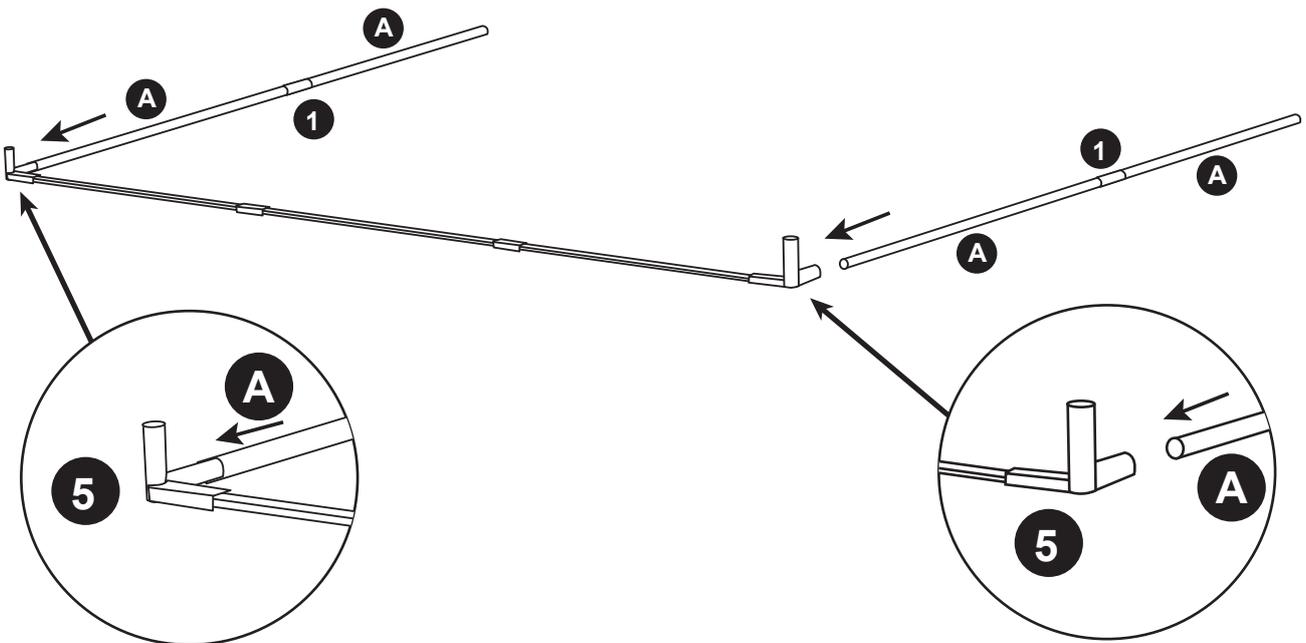




3

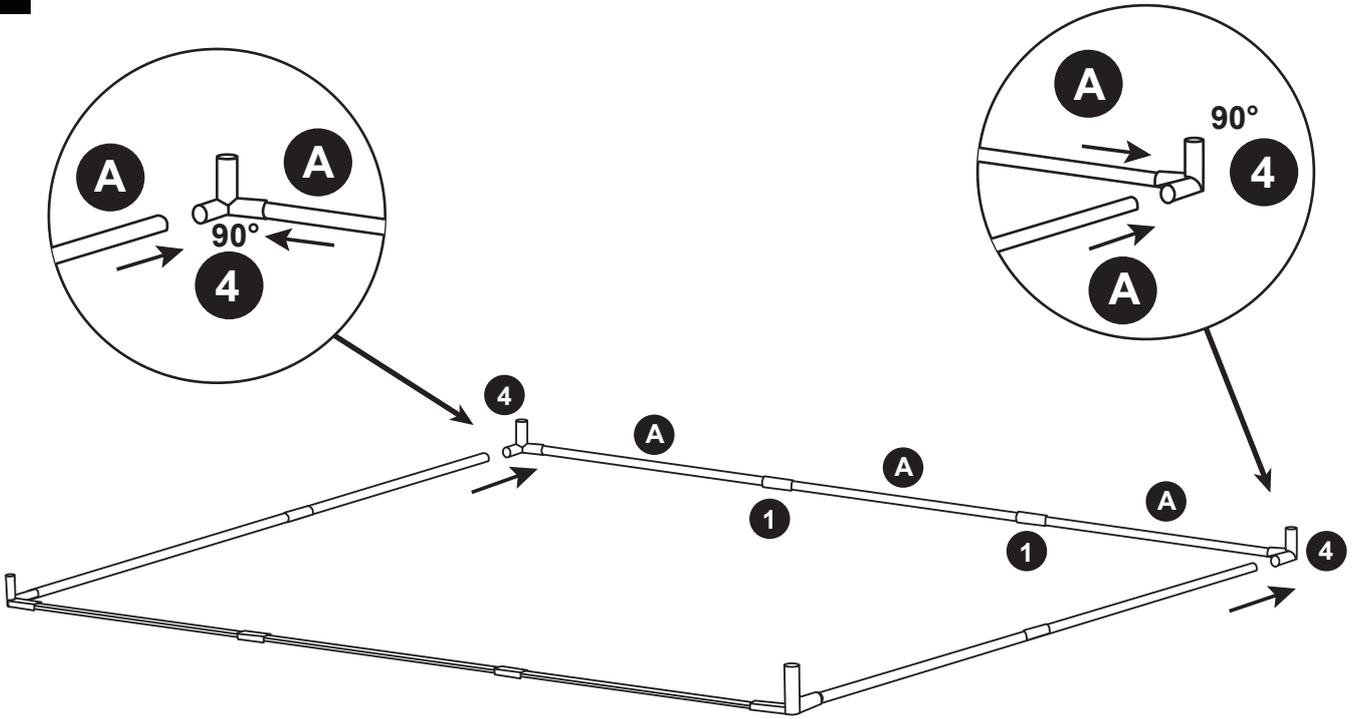



4

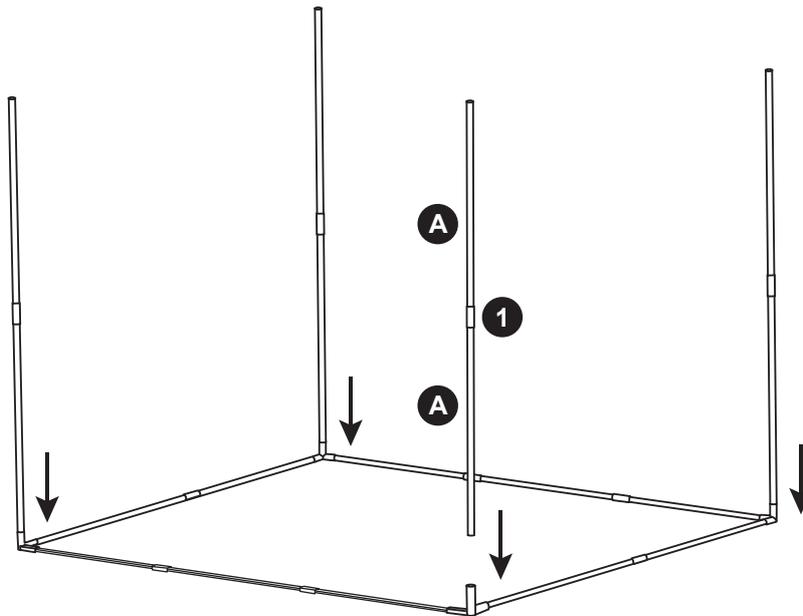





TINY LAND

5

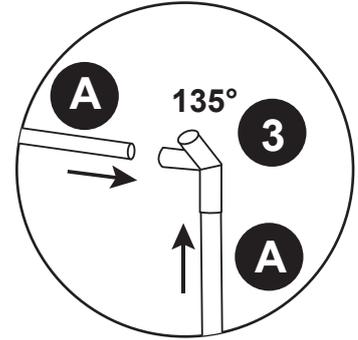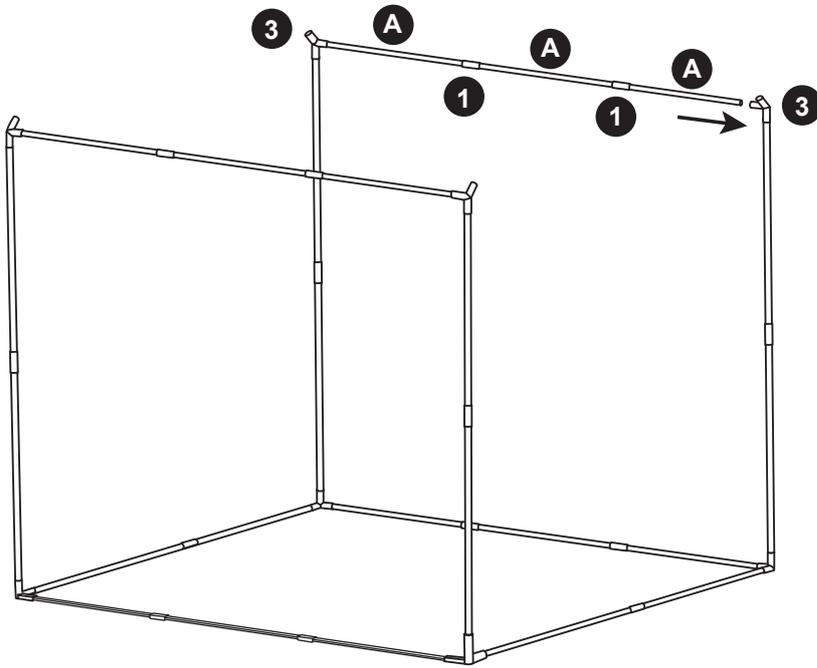


6

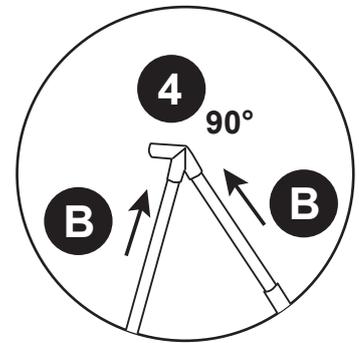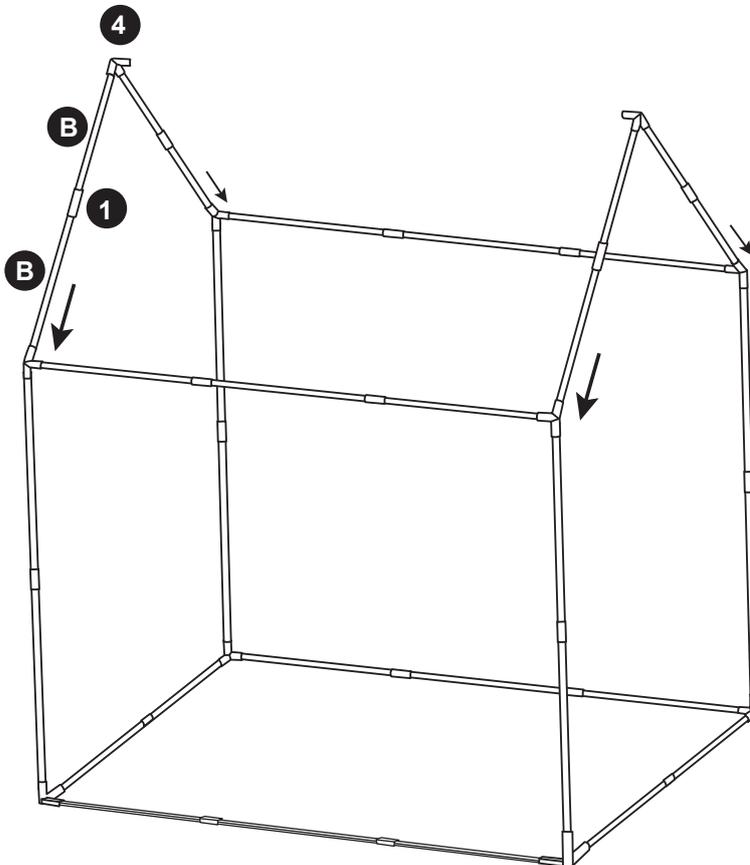





7

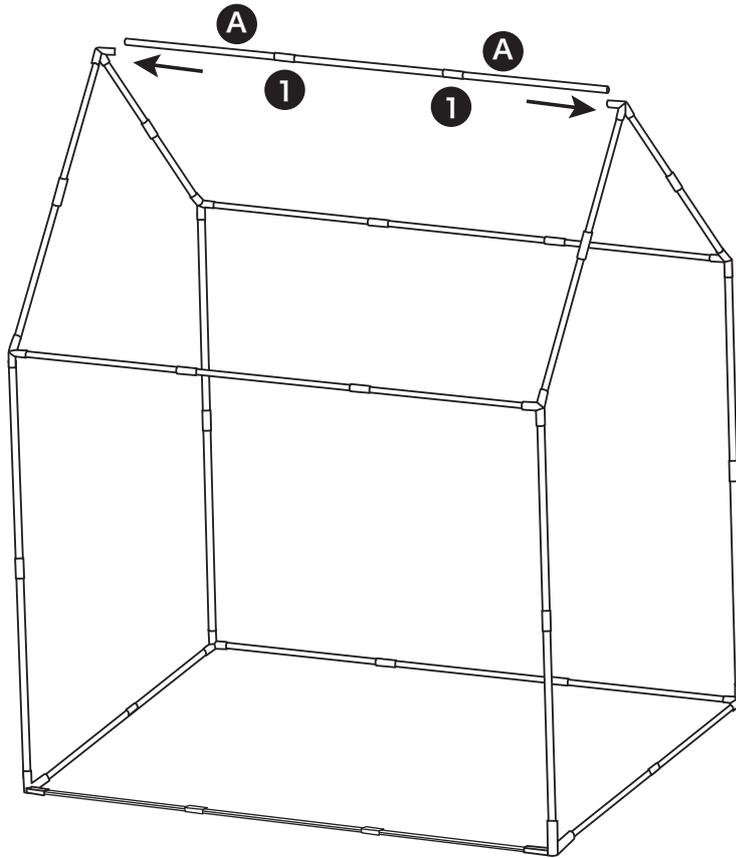

8

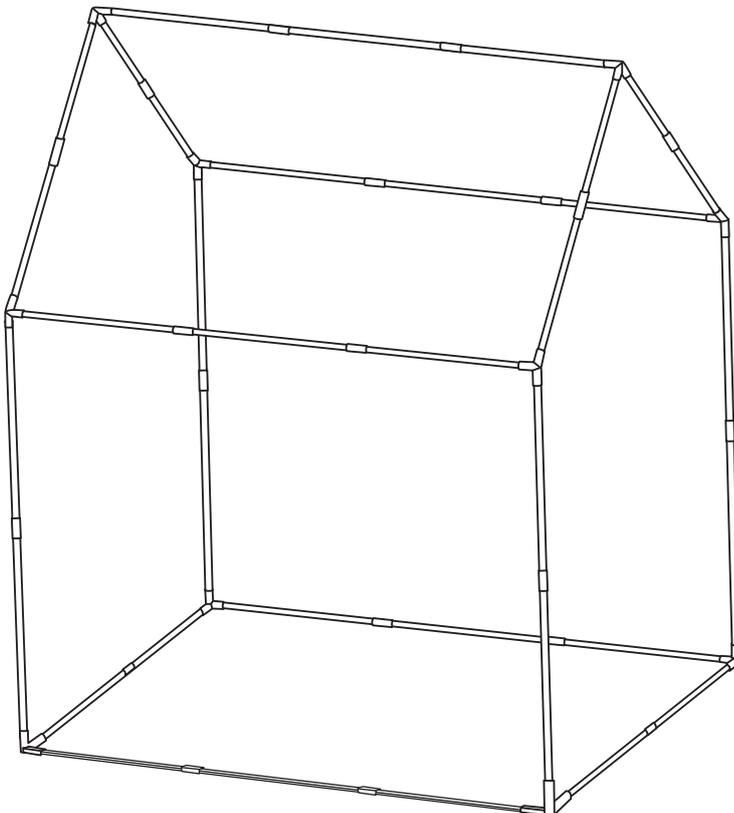



E

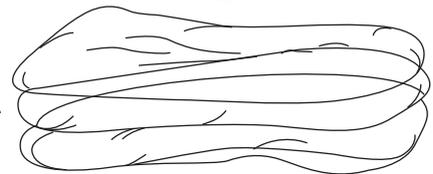

Follow the picture to fix the fabric cover **E** on the frame.





9

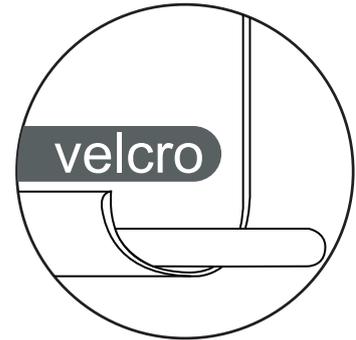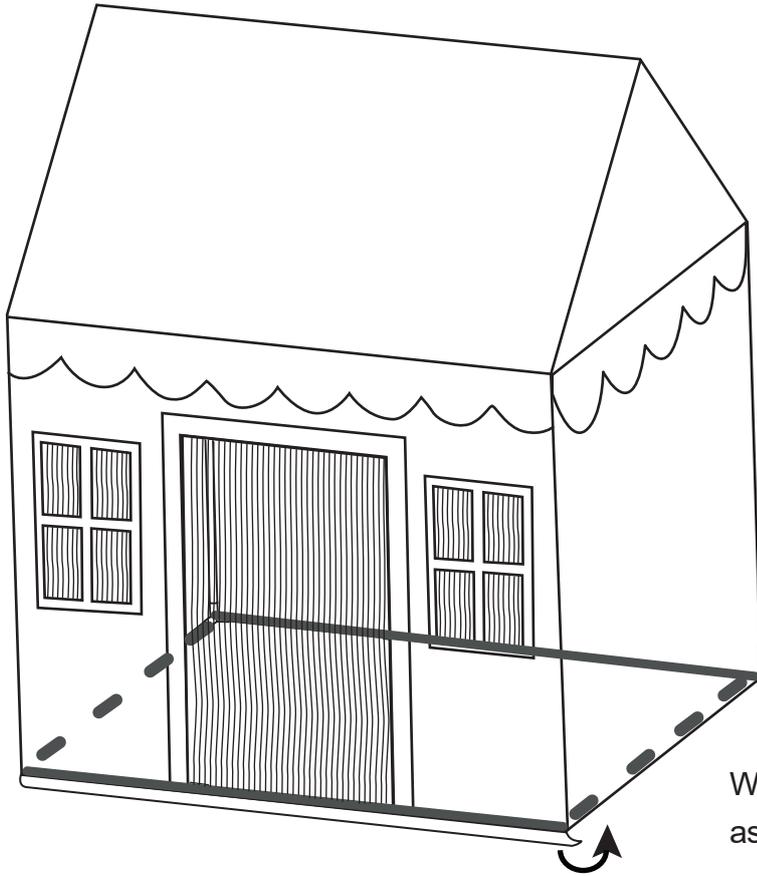

Wrap the bottom edge of the tent with Velcro as shown to secure the tent and frame.

10

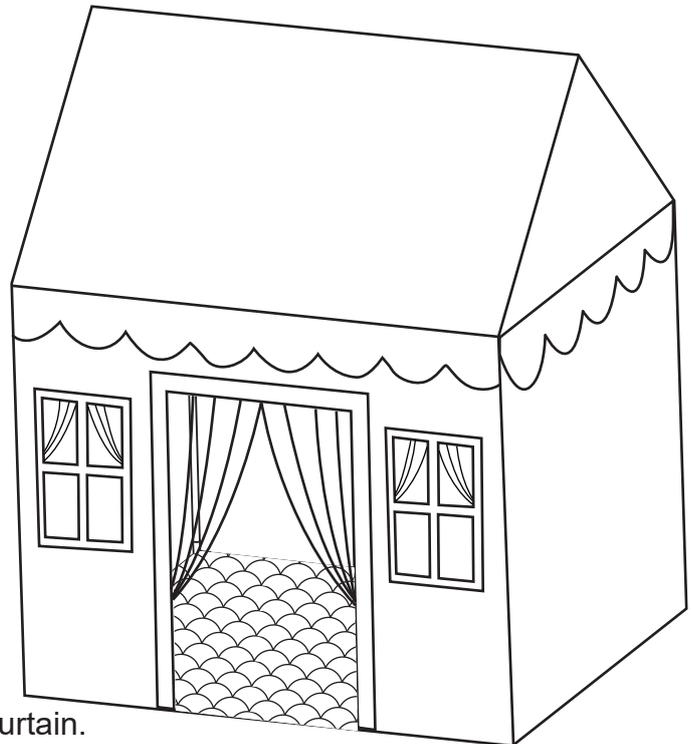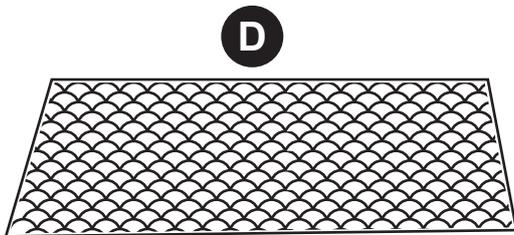

Put the cushion **D** inside the tent and tie the curtain.
As shown in the picture, the assembly is now complete.