 


Keenhot

USER MANUAL

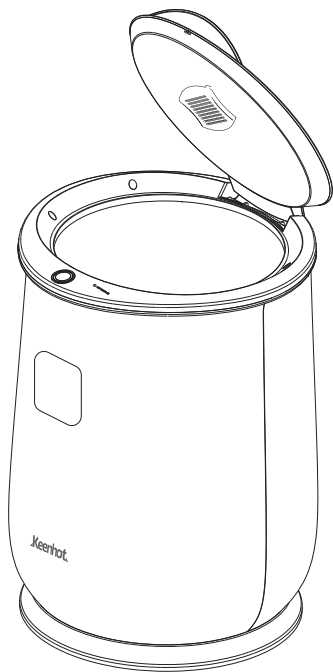

Bucket Towel & Blanket Warmer (CL18)

MAKE EVERY DAY A SPA DAY

CONTENTS

PAGE

Caution	2
Important Safety Instructions	2
Warning	3
FCC Information	4
Towel Warmer Package Details	5
Location of Parts and Controls	6
Set Up	6
Function Brief	7-8
Tips For Best Results	8
Using the Towel Warmer	9
Care and Maintenance	10
Specifications	10
Special Features and Benefits	10
Warranty	11

CAUTION

TO REDUCE THE RISK OF SERIOUS INJURY, PLEASE NOTE THAT THIS IS NOT A TOY. DO NOT ALLOW CHILDREN TO OPERATE OR PLAY NEAR THE TOWEL & BLANKET WARMER.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

IMPORTANT SAFETY INSTRUCTIONS

ALL OF THE SAFETY AND OPERATING INSTRUCTIONS SHOULD BE READ, ADHERED TO AND FOLLOWED BEFORE THE UNIT IS OPERATED.

•FOR HOUSEHOLD USE ONLY

•FOR ADULT USE ONLY

•FOR DRY FABRIC ITEMS ONLY

•SAVE THESE INSTRUCTIONS.

WARNING



WARNING: To reduce risk of fire, electric shock, or serious injury to persons when using the appliance, follow basic precautions including the following:

- Read all instructions before using the appliance.
- Always unplug the unit from the electrical outlet immediately after using.
- Do not use appliance for anything other than its intended use.
- Do not place or store the unit where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for a unit that has fallen into water. Unplug it immediately.
- Care should be taken so that objects do not fall into and/or liquids are not spilled onto the unit.
- This unit should never be left unattended when plugged in.
- Close supervision is necessary when this unit is used near children or disabled persons.
- Use this unit for its intended use as described in this manual.
- Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped in water.
- Keep cords away from heated surfaces. Do not wrap the cord around the exterior of the appliance or let the cord hang over a table or counter edge.
- Do not use outdoors.
- Do not alter the safety plug or use an extension cord with this device.
- Do not operate with a voltage converter.
- Do not touch hot surfaces.
- Do not use accessory attachments not recommended by the manufacturer as this may cause injuries.

•SAVE THESE INSTRUCTIONS.

FCC INFORMATION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received including interference that may cause undesired operation.


WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


TOWEL & BLANKET WARMER PACKAGE DETAILS

NO.	ACCESSORY NAME	QUANTITY
1	Bucket-Style Towel & Blanket Warmer	1
2	Fragrant Disc	2

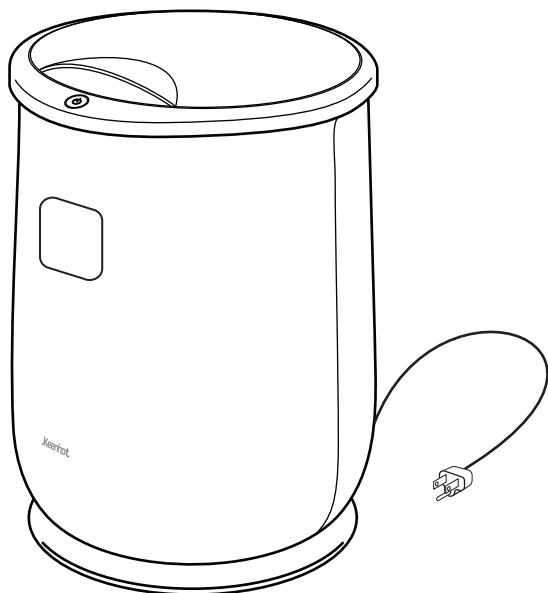

LOCATION OF PARTS AND CONTROLS

NO	PART NAME
1	On/Off Button
2	LED Ring
3	Hot Surface Indicator
4	Lid
5	Handle
6	Power Cord
7	Liquid Crystal Display Screen

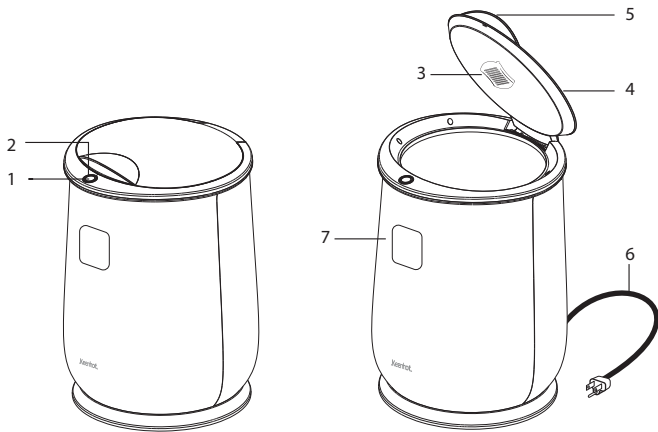

SET UP

- 1.Open the Lid and remove any packaging contents.
 - 2.Place the Towel Warmer on a dry, level, hard surface.
 3. Insert Plug into a standard outlet.(Please refer to the Specifications on Page 8)
- *NOTE: This Towel & Blanket Warmer has a 3-prong grounding plug. To reduce the risk of electric shock, plug the power cord into a grounded (earthed) electrical outlet that is easily accessible.**

FUNCTION BRIEF

1. Button Control

Power Button- Short press to switch to turn on or off firstly.

Power Button- Long press(2s) to switch to Timer Selection, then Short press 15-30-45-60min to set up your heating time. The default timing of heating is 60 minutes if you donot switch to Timer Selection.

2. Preheating Status Indication On LCD Screen

-Real Time Temperature Display: When it begins heating, the liquid crystal display will also show the real-time temperature of the inner surface in fahrenheit.

-Remained Heating Time Display: When it begins heating, the liquid crystal display will show a countdown to the corresponding heating time.

-Hot Surface Reminder Display

When the temperature of the Interior Surface reaches 115°F, the "Hot Surface " turns to Green. (Hot to touch)

When the temperature of the Interior Surface reaches 160°F, the "Hot Surface " turns to Yellow. (Unsafe to touch)

When the temperature of the Interior Surface reaches 195°F, the "Hot Surface " turns to Red. (Do NOT touch)

3. Heating System Control

After turning on and starting heat, the warmer heats rapidly in 1 minute.

When the temperature is increased to 270°F, it turns to heat preservation for inner towels before timer expiring.

After the timer expires, cut off the heating power.

After the heating cycle is completed, the INTERIOR SURFACE of the Towel & Blanket Warmer will remain dangerous to touch until the "HOT SURFACE" turns off.

4.Buzzer Indication

The Buzzer will continuously sound 3 times to remind you that the heating cycle is completed.

After the LCD screen flashes for 30 seconds, then the time indicator, temperature indicator, and power indicator are off;


"HOT SURFACE" indicator continues to display, when the temperature of the Interior Surface is below 195°F, the "Hot Surface " turns to yellow, when below160°F, it turns to green, when below 115°F, the "Hot Surface " display, the bucket towel warmer turns to a state of standby.

5. Fragrant DISC Instructions

This fragrance disc additionally design is for some users who like to use aroma- therapy tablets or essential oils when warming towels.

PS: Essential oils are not included with the product.

1. Remove the aromatherapy tablet from its sealed plastic bag.
2. Slide it into the Fragrance Disc Holder located on the underside of the lid.

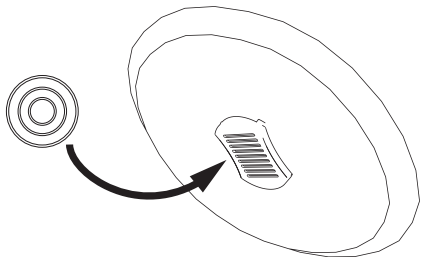

-The Fragrance Disc is an innovative air freshener for your home, which also effectively eliminates odors.

-Fragrant is a breakthrough in the home fragrance world! Prepare fragrant disc and use with this product will bring you better enjoy experience.

TIPS FOR BEST RESULTS

1. Use cotton or cotton blend towels or fabrics.
 2. For fast and even heating, loosely pile 1 towel into the Towel & Blanket Warmer. Tightly rolled or folded towels will take longer to heat thoroughly. Two towels will take longer to heat than one.
 3. Use only with DRY fabrics. Note: Do NOT use with damp or wet articles.
 4. Avoid using delicate fabrics that cannot withstand high heat. Any fabric indicating that a cool iron must be used may not be able to withstand the heat of the towel warmer, resulting in damage to the fabric and the Towel & Blanket Warmer.
 5. Once the heating cycle has begun, keep the lid closed. This will prevent heat from escaping. Opening the lid mid-cycle may result in slower heating times.
- *Note: Condensation on the lid and interior of the unit is normal.

USING THE TOWEL & BLANKET WARMER

The Towel & Blanket Warmer can comfortably warm up two large cotton bath towels or a personal throw blanket.

1. Insert the power cord into an electrical outlet.

2. Open the LID and place ONLY DRY towel(s) or blanket inside.

**NOTE: Placing damp or wet towels inside the towel warmer can damage the unit and pose serious safety risks.*

3. Close the LID. (The fragrance disc is additionally designed for some users who like to use aromatherapy tablets or essential oils when warming towels.)

4. Short press the ON/OFF BUTTON, the LCD screen will flash, Long press(2s) to switch to Timer Selection, then Short press 15-30-45-60min to set up your heating time within 5s. The default timing of heating is 60 minutes if you do not switch to Timer Selection.

5. When the temperature of the INTERIOR SURFACE reaches 115°F, the "Hot Surface " indicator turns to Green.

When it reaches 160°F, the "Hot Surface " turns to Yellow. (Unsafe to touch)

When it reaches 195°F, the "Hot Surface " turns to Red. (Do NOT touch)

6. 15 minutes is typically sufficient for heating 2 bath towels.

**Note: The Towel Warmer could reach approximately 270°F / 130°C and remain hot for the duration of the heating cycle.*

7. Open LID to remove towel(s) or blanket.

**Note: To avoid damage to the unit, gently raise the lid when removing items.*

8. Short Press ON/OFF BUTTON at any time to stop or start the heating cycle.

9. The unit will automatically turn off after 60 minutes.

10. After the heating cycle is complete, the INTERIOR SURFACE of the Towel & Blanket Warmer will remain dangerous to touch until the HOT SURFACE INDICATOR turns off.

CARE AND MAINTENANCE


REMOVE THE POWER CORD FROM THE ELECTRICAL OUTLET BEFORE CLEANING.
WIPE WITH A DRY CLOTH ONLY WHEN UNIT IS COOL TO THE TOUCH.

SPECIFICATIONS

Specifications	North America	European	UK	Japan
Rated Voltage	120V AC	230V AC	230V AC	100V AC
Frequency	60Hz	50/60Hz	50Hz	50/60Hz
Wattage Max	450W	400W	450W	330W
Weight	3.06KG (6.73 lbs)	3.06KG (6.73 lbs)	3.06KG (6.73 lbs)	3.06KG (6.73 lbs)
Dimension	12.2"x 12.2"x 18.6"	12.2"x 12.2"x 18.6"	12.2"x 12.2"x 18.6"	12.2"x 12.2"x 18.6"

SPECIAL FEATURES & BENEFITS

- Generous cavity has the capacity to hold 2 large bath towels or personal throw blanket.
- Simple, single-touch control provides you with up to 60 minutes warming.
- Hinged lid keeps both hands free when filling and emptying the Towel & Blanket Warmer.
- Double walled insulated lid keeps heat in while staying cool to the touch.

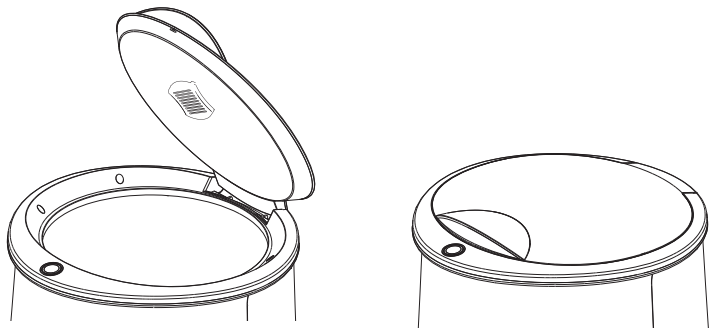

WARRANTY

ONE YEAR LIMITED WARRANTY

Congratulations on your purchase of the Single Touch Towel & Blanket Warmer! This product is warranted to be free from defects in materials and workmanship under normal use and service for a period of one year from the date of purchase with the original receipt.

The manufacturer's obligation shall be limited to replacing a defective product with the same or similar product. This warranty shall not apply to damage from accidents, abuse, misuse, normal wear and tear or abusive handling.