 




Keen innovations ray your life

USER MANUAL

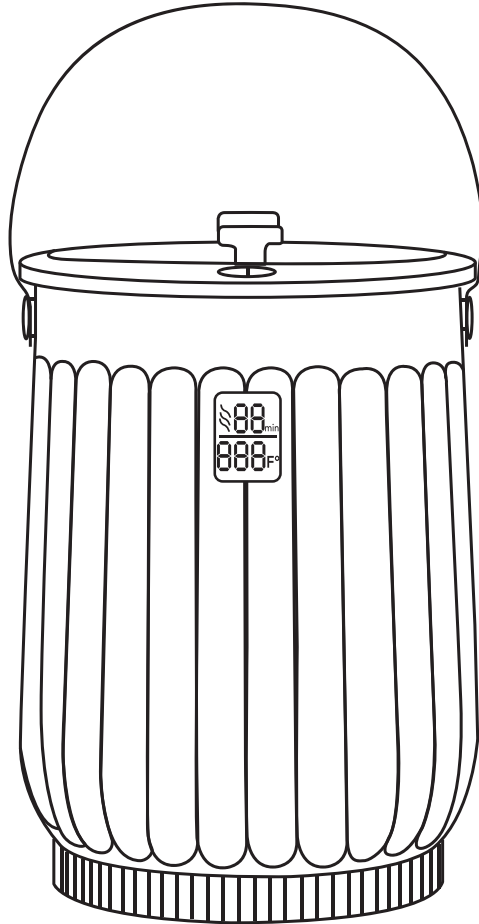

Towel Warmer Bucket
Model: CL27

1. Ultra Large Capacity 20L
2. Inner Fragrance Pads Holder
3. Built-in Timer for 15/30/45/60 Minutes Heating
4. LED Digital Screen for Heating Time and Temperature
5. Child-Safety Lock

CONTENTS	PAGE
PRECAUTIONS	3
SAFETY WARNING	4
PACKAGE DETAILS	4
PARTS INTRODUCTION	5
SETTING UP	6
FUNCTION BRIEF	6
FRAGRANCE DISC INSTRUCTION	7
WARM TIPS	7
SPECIFICATIONS	8
WARRANTY	8

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

All of the safety and operating instructions should be read, adhered to and followed before the unit is operated.

- FOR HOUSEHOLD USE ONLY
- FOR ADULT USE ONLY
- FOR DRY FABRIC ITEMS ONLY
- SAVE THESE INSTRUCTIONS

PRECAUTIONS

TO REDUCE THE RISK OF SERIOUS INJURY, PLEASE NOTE THAT THIS IS NOT A TOY. DO NOT ALLOW CHILDREN TO OPERATE OR PLAY NEAR THE TOWEL WARMER.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.



The lightning flash with an arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of a sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the product.

SAFETY WARNING



To reduce the risks of electric shock or serious injury to persons when using the appliance, please follow basic precautions including reading all instructions before using the appliance.


- Unplug the unit from the electrical outlet when you no longer use it.
- Do not use the unit for anything other than its intended use.
- Do not place the unit in or drop into water or other liquid. Protect it from any water splashing.
- Close supervision is necessary when this unit is used near children or disabled persons.
- Never operate this unit if it has a damaged cord or plug, or if it has been dropped, damaged , or dropped in water.
- Keep cords away from heated surfaces. Do not wrap the cord around the exterior of the appliance or let the cord hang over a table or counter edge.
- Do not alter the safety plug or use an extension cord with this device.
- Do not operate with a voltage converter.
- Do not touch hot surfaces.
- Do not use accessory attachments not recommended by the manufacturer as this may cause injuries.

PACKAGE DETAILS

NO.	ACCESSORY NAME	QUANTITY
1	Towel Warmer	1
2	User Manual	1

PARTS INTRODUCTION

NO.	PART NAME
1	On/Off Button & Timer Button
2	Indicator Light
3	Time Indicator
4	Child Safety Lock
5	Handle
6	Lid
7	Fragrant Disc Holder
8	Liquid Crystal Display Screen
9	Power Cord

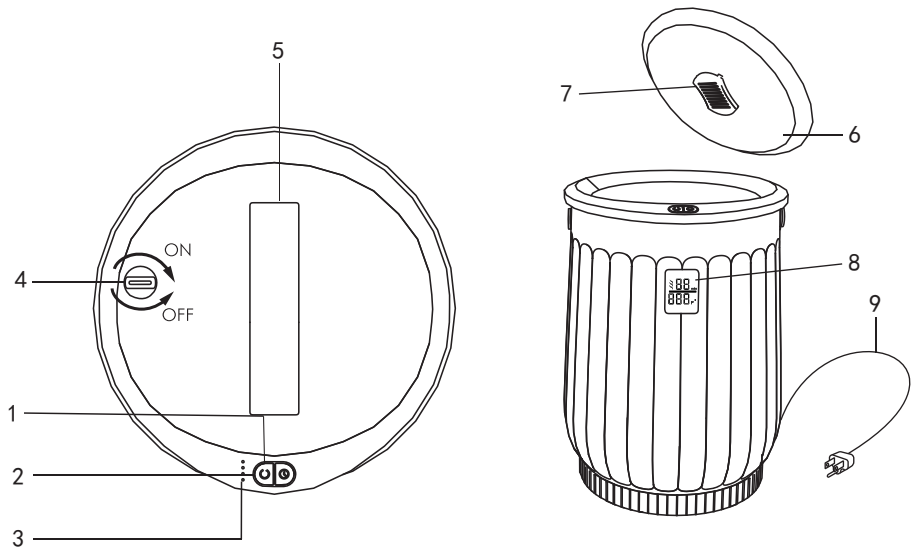

For the safety of your children, please turn on the child lock when using it. Turn left to open, turn right to lock. Double check if it is locked again when heating up, Keep the towel warmer away from your kids, children or baby.

SETTING UP

1. Open the Lid and remove any packaging contents.
2. Place the Towel Warmer on a dry, level, hard surface.
3. Insert Plug into a standard 20V outlet.

FUNCTION BRIEF

1. Button Control

⏻ **Power Button** - Short press to turn on or off.

⌚ **Timer Button** - Short press to switch to 15-30-45-60 minutes, the default timing of heating is 15 minutes.

2. Preheating Status Indication

3. After you turn on the power button, and when the temperature is lower than 140°F, the LED indicator will flash; When the temperature is above 140°F, the LED indicator light will stay red, which means the interior surface is too hot and unsafe to touch.

4. Heating Time Control

Press the Power Button, the towel warmer will start to heat up. You can control the timing of heat for 15/30/45/60mins pressing the timer button. The default time of heat is 15 minutes. At this mode, the temperature inside will rise up to 268°F in 7 minutes, and keep at about 200°F-248°F within 15 minutes. After the timer expires, please turn off the towel warmer.

When the timing mode is at 30/45/60 minutes, after 15-minute heating, the towel warmer will enter into the heat preservation state and the temperature will be kept at 200°F-248°F until the timer expires.

5. Heating Time Display

When you set up a heating time, the liquid crystal display will show a countdown to the corresponding heating time. After the timer expires, the heating stops and the time displays 00; After the time shows 00, the LED will be automatically turned off after 30 minutes to save power;

6. Heating Temperature Display

When you set up a heating time, the liquid crystal display will also show the real-time temperature of the inner surface in fahrenheit.

7. LED Indication

Timing time indicator

By default, the indicator light is on for 15 minutes after power-on. Press the timer button to switch the time control.

Towel bucket status indicator

Green: powered on

Flashing green light: heating

The red light is on: the inner temperature of the towel bucket > 140°F
the HOT SURFACE INDICATOR turns off.

*After the heating cycle is complete, the INTERIOR SURFACE of the towel warmer will remain dangerous to touch until the HOT SURFACE INDICATOR turns off.


*These data are experimental data, and the results may be different under different temperatures.

FRAGRANT DISC INSTRUCTION

This fragrance disc additionally designed is for some users who like to use aromatherapy tablets or essential oils when warming towels.

PS: Essential oils are not included in the product.

1. Remove the aromatherapy tablet from its sealed plastic bag.
2. Slide it into the Fragrance Disc Holder located on the underside of the lid.

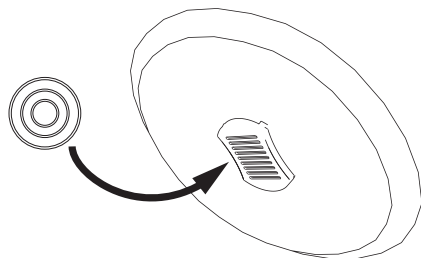

- The Fragrance Disc is an innovative air freshener for your home, which also effectively eliminates odors.
- The fragrance disc is a breakthrough in the fragrant home world! Prepare a fragrance disc and use it with this product will bring you a better enjoyable experience.

WARM TIPS

1. Use only cotton or cotton blend towels.
2. For fast and even heating, loosely pile one towel into the Towel & Blanket Warmer. Tightly rolled or folded towels will take longer to heat thoroughly. Two towels will take longer to heat than one.
3. Use only with DRY fabrics. Note: Do NOT use with damp or wet fabrics.
4. Avoid using delicate fabrics that cannot withstand high heat. Any fabric indicating that a cool iron must be used may not be able to withstand the heat of the Towel & Blanket Warmer, resulting in damage to the fabric and the product.
5. Keep the lid closed once heating has started, this will prevent heat escaping. Opening the lid may cause longer heating time.
6. The Fragrance Disc can be recycled. You can add essential oil to the disc after its original fragrance wears off. Usually the fragrance lasts for 10-15 days when used with heat and naturally evaporates for 30 days. (This data is for reference only and is determined by actual usage).
7. Unplug the power cord before cleaning. Wipe with dry fabrics.
8. Put the unit in a dry place for storage. Do not place this unit in a humid environment for a long time to avoid damage.

NOTE: CONDENSATION ON THE LID AND INTERIOR OF THE PRODUCT IS NORMAL.

SPECIFICATIONS

SPECIFICATIONS	North America
Rated Voltage	120V AC
Frequency	60HZ
Wattage Max	450W
Weight	4.8kg / (10.6lbs)
Dimensions	19"(h) × 13"(w) × 13"(d)

NOTE: THIS TOWEL WARMER CAN ONLY BE USED IN NORTH AMERICA AND OTHER COUNTRIES WHICH HAVE THE SAME SPECIFICATIONS.

WARRANTY

ONE-YEAR LIMITED WARRANTY

Congratulations on your purchase of the Towel Warmer! This unit is warranted to be free from defects in materials and workmanship under normal use and service for a period of one year from the date of purchase with the original receipt. The manufacturer's obligation shall be limited to replacing a defective product with the same or similar product. This warranty shall not apply to damage from accidents, abuse, misuse, normal wear and tear or abusive handling.



Keen innovations ray your life

Any question please feel free to contact us via **service@keenray.com**