 


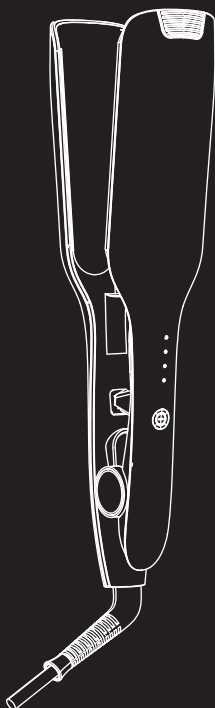

MiroPure

HAIR WAYER IRON 803A

USER MANUAL



I Love Me

✉ support@miropureshop.com

☎ 1-855-666-5111



NOTE

1. DO NOT place the device near water to prevent it getting wet.
2. Always unplug the unit after use.
3. Keep your skin away from hot surfaces.

SAFETY INSTRUCTIONS

To ensure proper operation of this appliance, please read this instruction manual carefully before use. Save this manual for further reference. For help or any additional product information, please contact MiroPure customer support.

support@miropureshop.com

ABOUT IONIC TECHNOLOGY:

The built-in ionic generator emits negative ions, negatively charged atoms and molecules that can interact with the molecular particles in your hair. They seal the hair cuticle and reduce frizziness, split ends and knotting, while increasing hair manageability, leaving hair silky and lustrous!

⚠ SAFETY WARNINGS:

- This appliance can be used by juniors aged from 15 years and above and persons lack of experience and knowledge if they have been given supervision or instruction concerning the safety use of the appliance and understand the hazards involved Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 15 years and supervised.
- Keep away from water.
- Unplug the device immediately after use in order to reduce the risk of death in case of an electrical shock.
- Do not put the appliance in a place where it can slide into a sink or a bathtub and do not keep the device in such a place.
- Do not use the appliance while you are taking a shower.
- Do not immerse or drop it into water or other liquids. If an appliance falls into water, unplug immediately at the power outlet.

- Never leave the hair waver iron unattended in order to reduce the risk of burn, electric shock, fire or damage.
- Close observation is required when the appliance is in use to prevent usage by a child or other persons whom it is not intended for. Do not let children to play with this hair waver iron appliance.
- If the cable or plug of the hair waver iron is damaged or not working properly or dropped into water, stop using it.

If the cable or plug of this appliance is damaged, it must be changed by the manufacturer or similarly qualified persons in order to avoid a hazard.

 
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

- Keep the electricity cable away from hot surfaces.
- Never operate this appliance if it has a damaged cord or plug. If it is not working properly or if it has been dropped or damaged, or dropped into water, return the appliance to a service center for examination and repair.
- Do not place the heated unit directly on any surface while it is hot or plugged in.
- Do not use on people while they are sleeping.
- Do not use on pets.
- Do not use in open areas, or places where sprays are used or oxygen is given.
- The hair waver iron's heater can get extremely hot during use. Do not touch the hot area with exposed skin.
- Only use this appliance on dry, natural hair without any flammable hair products.
- This appliance is not suitable for artificial hair.
- This appliance is not intended for commercial or salon use.

POWER CORD SAFETY TIPS:

- Never pull or yank the cord of the appliance and do not use an extension cord with this appliance.
- Insert plug grasp it firmly and guide it into outlet.
- To disconnect the appliance, grasp plug and remove it from outlet.
- Before each use inspect the power cord for cuts and abrasion marks. If any are found this indicates that the appliance should be served and the line cord replaced.
- Never wrap the cord tightly around the appliance as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.
- DO NOT OPERATE THE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF THE APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

PRODUCT DIAGRAM

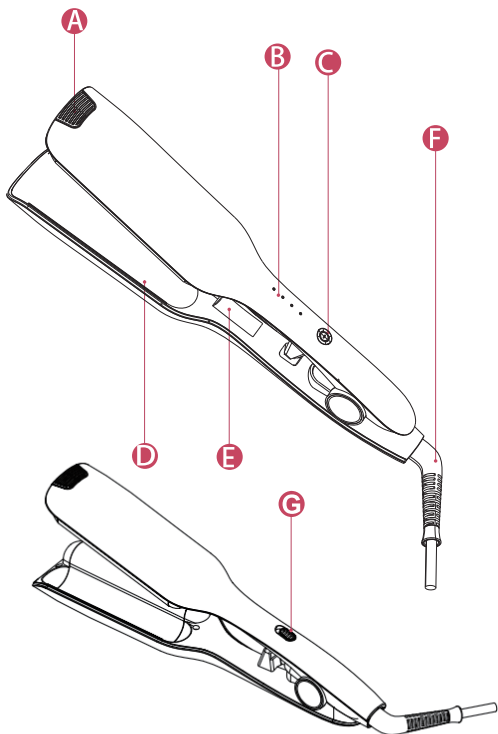

- A. Cool tips
- B. Indicator light
- C. Power /setting button
- D. Heating panel
- E. Anion emitters
- F. 360 degree swivel power cord
- G. Lock switch

SPECIFICATIONS:

Dual Voltage	100-240V -, 50-60HZ
Heater	PTC
Heat Setting	320 °F/ 360 °F/ 400°F / 430 °F (160°C/180°C/200°C/220°C)
Max Temperature	220°C
Auto Shut-Off	60 +/- 2 Min
Barrel Size	1 inch

OPERATION INSTRUCTIONS:

PLEASE USE IT ON DRY HAIR ONLY.

- Step 1. Insert the power plug into a wall socket to enter standby mode, press the lock switch to release the heating panel.
- Step 2. Long press the button " ⏻ ", the heater begins to warm up, negative ion emitters start to work also.

The recommended temperature for different types of hair is shown in the following table:

Hair types	Appropriate temperature
Extra fine hair	320 °F(160°C)
Fine hair	360 °F (180°C)
Medium hair	400°F(200°C)
Coarse hair	430 °F(220°C)

 
Press power button again to adjust temperature according to your hair types. Default temperature is 320 °F(160°C).

- Step 3. When the waver is heating up, the temperature setting indicator will keep flashing until the setted temperature is reached.

Once the temperature setting indicator stays unchanged, the device is ready to use for hair styling. Please hold the device handle and keep a safe distance from exposed skin and eyes.

- Step 4. Hold certain parts of your hair with clips (thickness less than 100mm) from top, middle, back, front and sides in order to make hair styling operation easier.
- Step 5. First wave the lower layers of your hair and then pass to the upper layers. Take a small part of your hair, disperse it in the middle of the device and then press tight. Hold the hair waver in one of your hands and the other hand press the cool tips tight, wait for 5 ~ 8 seconds, then change the palce to make styling. Do not hold the hair waver in one place for more than 10 seconds. Make sure that you are holding the hair waver by its handle. Repeat this operation until your hair is waved as desired.
- Step 6. Once the hair styling is completed, long press the power button to power off the device. Then unplug it and lock the device to let it down before storage.


OPERATION GUIDE

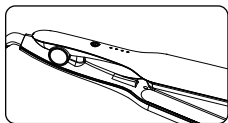


- 1 Turn on the device and set the suitable temperature.



 - 2 Grab a proper amount of hair and use the curling iron to clamp the place you want to wave.

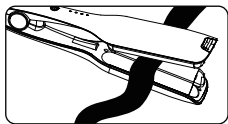

 - 3 After clamping for 5-8 seconds, open the curling iron to complete a styling.

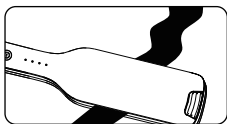

- 4 Repeat 3rd operation until your hair is waved as desired.

PRECAUTIONS FOR USE

- When using this comb, please ensure that your hair is dry, or you will not be able to achieve the styling effect or the effect is not ideal.
- After each using, wait until the heating plate be cool before storage.
- The storage of the power cord, do not wrap the power cord in the product.
- If there is a stain on the surface of the product, use a wet towel with detergent to wipe, do not wash it with water.
- Do not use this product for any other purpose than hair styling.

⚠ ATTENTION

- The hair waver has an automatic turning off feature for security. The hair waver iron turns off after a usage of 60 minutes. If you want to use it again, you can press the power button to turn on the appliance.
- First time usage of this appliance may occasionally cause a slight burning smell or very light smoke, which is caused by the small amount of residual oil on the PTC heater burning off when heated. This is normal and safe to use and should only last a few seconds.
- It is important to set the appropriate working temperature for your hair before usage in order to prevent your hair getting damaged.
- When the PTC heater is on, the appliance can get extremely hot, make sure you keep it away from eyes nose hands neck and facial areas.

MAINTENANCE AND CLEANING:

- Unplug the appliance and allow it to cool.
- Wipe the surfaces with a damp cloth to clean
- Do not use harsh or abrasive cleaning agents or solvents.
- Store the appliance in cool, dry place.

SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided.

Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded your statutory rights are not affected.

Warranty period: 365 days



To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.

This device complies with part 15 of the FCC rules.



MiroPure

✉ support@miropureshop.com

☎ 1-855-666-5111



RoHS
Made in China



Made in China