

E-300L manual

材质：封面200g 双铜 覆亚膜 内页128g双铜

尺寸：长12cm-宽12cm

AIR PURIFIER

USER MANUAL



True HEPA Filter




3 - Stage
Filtration System



Low Noise Level



Child Lock

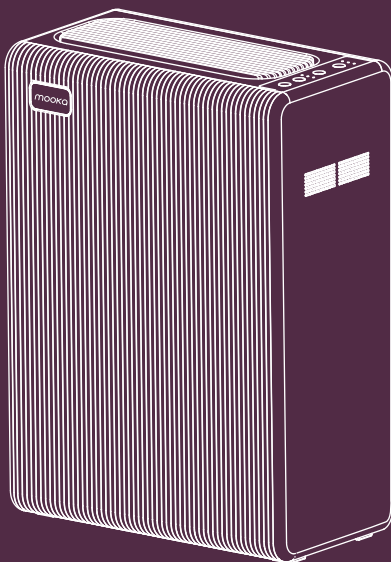

Model: E-300L

CUSTOMER SERVICE

Our customer service team is standing by to assist you if you have any questions or concerns.



www.mookashops.com



support@mookashops.com



1-855-666-9955

CONTENT

ATTENTION	01
PRODUCT TECHNICAL FEATURES	02
PRODUCT OVERVIEW	03
SPECIFICATIONS	05
BEFORE USE	06
USING THE APPLIANCE	07
FILTER REPLACEMENT	11
MAINTENANCE	12
TROUBLESHOOTING	13

1 ATTENTION

Please follow the further recommendations to avoid personal injury or product damage.

WARNING

- a) Do not let water, other liquid, or flammable detergent enter the appliance to avoid electric shock or a fire hazard.
- b) Do not clean the appliance with water, any other liquid, or a flammable detergent to avoid electric shock or a fire hazard.
- c) Do not insert your fingers or objects into the air inlet/outlet to prevent physical injury or damage to the appliance.
- d) Do not connect or disconnect the power with wet hands.
- e) Before cleaning or maintenance, please make sure the cord is disconnected.

ATTENTION


- a) Please remove the new filter protective film before installation.
- b) Ensure the filter and its cover are installed properly before using the appliance.
- c) Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect the appliance. Other electric appliances used simultaneously may cause the socket to be hot or cause the fire.
- d) This appliance is not intended for proper ventilation use, or use as a fan while cooking.

PRODUCT TECHNICAL FEATURES 2


PURIFICATION TECHNOLOGIES

- ◆ 3 Speed Settings & 3 Timer Settings.
- ◆ Smart Design with Child Lock Function

3 STAGE FILTER

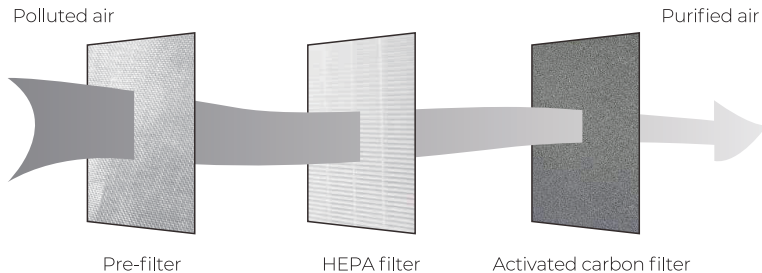


3 PRODUCT OVERVIEW

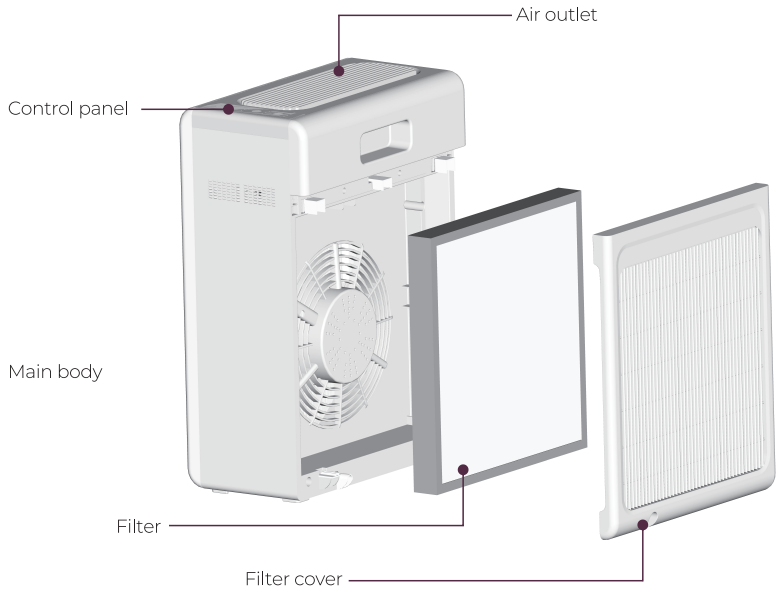

PRODUCT OVERVIEW 4

◆ CONTROL PANEL

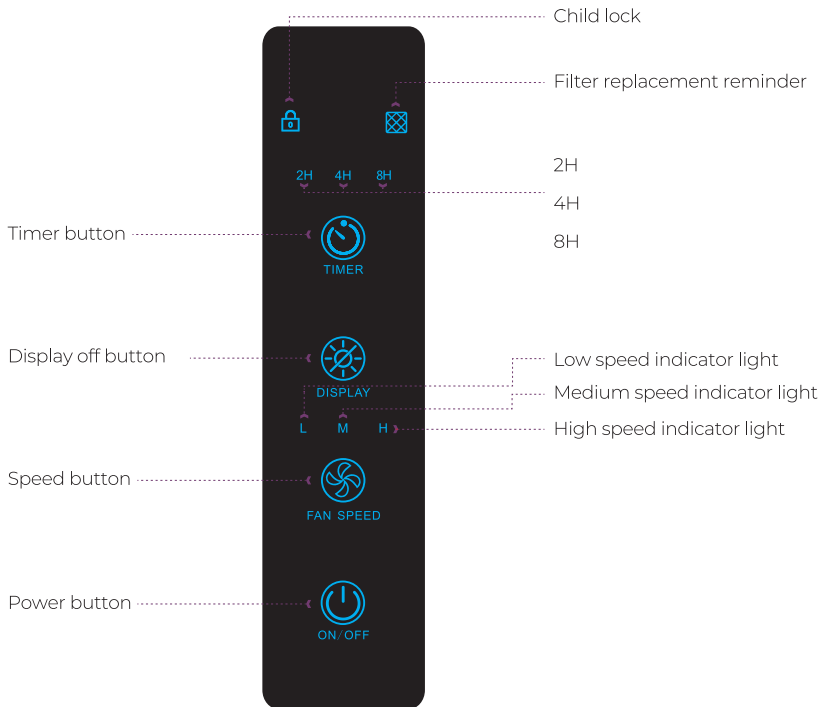

5 SPECIFICATIONS

Model No.:	E-300L
Body Dimensions:	295*165*410(mm)
Filter Dimensions:	277*276*30(mm)
Net Weight:	4.2Kg
Input:	120V/60Hz
Power:	52W
Filter Lifespan:	3-6 months

GETTING STARTED


- ◆ Do not block the air inlet and outlet, e.g. by placing items on the air outlet or in front of the air inlet closer than 30cm.
- ◆ Make sure that foreign objects do not fall into the air purifier through the air outlet.
- ◆ Do not use the appliance in wet areas or in surroundings that are high ambient temperature.

EXTERNAL POWER

- ◆ **AC Voltage: 120V/60Hz**

Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect the appliance.

Please do not connect the appliance to improper voltage.

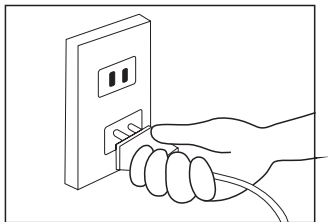

7 USING THE APPLIANCE

POWER SETTING

◆ Power ON/OFF

Please insert the plug into the power socket firmly, the indicator light will lit for 1 second for self-checking. Air purifier enters standby mode by default. Turn the air purifier on by pressing the "Power" button. The filtration speed is adjusted to the lowest fan speed ("L" fan speed indicator lights up). Press the "Power" button again to switch the appliance off, the air purifier enters standby mode.






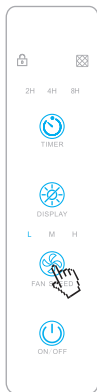
Standby Mode Power-on state

USING THE APPLIANCE 8

FAN SPEED

◆ Briefly press the "Fan Speed" button to set the required fan speed level. Press again to switch the fan speed level. Adjust the fan speed level according to the order depicted below.


Speed	Display
Low	 L
Medium	 M
High	 H



Low Speed



Medium Speed

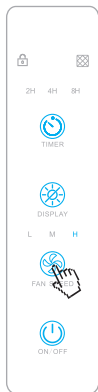

High Speed




9 USING THE APPLIANCE

LED DISPLAY

- ◆ Press the "Display" button to turn the display off.
- ◆ Press any other button except "Power" button to turn the display on.

TIMER

- ◆ Use the "Timer" button to set the appliance operating duration.
- Press the "Timer" button to pick the required duration of operating time (2, 4, or 8 hours). Air purifier shuts off automatically at the end of the selected period.

Timer	Display
2H	2H 
4H	4H 
8H	8H 
OFF	



Timer 2H



Timer 4H




Timer 8H

USING THE APPLIANCE 10

CHILD LOCK

- ◆ Press and hold the "Timer" button for 3 seconds to activate the child lock. When the child lock is on, none of buttons are responsive. Press and hold the "Timer" button for 3 seconds again to deactivate the child lock.

Press timing button for 3sec	Display
Turn ON child lock	
Turn OFF child lock	Child lock OFF

Remarks: Use the control lock to temporarily lock the control panel and deactivate the function buttons



Child lock OFF




Child lock ON

11 FILTER REPLACEMENT

FILTER


◆ The filter should be replaced every 3-6 months.

"  " indicator flashes when the filter replacement is needed.

After the filter has been replaced, press and hold the "  " button for 3 seconds to reset the filter lifetime counter.

◆ Removing the filter

1. Switch the appliance off and unplug it.
2. Open the filter cover.
3. Remove the filter.
4. Remove the new filter protective film before installation.
5. Install the new filter.
6. Install the filter cover.

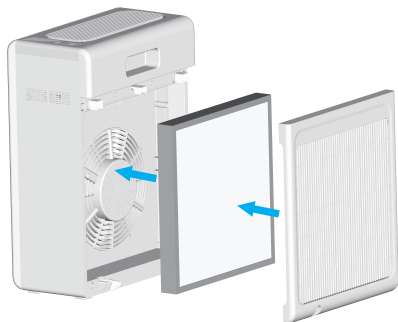

 **NOTE**



Unplug the appliance after use and before cleaning or carrying out maintenance.

- ◆ Wipe the surface of the appliance with a damp cloth, then wipe it dry.
- ◆ If the appliance is too dirty, neutral detergent can be used for cleaning, but please dilute the detergent before use.
- ◆ Never use flammable, abrasive, or aggressive cleaning agents such as bleach or alcohol which may cause distortion or discolor when cleaning.
- ◆ If the filter replacement indicator stays lit, the filter lifetime counter comes to the end, please replace the filter.
- ◆ After the filter replacement, press and hold the "Display" button for 3 seconds, the filter replacement indicator turns off.



13 TROUBLESHOOTING

- ◆ If the appliance works not properly please check the most common problems you could encounter at the table below.

PROBLEM	POSSIBLE SOLUTION
The appliance does not work	Please check if the appliance plugged in properly.
The odor cannot be removed	Ventilate the ambient environment, then turn on the appliance.
	Make sure that the filter is installed properly. Check if the filter needs to be replaced.
The appliance is too loud.	Check if the new filter protective film has been removed.
	Check if the filter needs to be replaced.

CUSTOMER SERVICE

Our customer service team is standing by to assist you if you have any questions or concerns.



www.mookashops.com



support@mookashops.com




1-855-666-9955

mooka

 www.mookashops.com

 support@mookashops.com

 1-855-666-9955



Made in China