

**DBPOWER**

G60



User Manual

JUMP STARTER



**NOTE**

1. DO NOT start any engines that exceed the maximum displacement the jump starter can bear.
2. DO NOT crank the engine for more than 3 seconds.
3. Allow the jump starter to cool down for at least 1 minute between each start attempt.
4. Please ensure the device is at least 50% charged before use.



[www.dbpowershop.com](http://www.dbpowershop.com)



[support@dbpowershop.com](mailto:support@dbpowershop.com)



1-855-888-5533

## A Big Thank You

We're thrilled that you have chosen to purchase the DBPOWER jump starter. At DBPOWER, we're committed to providing you with products that enhance your daily life. We also aim to give our customers excellent support. Should you have any questions or feedback about your new product, simply get in touch with our customer support team at 1-855-888-5533, or by email at [support@dbpowershop.com](mailto:support@dbpowershop.com)

Enjoy your new product!

## CONTENTS

Attention .....	02
Accessories .....	02
Specifications.....	03
At a glance .....	03
How to jump start your car.....	04
How to charge phones or tablets .....	06
How to use the LED light .....	07
How to recharge the device .....	07
Q&A .....	08

 
## ATTENTION

1. This device is suitable for All petrol engines and diesel engines up to 10L.  
Please don't attempt a vehicle with a higher engine capacity or it will cause serious damage to the device and could be dangerous to the user.
2. Don't crank the engine for more than 3 seconds. Allow the jump starter to cool down for at least 1 minute after each start.
3. Your jump starter will work best when it is fully charged. If less than 50% charged, it will not be able to start your engine.
4. Clear the dust on the electrodes of your car battery before jump starting.
5. If the instructions are followed correctly but your vehicle doesn't start instantly, please wait for 5-10 minutes and try again. But please don't make repeated attempts to jump start the engine without allowing time for the device to cool down.
6. Do not connect the positive and negative polarity clamps together when the device is powered on. A short circuit can cause electric shock and serious injury.
7. Disconnect the cables from the jump starter and car battery when not in use, remove the negative clamp from car battery terminal (or positive first for positive ground systems).
8. It is prohibited to charge the device immediately after a jump start. Please wait at least 30 minutes if you want to charge the device after a jump start.
9. To preserve lifespan, recharge the device at least once every 3 months.
10. Use original or certified cables.
11. Do not expose the jump starter to liquids. Do not disassemble.
12. Avoid dropping the device and exposing it to extreme temperatures.
13. The storage temperature shouldn't exceed 95°F(35°C) and operating temperature shouldn't exceed -4°F-140°F(-20°C-60°C), otherwise, the battery will expand.

## ACCESSORIES



1 x Intelligent Jumper Clamps



1 x USB Cable









1 x User Manual




1 x Storage Bag

## SPECIFICATIONS

  Capacity	88.8Wh
 Weight	709g/25oz
 Dimensions	8.7*3.5*1.6inches
 Input	Type-C In(Out)
 Output1	5V/9V/12V
 Output2	5V/2.1A
DC Output	12-16.8V/10A
Peak Current	4000A
Starting Current	2000A
Operating Temperature Range	-20°C-60°C/-4°F-140°F

## AT A GLANCE

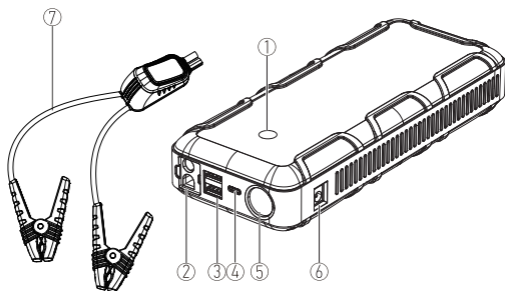

1. Power Button
2. Jump Start Output & Dust Plug
3. USB Output\*2
4. Type-C In(OUT): 5V/3A
5. LED Flashlight
6. DC Output
7. Jumper Clamps


## HOW TO JUMP START YOUR CAR

 **Important:**

Before attempting to jump-start a vehicle, please make sure you have turned off all of the power loads of the vehicle, including headlights, radio, air conditioning, etc.

**STEP 1:**


Press the power button on the Jump Starter. Please make sure the battery has at least 50% power before you try to jump-start your car. (The battery inside the jump starter needs to be recharged fully before initial use).

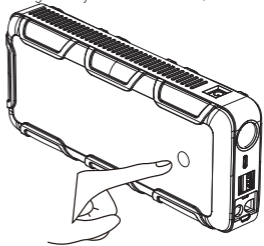

**STEP 2:**


Fully insert jumper cables into the jumper cable socket.

 (THE GREEN LIGHT IS BLINKING, which means the jumper cable is correctly connected to the jump starter.)

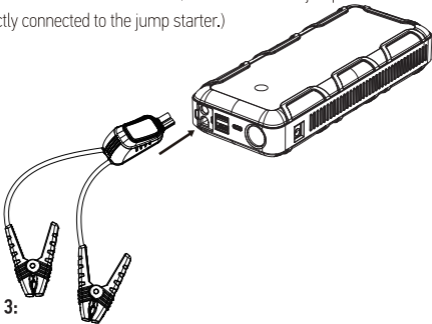

**STEP 3:**

 Connect the clamps to the vehicle battery. Red clamp is connected to the positive polarity (+), black clamp is connected to the negative polarity (-).

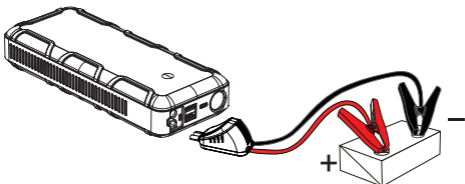



### THE GREEN LIGHT IS ALWAYS ON

 
All connections are right, try to start the engine. (If there is no operation within 30 seconds after the connection is successful, the current is turned off, the green light is flashing, the jump start function is invalid, please reconnect to the car battery.)

#### STEP 4:

Press the car start button or turn the ignition switch to the START position.

#### STEP 5:

After the car has been started, the green light is strobing, please remove the jumper cable. Remove clamps and pack away.

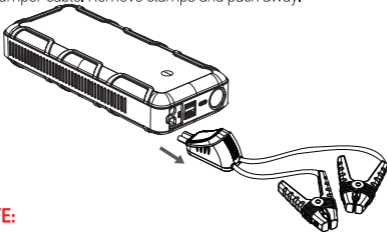

#### NOTE:

The jump starter has a built-in buzzer that will ring when a reverse polarity, over-temperature, over-circuit, and other improper connections are detected, which could be caused by the below reasons and please follow the behind actions:



- Jump starter power is low, please recharge.
- Reverse polarity connection, please reconnect correctly.
- The red and black clamps are short-circuited, please reconnect correctly. (It is strictly forbidden to short-circuit the positive and negative poles after the clamp is energized.)
- When the temperature of the jumper cable is high ( $\geq 65 \pm 5^\circ\text{C}$ ), waiting to cool down ( $\leq 55 \pm 5^\circ\text{C}$ ) before the next start.

**Disconnect the jump starter if the buzzer rings and connect again after the issue is resolved.**



 
## JUMPER CABLES INDICATOR LIGHT INSTRUCTIONS:

- Green Light Blinking: The Jumper cable connecting the jump starter is right, ready to connect the car.
- Green Light ON: Green Light All connection is right, start the engine.
- Green Light Flashing: The connection timed out, please reconnect to the positive and negative poles of the car.
- Green Light Strobing: The car has started, remove the jumper cable.
- Red Light ON with Beep Sound: The jumper cables are connected in error, please refer to the instructions on page 5 and try again.

## PRECAUTIONS:

1. Please connect the jumper cable correctly according to the requirements of the manual.
2. Do not jump start the car at high frequency continuously.
3. This jumper cable is not allowed to be heated or used near fire.
4. This jumper cable is not allowed to be put into water or disassembled or modified without authorization.
5. The jumper cable needs to be connected to the jump starter first, and then connected to the car battery for ignition to avoid misjudgment.
6. When the car is not connected to the battery, the cable clip does not support the reverse connection protection; if you remove the power cord from the car battery, do not connect it in reverse when starting the car.

## HOW TO CHARGE PHONES OR TABLETS

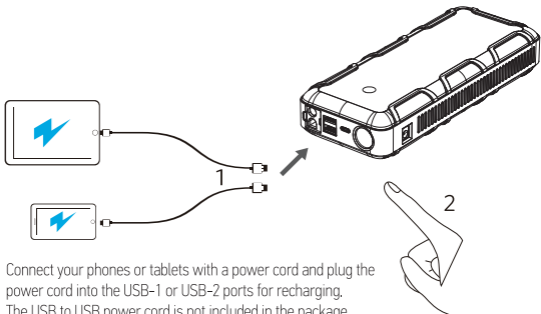


Connect your phones or tablets with a power cord and plug the power cord into the USB-1 or USB-2 ports for recharging. The USB to USB power cord is not included in the package.

Please note that "Output 1 and 'Output 2" ports cannot work while the Input port is used for recharging the jump starter.

## HOW TO USE THE LED LIGHT

 
1. Short press the power button to turn on the jump starter.

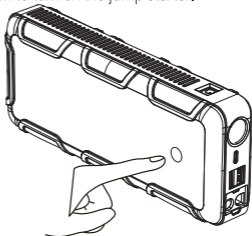

2. To turn on the flashlight, hold the power button for 2 seconds. You can then short-press the power button to switch flashlight modes (high/SOS/strobe).

3. To turn the flashlight off again, hold the power button for 2 seconds again.

## HOW TO RECHARGE THE DEVICE

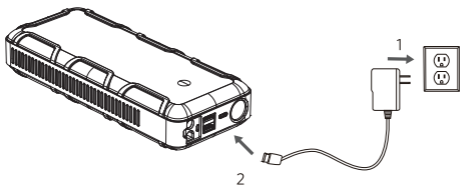 

**The wall plug adapter is not included.** Please use a universal charging adapter above 5V to charge the device. It is recommended to recharge the jump starter with the included charging cable.

**Please NOTE the type-c port can only be used as an input port rather than an output port.**

So the type-c port cannot charge the mobile phone or tablet.

## Q&A

### Question 1:

#### **My car is compatible with the device, but unable to start?**

The performance of the jump starter depends on many external factors, such as the age of the engine, weather conditions and remaining power. If you encounter being unable to start your car engine, we recommend you fully charge the device, clear off any dust or dirt from the electrodes of the car battery, and then try again. But remember to allow the device to cool for at least 60 seconds after each attempt. Don't make repeated attempts to start your vehicle.

### Question 2:

#### **Why is the battery percentage dropping rapidly when upon receiving the jump starter?**


The jump starter is stored at Amazon's warehouse for some time before it is delivered to you. Therefore, the battery might be much discharged and it might drop rapidly to the actual value the first time you power the jump starter on. It is recommended to give the jump starter a full recharge after you receive it.





#### **NOTE**

1. DO NOT start any engines that exceed the maximum displacement the jump starter can bear.
2. DO NOT crank the engine for more than 3 seconds.
3. Allow the jump starter to cool down for at least 1 minute between each start attempt.
4. Please ensure the device is at least 50% charged before use.

# DBPOWER

 [www.dbpowershop.com](http://www.dbpowershop.com)

 [support@dbpowershop.com](mailto:support@dbpowershop.com)

 1-855-888-5533



Made in China