



MiroPure

CURLING IRON HC118D

USER MANUAL



I Love Me

✉ support@miropureshop.com

☎ 1-855-666-5111



NOTE

1. DO NOT place the device near water to prevent it getting wet.
2. Always unplug the unit after use.
3. Keep your skin away from hot surfaces.

A Big Thank You

We're thrilled that you have chosen to purchase the Curling Iron. At MiroPure, we're committed to providing you with products that enhance your daily life. We also aim to give our customers excellent support. Should you have any questions or feedback about your new product, simply get in touch with our customer support team at 1-855-666-5111 , or by email at:

support@miropureshop.com

Enjoy your new product!

SAFETY INSTRUCTIONS

To ensure proper operation of this appliance, please read this instruction manual carefully before use. Save this manual for further reference. For help or any additional product information, please contact MiroPure customer support.

About Ion Technology:The built-in ionic generator emits negative ions, negatively charged atoms and molecules that can interact with the molecular particles in your hair. They seal the hair cuticle and reduce frizziness, split ends and knotting, while increasing hair manageability, leaving hair silky and lustrous!

support@miropureshop.com

SAFETY WARNINGS:

- Never leave this appliance unattended when plugged in.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped into water. Return the appliance to the place of purchase for examination and repair.
- Keep the cord away from heated surfaces.
- Never put any objects into contact with the heating plates. The plates are hot and may melt objects that come into contact with them.
- Never use while drowsy or feeling sleepy.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not improperly use the appliance.
- If the power cord is damaged, it must be replaced by the manufacturer.
- Keep the hot iron plates away from contact with skin. Do not touch the iron plates with fingers.
- KEEP AWAY FROM ALL WATER. The appliance is electrically live even when it is switched is off.

TO REDUCE THE RISK OF DEATH OR INJURY BY ELECTRIC SHOCK:


- Always unplug appliance immediately after using.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Warning: Do not use the appliance near a bath tub, wash basin or other vessel filled with water.
- Never submerge the appliance in water or any other liquid.
- If appliance falls into water, unplug it immediately, do not reach into water.

CAUTION:

- Hair will be hot after curling; let it cool before touching.
- For shorter hair, use a thin plastic comb between scalp and hair curler to prevent contact with scalp.

SPECIFICATIONS:

- Dual voltage: 100-240V~, 50-60Hz
- Heater: PTC
- Heat setting: 320°F-430°F
- Max temperature: 430°F
- Auto shut-off: 30 min
- Barrel size: 1.25 inches

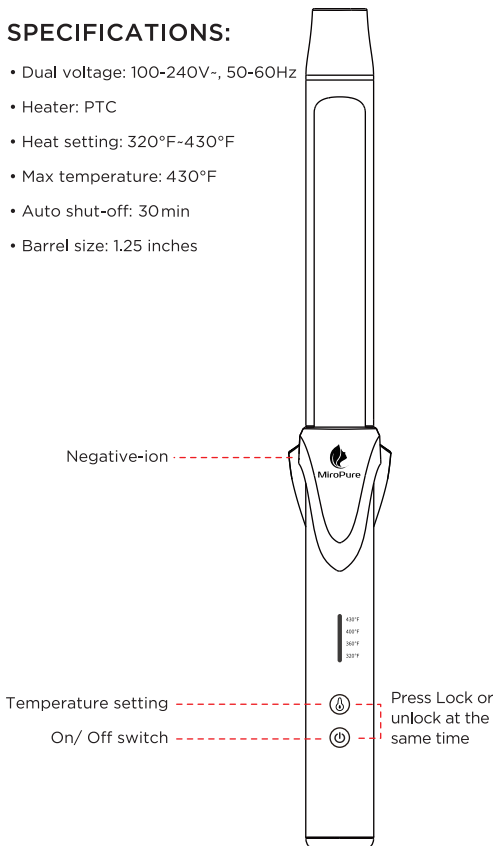

OPERATING INSTRUCTIONS:

- Turn on the device.
- Section dry hair evenly, apply heat spray, and comb through.
- Working in 1-inch sections, wrap hair around the wand by turning the wand, securing the ends underneath your hair as you wind more hair around the barrel.
- Hold the curler for 8-10 seconds, then simply pull the wand away from the curl to release.

TIPS:



- For smaller, tighter curls, use a smaller section of hair at a time.
- For larger, free-flowing curls, use a larger section of hair.
- Hair will be hot. Allow time to cool before reapplying curling iron for desired effect to avoid damage.
- To set the curls, pin the curls to your head and don't brush or comb them until they're cool.

TEMPERATURE CONTROL

Press and hold the  button for 2 seconds to turn it on.

 Adjust the temperature by pressing it once after a time.

Press and hold the  button for 2 seconds to turn it off.

To lock the temperature, hold down the two adjustment buttons  &  at the same time for three seconds

HAIR TYPE	TEMPERATURE
Thin, fine or bleached	320°F
Dyed or Dark colored	360°F
Normal hair:	400°F
Thick, coarse hair:	430°F

DUAL VOLTAGE INSTRUCTIONS

This appliance is dual voltage and operates at 100-240 volts AC. It will automatically detect the voltage used. If necessary, use an adapter plug (not included) with the correct configuration prior to plugging in.

CLEANING + CARE

Ensure that the curling iron is off, unplugged and cool to the touch. Put a teaspoon of rubbing alcohol onto a soft cloth. Wipe the barrels gently to remove dirt. **DO NOT SCRUB.** Do not pull or twist the power supply cord. Stop using **IMMEDIATELY** if damage is visible, or if normal operation ceases or is intermittently interrupted.

WARRANTY:

MiroPure offers a 24-month warranty on **all** of its products. Defects affecting product functionality appearing within the guarantee period **will** be corrected by replacement or repair at our option. Defects from repair by an unauthorized dealer are not covered.

ENVIRONMENTAL PROTECTION:



To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol **must not** be disposed of with unsorted municipal waste, but recovered, reused or recycled.

This device complies with Part 15 of the FCC Rules.



MiroPure

CUSTOMER SERVICE

✉ support@miropureshop.com

☎ 1-855-666-5111

Made in China