




MiroPure

HAIR STRAIGHTENER BRUSH

USER MANUAL

Model: KL1020

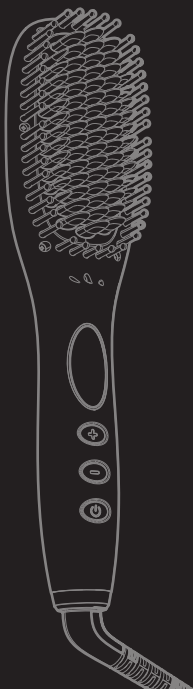

I Love Me




✉ support@miropureshop.com

☎ 1-855-666-5111



NOTE

1. DO NOT place the device near water to prevent it getting wet.
2. Always unplug the unit after use.
3. Keep your skin away from hot surfaces.

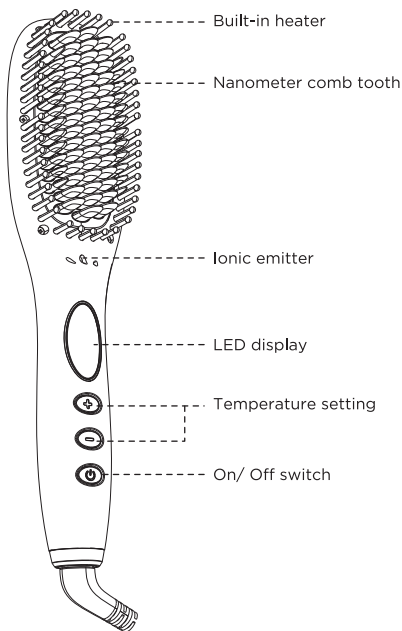

SPECIFICATIONS:

- Model: KL1020
- Product name: MiroPure Hair Straightener Brush
- Voltage: 100-240VAC 50-60Hz
- Power: 41W
- Dimensions: 250 x 59 x 43.6 mm
- Weight: 340 g

HOW TO USE:

1. Plug in, the display show "OFF". Press the power button for 0.5 seconds to turn on.

2. The initial temperature is set at 355°F/180°C. Adjust the temperature by pressing the button "+" or "-". The digital will flash when reaching the target temperature, the flashing will stop at the set temperature.

Recommended temperatures for different hair types:

Thick / dense hair: 410 - 450°F / 210 - 230°C

Medium volume hair: 340 - 390°F / 170 - 200°C

Soft / fine hair: 265 - 320°F / 130 - 160°C

3. Section your hair, comb through your hair as you normally do, but at a slower speed, make sure your hair gets deep into the inner heating area of the brush. For slight flips at the end, rotate wrist in the desired direction.

To give your hair a more voluminous blowout style, brush your hair from underneath to give it a slight curl inwards at the end.

4. Press the button "+" and "-" at the same time to switch temperature display between Celsius and Fahrenheit. 11 temperature levels from 130°C/265°F to 230°C/450°F.

5. To turn off the brush, press and hold the power button for 2 seconds.

WHEN USING THE BRUSH:

1. Make sure your hair is dry.
2. Pull and hold your hair with one hand and gently brush with long continuous strokes.
3. The temperature control automatically locks when reaching at the target temperature to prevent accidentally pressing the wrong button during styling. "LOC" reminder will be shown on the display screen when any button is pressed. Double press the power button to unlock.
4. The negative ions generator start to work after power on, and stop after power off.
5. The brush automatically shut off when turned on for 60 minutes.
6. The brush part is thermal conductive and becomes hot during use. Please only hold the handle and be careful not to get burned.

OPERATION INSTRUCTIONS:

This appliance is intended for professional use. Use on Alternating Current(AC)50/60 Hz only.

This appliance is designed to operate on **100-240 Volts AC.**

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference.
- 2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT SAFETY INSTRUCTIONS

Keep these instructions for future reference.

When using electrical appliances, particularly when children are present, these precautions should always be followed.

READ THESE INSTRUCTIONS BEFORE USE.

KEEP AWAY FROM WATER.

DANGER-Any appliance is electrically live even when the switch is off. To reduce the risk of injury or death by electric shock:

1. **Always** unplug it immediately after use.
2. **Do not** use while bathing.
3. **Do not** place or store appliance where it can fall or be pulled into a basin or bath.
4. **Do not** place in, or drop into water or other liquid.
5. If an appliance falls into water, unplug it immediately.
Do not reach into the water.

WARNING-To reduce the risk of burns, electrocution, fire, or injury to persons;

1. **This appliance should never be left unattended when plugged in.**
2. **Do not pull, twist, or wrap the cord around the appliance.**
3. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.

6. Keep the cord away from heated surfaces.
7. Never drop or insert any object into any opening.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use an extension cord with this appliance.
10. This appliance is extremely hot when in use. Do not let eyes or bare skin touch heated surfaces.
11. Do not use on hair extension with any synthetic hair.
12. Do not place the appliance on any surface while it is operating and do not place the appliance on any surface while may come into contact with the plates of the appliance whilst the plates are hot. When the appliance is placed on any surface always make sure the appliance stands upright and not on its side with the plates in contact with any surface.
13. Do not touch hot surfaces of the appliance.

USER MAINTENANCE:

Your brush is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt or dust. If cleaning becomes necessary, disconnect the unit from the power source, and wipe exterior with a soft cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION:

NEVER allow the cord to be pulled or twisted. Never wrap the cord around the unit. Damage will occur at the high flex point of entry into the unit, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE:

When not in use, your product is easy to store. Allow unit to cool, then simply put back in the box, and store out of reach of children in a safe, dry location. Do not pull plug from the socket using the cord.

WARNING:

IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

ALWAYS UNPLUG ELECTRICAL APPLIANCES.

KEEP AWAY FROM WATER

Everyone knows that electricity and water are a dangerous combination, but did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliance, keep them unplugged.



WARNING

Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

EU DECLARATION OF CONFORMITY (DOC)

Object of the declaration:

Product: Hair straightening brush

Model/Type: KL1020

Serial No.: N/A

EU Based importer: LEAPING HERO LIMITED

Address: 35 IVOR PLACE LOWER GROUND LONDON
ENGLAND NW1 6EA

This declaration is issued under the sole responsibility of the EU based importer.

The object of the declaration described above is in conformity with the relevant Union harmonisation

legislation:

2014/35/EU The Low Voltage Directive

2014/30/EU The Electromagnetic Compatibility Directive

2011/65/EU The Restriction of hazardous Substances Directive

Conformity is shown by compliance with the applicable requirements of the following documents:

The Low Voltage Directive :

EN 60335-2-23:2003+A1:2008+A11:2010

EN 60335-1:2012+A11:2014

EN 62233:2008

The Electromagnetic Compatibility Directive:

EN 55014-1:2015; EN 55014-2:2015; EN 61000-3-2:2014;

EN 61000-3-3:2013

The Restriction of hazardous Substances Directive:

**IEC 62321-3-1:2013; IEC 62321-5:2013; IEC 62321-4:2013;
IEC 62321-6:2015**

Signed for and on behalf of: LEAPING HERO LIMITED

Place of issue: Suffolk

Data of issue: 6 th August 2020

Name: Dennis Clarke

Position: Technical Director

Signature: *Dennis Clarke*

Photograph:





MiroPure



✉ support@miropureshop.com

☎ 1-855-666-5111



Made in China