

mooka_HAAP1171_说明书

● 5115C

尺寸：12*12cm

材质：200g铜板覆亚膜

AIR PURIFIER

USER MANUAL



High Clean Air
Delivery Rate



 
3-Stage Filtration
System



Low Noise Level



Child Lock

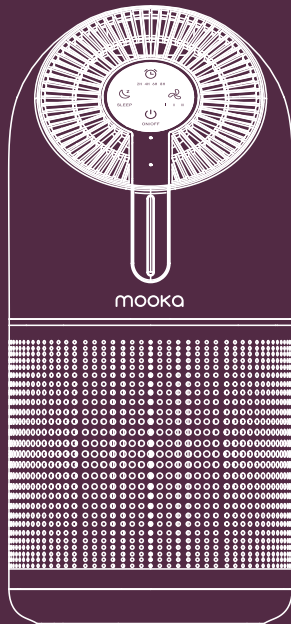

CUSTOMER SERVICE

Our customer service team is standing by to assist you if you have any questions or concerns.



www.mookashops.com



support@mookashops.com



1-855-666-9955

DIRECTORY

IMPORTANT SAFEGUARDS	01
ATTENTION	05
PURIFICATION TECHNOLOGIES	07
PRODUCT APPEARANCE DIAGRAM	08
OPERATING PARTS	09
USE AND OPERATION	10
EXTERNAL POWER SOURCE	13
INSTRUCTIONS FOR USE	14
CLEANING AND CARE/FAQ	17
IMPORTANT	18

IMPORTANT SAFEGUARDS 1

In order to prevent harm or damage happened to users or others, be sure to comply with the requirement as below:

WARNING/ATTENTION



WARNING

It reminds that misusing or mishandling may cause death.



ATTENTION

It reminds that misusing or mishandling may cause hurt.



FORBID



FORCE

Unplug or disconnect the appliance from the power supply before servicing.

WARNING: To Reduce The Risk Of Fire Or Electric Shock, Do Not Use This Fan With Any Solid-State Speed Control Device.

WARNING: To Reduce The Risk Of Fire, Electric Shock Or Injury To Persons, Do Not Use Replacement Parts That Have Not Been Recommended By The Manufacturer (e.g. Parts Made At Home Using A 3D Printer)

2 IMPORTANT SAFEGUARDS



WARNING



Please supervise your children and avoid them from touching or using machine.



AVOID WET

Do not connect or disconnect the power with wet hand.
It may cause electrical shocking.



NO DISASSEMBLE

Do not disassemble, repair or reconstruct.
It may cause fire or damage.
Please contact the seller for replacement.



FORBID

Do not use over-limit sockets or wiring connectors. Please use the rated voltage.
It may cause a fire.

IMPORTANT SAFEGUARDS 3



Do plug the power into the socket completely.

It may cause fire because of heating or electrical shocking.
Do not use the damaged plug or loose socket.



Avoid any water on the surface of the unit.

It may cause short circuit or electrical shocking.

 
AVOID WET



The appliance must be disconnected from the supply mains before cleaning or other maintenance.

Otherwise the unit may start working in a sudden which may cause electrical shocking or hurt.

DISCONNECT POWER



Do not insert any metal objects into the unit.

It may cause hurt or electric shocking.

4 IMPORTANT SAFEGUARDS



FORBID

Do not repair it when the cord or plug is damaged.

It may cause short circuit, electric shocking or fire. Please contact the retailer for replacement.



If there is dust on the plug, it may weaken the insulation and even cause a fire.

Take out the plug and clean it with dry cloth.

Please remove the plug from the socket if not using for a long period.

 
ATTENTION



FORBID


Do not power the unit on when using insecticide in the room.
Otherwise the insecticide may be stored in the unit and will blow out during the normal working time, which is harmful to health.

Please ventilate thoroughly after using insecticide and then turn on the unit.

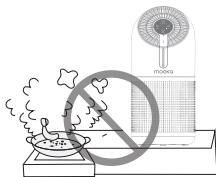


Do not use in the room with a gas stove.

 It may cause hurt because the machine is not a ventilator.

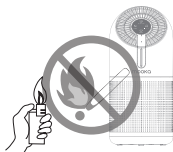

Do not place the unit near fires.

 
It may cause fire.

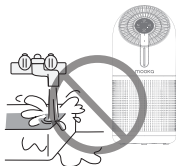

Do not use in the watery or high temperature room such as the bathroom etc.

Otherwise it may cause creepage, electric shocking or fire.

 6 ATTENTION

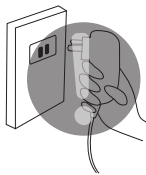


Please hold the plug instead of the cord when unplug the power.

Otherwise it may cause short circuit, breaking of the cord, electric shocking or fire.



Keep away from alcohol, organic impregnant or pesticides.

 It may cause cracking, short circuit, electric shock, injury or fire.

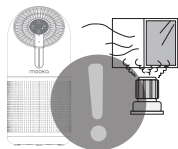

Please ventilate timely when used with fire in the room.

Otherwise it may cause poisoning of CO₁ as the machine is not a ventilator.

Please remove the plug from the socket if any conditions as below:


- If all switches do not work
- If the power cord or plug hot singularly
- If any peculiar smell, exceptional noise or vibration
- Any other abnormality or failure

If the power cord is damaged, please send it to the retailer or service center or technician for repairing. Do not change or repair it by yourself.

PURIFICATION TECHNOLOGIES 7


The multi-functional filter is composed of pre-filter, HEPA layer and activated carbon layer.

 DIAGRAM OF PURIFICATION

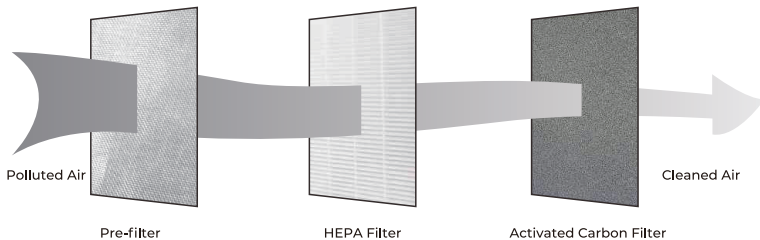


8 PRODUCT APPEARANCE DIAGRAM

 
APPEARANCE DIAGRAM

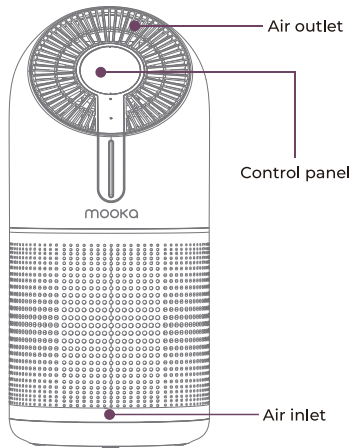

DECOMPOSITION DIAGRAM

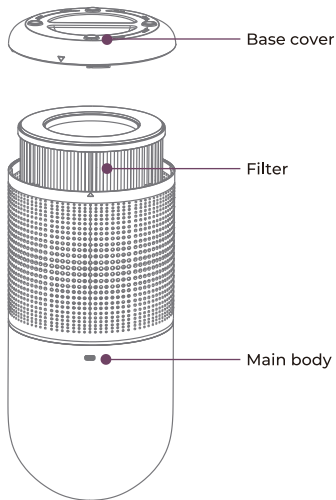 

OPERATING PARTS 9

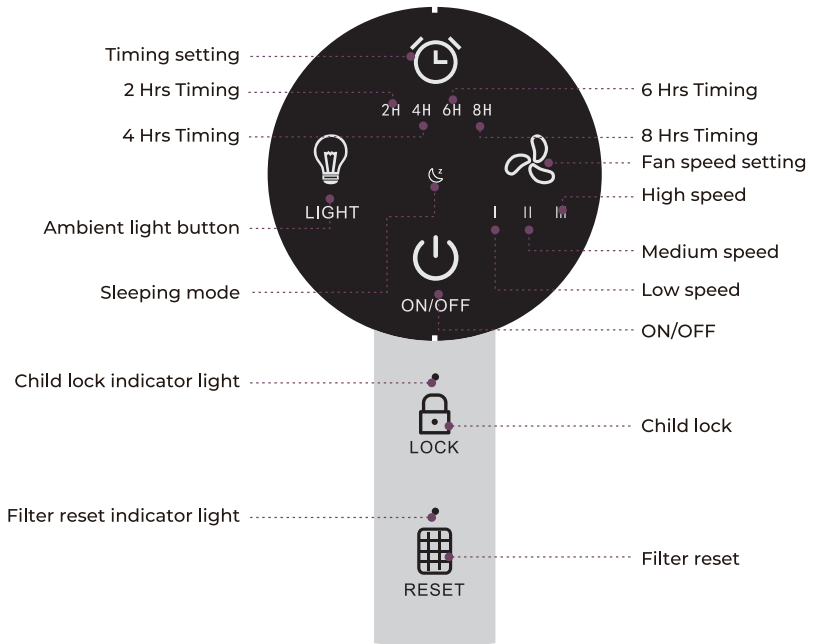 

10 USE AND OPERATION

PLACEMENT

Please keep the machine air inlet and outlet 30cm or more far away from the wall and home furniture.

Do not use the machine in front of hot source outlet.

REPLACEMENT OF THE FILTERS

 
 
 
 
If the "Filter Change Reminder" indicator light is on, it means the filter's usage time (2160 hours) is up, please replace the filter with a new one.

After replacing the new filter, please press and hold the "Reset" button for about 3 seconds, then the "filter replacement reminder" indicator will be switched off and the machine will start to record the usage time of the filter again.

TAKE OUT FILTER

1. Turn it off first, then unplug the power.
2. Put the machine upside down, hold the machine body firmly with one hand, press the cover with the other hand and rotate it counterclockwise.
3. Take out the used filter.


USE AND OPERATION 11

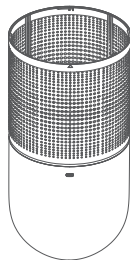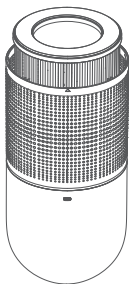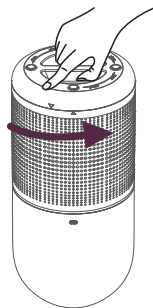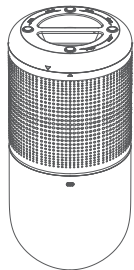

12 USE AND OPERATION


INSTALL THE FILTER

 1. Remove the protective film of the new filter, and then install the new filter.
2. Put the machine upside down, hold the machine body firmly with one hand, press the cover with the other hand and rotate it clockwise.

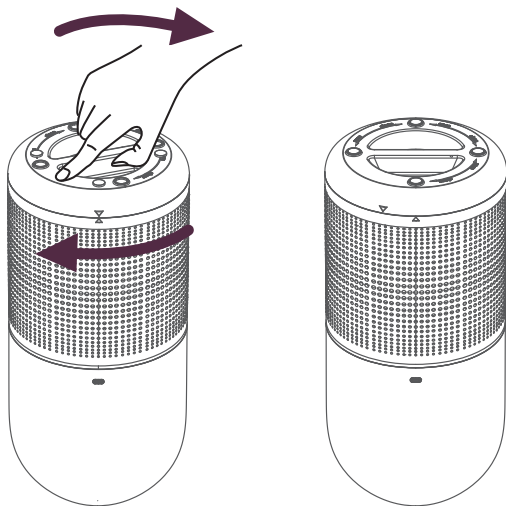

EXTERNAL POWER SOURCE

 Power supply: 5V 

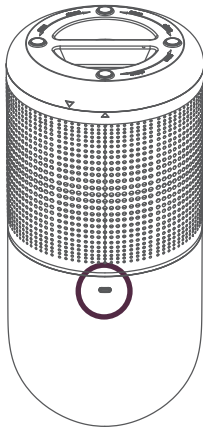

interface: Type C

 


USB cable

14 INSTRUCTIONS FOR USE

THE POWER SETTING

- ◆ All the indicator light will on 0.5 seconds for self-checking after connecting power, then enter to standby mode. Below pictures is for reference.
- ◆ In standby status, tapping ON/OFF button to turn on or turn off the machine. Turn on the machine for the first time, fan speed run at low speed defaultly. See below figure.

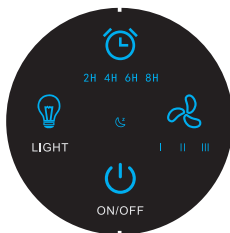


Self Check



Standby Mode

 
When the product is turned off, but the power is not cut off, the device has a memory function. When turned on again, the device will operate in the previous mode.

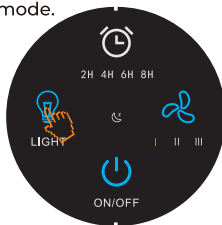


Ambient light:
Touch the ambient light button to turn the ambient light on or off.

FAN SPEED SETTING

 
- ◆ Touch the fan speed button to select the fan speed: low, medium, high, sleep.

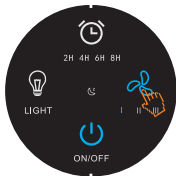


low fan speed

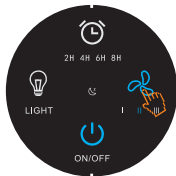 

Medium fan speed

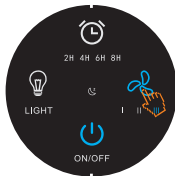 

High fan speed

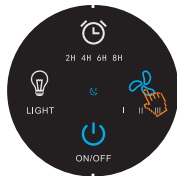 

Enter into sleep mode

After entering sleep mode, the sleep mode light is on and the product runs at the lowest air speed. If there is no operation within 10 seconds, the screen button light (except the sleep mode indicator and light button) will be off. Note.

1. The "Light" button, which turn on/off the ambient light independently, is not controlled by the sleep mode.
2. In the sleep mode, press the "ON/OFF" button to turn off the power directly without lighting up the screen.
3. In the sleep mode, press the Fan Speed button to adjust the wind speed directly.
4. In the sleep mode, press the other buttons (except for Fan Speed and ON/OFF button) can deactivate the sleep mode.

 


Enter sleep mode and no operation within 10 seconds


16 INSTRUCTIONS FOR USE

TIME SETTING


- ◆ Press "Timer" button to setting the working time. The timer function indicator lights will show the selected timer setting

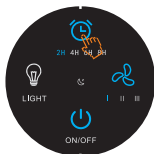


Timing 2 hours

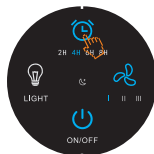 

Timing 4 hours

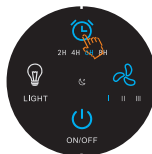 

Timing 6 hours

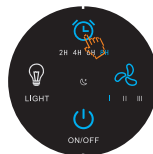 

Timing 8 hours

CHILD LOCK

Use the Child Lock to temporarily lock the control panel and deactivate the function buttons. Press and hold the "Lock" button for about 3 seconds to turn the child lock on or off. (See figure below for the Child Lock indicator)



Child lock is activated



Child lock is deactivated

RESET THE FILTER

If the "RESET" indicator light is on, it means the filter's usage time (2160 hours) is up, please replace the filter with a new one.

After replacing the new filter, please press and hold the "Reset" button for about 3 seconds, then the "RESET" indicator will be switched off and the machine will start to record the usage time of the filter again.



CLEANING AND CARE



Please remove plug from the socket before cleaning and maintenance .

- ◆ Cleaning the body for this device by damp cloth, then wipe it dry.
- ◆ If machine is too dirty, neutral detergent can be used for cleaning, but please dilute the detergent before use.
- ◆ Do not clean the unit with the solvent listed on the right which may cause distortion or discolour.
- ◆ If the filter replacement indicator light is light up, replace with a new filter.
- ◆ After replacement, press filter replacement button for approx.3 seconds, the filter replacement indicator light will switched off.



If the machine is not working properly, please kindly check as follows before contacting us for replacement.

Problem	Checking methods	Possible solution
Do not work	<ul style="list-style-type: none"> • Please check if the plug is disconnected from the socket. 	<ul style="list-style-type: none"> ➡ Power plug should be plugged properly
Odor can not be removed	<ul style="list-style-type: none"> • Is there a very strong odor in the using environment? (Notes: air should be purified continuously) 	<ul style="list-style-type: none"> ➡ It is recommended to ventilate first and then turn on the machine
	<ul style="list-style-type: none"> • Does the using life time for filters come to the end? 	<ul style="list-style-type: none"> ➡ Please replace the used filter with a new one.
High noise	<ul style="list-style-type: none"> • Is the PE bag for filter removed? 	<ul style="list-style-type: none"> ➡ Please take out filter and tear off PE bag.
	<ul style="list-style-type: none"> • Does the using life time for filter come to the end? 	<ul style="list-style-type: none"> ➡ Please replace the used filter with a new one.

18 IMPORTANT

Model No.:	M02
Power supply:	5V ===
The length of power cable:	≥1.5m
Power consumption (W):	4W
Dimensions (WxDxH):	185x185x405(mm)

MULTI-FUNCTION FILTER

Dimensions (WxDxH):	165x165x180(mm)
Life time:	2160H

mooka

Beyond Elegance

 www.mookashops.com

 support@mookashops.com

 1-855-666-9955



Made in China