


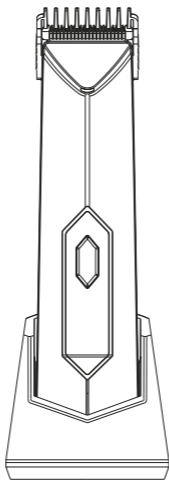 
# VACASSO

 [m.me/MyVacasso](https://m.me/MyVacasso)

 1-855-222-1188

 [support@myvacasso.com](mailto:support@myvacasso.com)

 [www.myvacasso.com](http://www.myvacasso.com)



## SMOOTH BODY TRIMMING

INSTRUCTION MANUAL

## 100% SATISFACTION GUARANTEE:

Please feel free to contact with us. We will be here for you 24 / 7.

## USER MANUAL

Thank you for buying our product. Please read this manual carefully before your first use. All pictures are for reference only.

### ■ OPERATING INSTRUCTION OF BODY HAIR TRIMMER

#### 1. Technical Parameter



Model: T8S

Power: 5W

Power Source: rechargeable

Adapter: input AC 100-240V / 50 / 60HZ, output DC5V E 1000MA

#### 2. Technical Features

 
- Specifically-engineered blades cut through coarse or thick hair without any pulling, tugging, nicks, or cuts. Featuring an extra-compact trimming blade for safe trimming in sensitive areas.
- An extra-powerful motors with ultra-quiet operation and low vibration.
- 100 % Waterproof designs with whole washable body . Waterproof rating: IPX7.
- Detachable blade, easy for cleaning.
- Adjustable guide comb for customizable trim length.
- Charging time about 90 minutes, Working time after full charge is 90 minutes.

### ■ ASSEMBLY AND DISASSEMBLY OF BLADE

#### 1. Classification and Features of Blade

Ceramic blade: wear-resisting and high sharpness


#### 2. Disassembly of Blade




Turn off the trimmer first. Press the thumb blade and push it up.

Please hold the blade of disassembly to avoid its falling.

### 3. Assembly of blade

 

 1. Put blade (part A) into trimmer body (slots B)





2. Press the blade down until you hear a click

#### Attentions

Ceramic blade is fragile , please handle it with care.  
Please sterilize the blade regularly to ensure hygiene.

### ■ CLEANING AND MAINTENANCE OF BLADE

#### 1. Cleaning

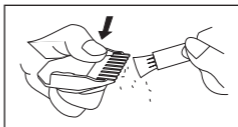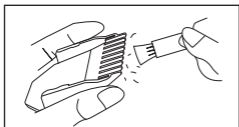

Brush trimmings in between blade teeth by using cleaning brush.  
Press the blade handle ( as indicated in the picture ) and brush trimmings.  
between bottom blade and upper blade.

#### Kind Warning

 
Never remove the spring of blade, otherwise the blade may not return to original state and have to be scrapped.  
Each time after using, please remove blade and clean the surface as well as blade teeth.  
Please wipe dry blade to avoid the spring getting rusty.

#### Attentions

The blade may slightly heat up during operation, which is the normal and won't affect the operation.

## ■ CLEANING AND MAINTENANCE

### 1. Body Cleaning

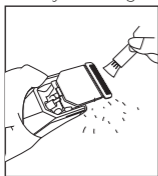

1. Brush hair trimmings out of blade slots by using cleaning brush.




2. Wash trimmer with water.




3. Dry the trimmer with a cloth and put the blade back for storage.

## ■ CHARGING

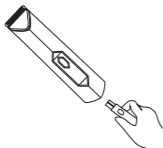

Connect the USB cable to trimmer  
Warm tip:  
Please charge your trimmer before first use.

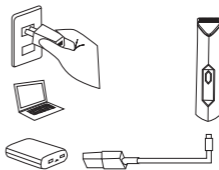

Make sure to turn off the trimmer, then connect USB cable for charging (USB cable can be plugged into chargers with USB interface, such as cell phone, computer, laptop, powerbank and etc.)