 


VACASSO

HIGH-SPEED HAIR DRYER TH009

INSTRUCTION MANUAL

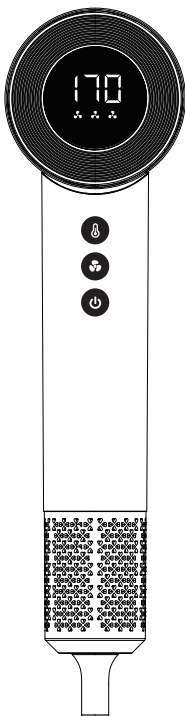

 m.me/MyVacasso

 1-855-222-1188

 support@myvacasso.com

 www.myvacasso.com

■ CONTENTS

WARNINGS	01
NOTICE	02
FEATURES	03
FUNCTION INSTRUCTIONS	04
GEAR FUNCTION	05
HOW TO USE THE HAIR CARE MODULE	06
HOW TO USE THE AIR NOZZLE	07
CLEANING AND MAINTENANCE	08
PRODUCT PARAMETERS	09
FAULT ANALYSIS AND TROUBLESHOOTING	10
MAINTENANCE AND CLEANING	12
SERVICE AND GUARANTEE	12
ENVIRONMENTAL PROTECTION	12


■ WARNINGS

Use / Storage

- 1.** Do not block the air intake during use, otherwise it may cause the heating wire to become red and ignite a fire.
- 2.** Do not immerse the hair dryer in water. Do not use the hair dryer in a humid environment.
- 3.** Please keep the hair dryer dry, otherwise it may cause electric shock. Do not use the hair dryer with wet hands, or it may cause electric shock or fire due to short circuit.
- 4.** Do not use the hair dryer near any flammable items, otherwise it may cause an explosion or fire caused by short circuit
- 5.** Do not wrap the power cord around the main body of the hair dryer during storage, otherwise it may cause the power cord to break, resulting in electric shock or fire due to short circuit.
- 6.** Do not store in a highly humid place, otherwise it may cause electric shock or a fire due to a short circuit.
- 7.** Do not store within the reach of children or infants, otherwise it may cause electric shock or injury.
- 8.** Do not attempt to repair, disassemble, or modify this hair dryer on your own, otherwise it may cause any danger due to incorrect operation.
- 9.** Do not continue to use the device if the power cord or plug is damaged or heating up, otherwise it may cause burns, electric shock, or a fire.
- 10.** It is recommended to install a residual current device (RCD) with a residual working current not exceeding 30mA in the bathroom power circuit to increase protection

■ NOTICE

Attention

1. Do not use this device near water-filled bathtubs, showers, sinks, or other containers. 
2. If the power cord is damaged, it must be replaced by a professional from the manufacturer, repair department or a similar department to avoid danger.
3. During use, the air outlet and nozzle may become hot. Do not touch with hands, otherwise it may cause burns.
4. Do not use this hair dryer for babies, otherwise it may cause burns. Please unplug after use if you use the hair dryer in the bathroom.
5. Do not pull the power cord forcefully, otherwise it may cause the power cord to break and cause electric shock.
6. This hair dryer is only used to dry hair and hair. Do not use it to dry shoes and clothes, otherwise it may easily cause a short circuit and result in a fire.
7. When cleaning the hair dryer, please make sure the power switch is in the off state and unplug the power plug.
8. Regularly use towels, cotton swabs, or toothbrushes to clean the adhesions on the air inlet and outlet.
9. Do not press or rub the air inlet and outlet with finger nails or sharp objects to avoid damaging the product.
10. Do not use alcohols, nail polish remover, or detergents to clean this hair dryer, otherwise it may cause malfunctions, breakage, and fading.

■ FEATURES

High-speed Brushless Motor

This product uses an 110,000 rpm high-speed brushless motor impeller fan, which can produce a strong and rapid airflow to dry hair quickly.

Intelligent Temperature Control System

The intelligent temperature control system built into this hair dryer can accurately adjust and control the air flow and temperature to prevent overheating and damage to hair.

 
One-Key Cooling Function

In the hot air mode, press and hold the one-key cooling button to quickly switch to the cold air mode. Release the button to switch back to the original hot air mode.

Super Ion Technology

This hair dryer has a built-in negative ion generator that produces negative ions to effectively reduce static electricity accumulation, prevent hair from deforming, bending or curling due to static electricity, and protect hair.


FUNCTION INSTRUCTIONS

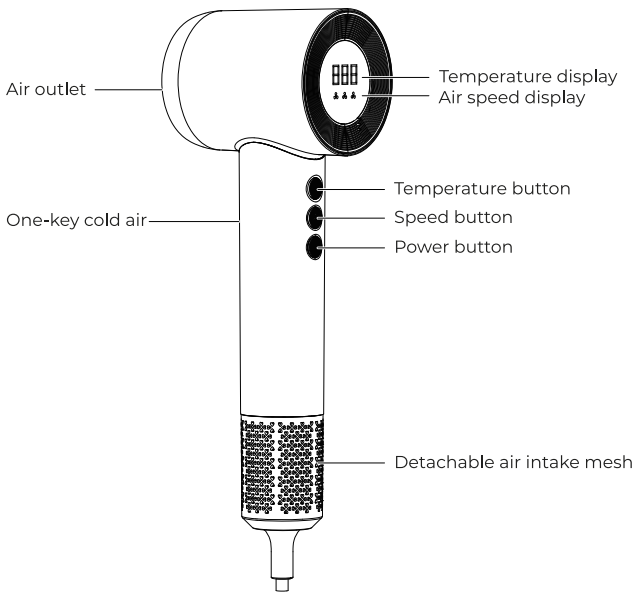

The products, accessories, and user interfaces in the instructions are for reference only. Due to product will upgrades, the actual product may differ slightly from the diagrams. Please refer to the actual product.

■ GEAR FUNCTION

 
1. 3 air speed and 4 temperature settings, airspeed and temperature can be freely combined

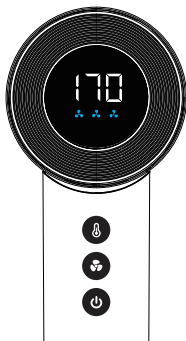

2. 3 Air Speed: Gentle,Medium, Fast


3. 4 Heat Settings: 110 ℉ ,130 ℉ ,150 ℉ ,170 ℉

 4. Long press the temperature key to enter the cold and hot cycle mode

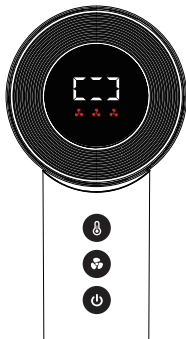


■ HOW TO USE THE HAIR CARE MODULE

 (If this model does not come with a magnetic hair care module, please purchase it separately if needed)

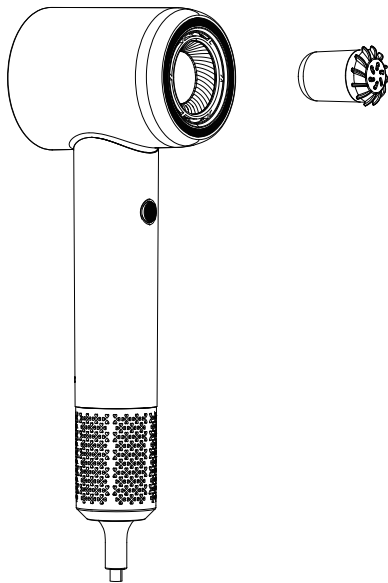

Equipped with a convenient detachable hair care module, just align the center hole of the air outlet and the module can be easily adsorbed, and can be rotated as needed for convenient use.

 
■ HOW TO USE THE AIR NOZZLE

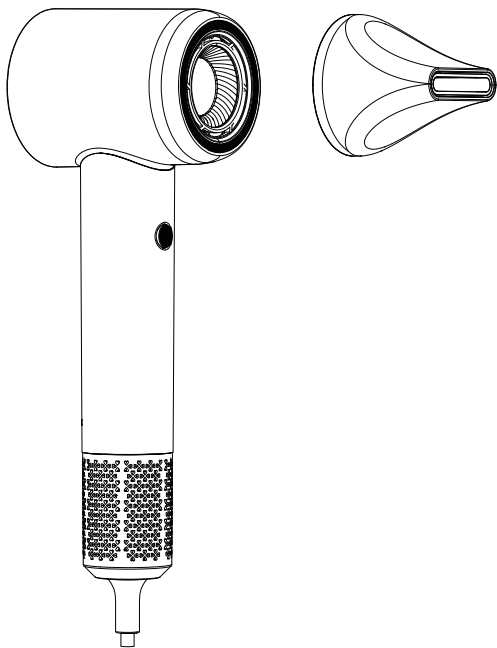

Equipped with a convenient detachable hair care module, just align the center hole of the air outlet and the module can be easily adsorbed, and can be rotated as needed for convenient use.

■ CLEANING AND MAINTENANCE

 1. The filter mesh needs to be cleaned and maintained regularly to avoid blockage and ensure smooth air intake.
2. Before cleaning the filter mesh, please make sure that the hair dryer is in the off state and the power plug is unplugged.

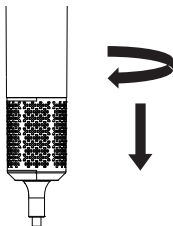

3. The air intake filter is fixed with a rotary buckle. Turn the air intake mesh clockwise and then down to remove it from the handle.

 


Do not wash the stainless steel filter mesh with water, otherwise it may cause a malfunction.

4. Use dry non-woven cloth, soft brush, toothbrush and other tools to clean the air intake filter mesh and the debris on the surface of the air intake filter.

■ CLEANING AND MAINTENANCE

After cleaning, align the air inlet mesh with the handle and insert it, and rotate the air inlet mesh clockwise to fix it tightly

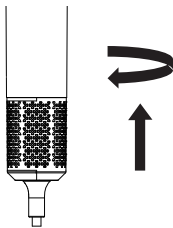

■ PRODUCT PARAMETERS

Product name:	Hair Dryer
Model:	TH009
Rated voltage:	120V ~
Rated frequency:	60Hz
Rated power:	1500W
Product size:	250X70X90mm

■ FAULT ANALYSIS AND TROUBLESHOOTING

	Common faults	Possible causes	Troubleshooting
Does not work when turned on	Digital Tube 001 flashing	Internal components damaged	Restart after 1 minute interval or return for repair
	Digital Tube 001 flashing		
	Digital Tube 001 flashing		
	Digital Tube 001 flashing		
	Digital Tube 002 flashing	Components overheat	Power off, wait for 3 minutes before use
	Digital Tube 003 flashing		
	Digital Tube 005 flashing	Input voltage too high	Check the voltage of the power grid
	Digital Tube 006 flashing		
	Indicator light or button does not respond		Not powered
Internal components damaged			Return for repair
Working when turned on	Heating wire turns red	Control board damaged	
	Power cord or plug overheats	Power cord is damaged or plug is loose	
	Serious burnt smell during use	Internal components damaged	

* If the fault cannot be resolved, please contact customer service

■ MAINTENANCE AND CLEANING

- Unplug the appliance and allow it to cool.
- Wipe the surfaces with a damp cloth to clean.
- Do not use harsh or abrasive cleaning agents or solvents.
- Store the appliance in cool, dry place.

■ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded your statutory rights are not affected.

Warranty period: 365 days

■ ENVIRONMENTAL PROTECTION




To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.

This device complies with part 15 of the FCC Rules.

VACASSO

 m.me/MyVacasso

 1-855-222-1188

 support@myvacasso.com

 www.myvacasso.com

Made in China