

# Portable Voice Play Spot Alarm

 
## user manual

This product is a multi-functional portable voice play spot alarm with doorbell, reminder, security alarm and other functions. It supports customer voice record, doorbell call, arm and disarm. It can be used as doorbell, pager, alerter, security hub, etc.

### Features

- Support customer voice recording;
- 4 wireless zones and 1 doorbell zone;
- Doorbell support 1 indoor panel pair with many buttons; and One button can be paired into many panels also;
- Support 32 doorbell music switching;
- Support up to 10 wireless detectors per zone;
- Built-in 3 AAA batteries;
- 5-levels volume switching;
- Low power alarm;
- Sound and light, vibration reminder, magnetic installation.

### Product learning

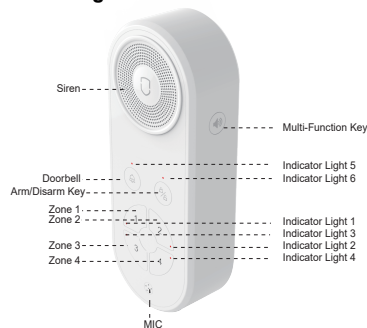

### Indicator light description

	indicator light 1	indicator light 2	indicator light 3	indicator light 4	indicator light 5	indicator light 6
Always on	Coding status					
Flash quickly	Zone trigger alert/alarm					
Flash slowly	Voice Recording					Recording mode

**Note:** If the indicator lights 1, 2, 3, and 4 keep on all time together, means that the battery is low, pls change the battery asap.

### Multi-function key

Short press: in normal mode, the doorbell volume is switched, 5 levels for option.

Note: When entering the mute state, the vibration reminder will work.

Cancel the ring and vibration when alarming or alerting

Long press: enter [recording mode].

### Arm/disarm button

Arm: short press in the disarm state, one "beep" sound

Disarm: short press in the arm state, two long "beep" sound

### Zone 1, Zone 2, Zone 3, Zone 4

[Zone 1], [Zone 2], [Zone 3] are the zones for alarm remind. when device disarm, the zone is triggered to play a voice record reminder; when device arm, it will alarm when the zone is triggered.

[Zone 4] is the alarm zone: when device disarm, the zone is triggered without alarm; when device arm, the zone is triggered with alarm.

Short press: When device is alarming, the alarm will be canceled.

Long press: enter [zone coding mode].

### Doorbell

Supports up to 10 doorbell triggers, each music can only be bound to one doorbell trigger;

The doorbell trigger including: doorbell transmitter, infrared detector, door magnetic sensor, etc.

Short press: when the doorbell rings, the alarm canceled

 
Long press: enter the coding mode

### Installation

#### Multi-Functional Portable Voice Play Spot Alarm


Fix magnetic iron part on the wall:

1. Fix magnetic iron part on the flat and clean wall
2. The device is magnetically attracted to the iron plate.

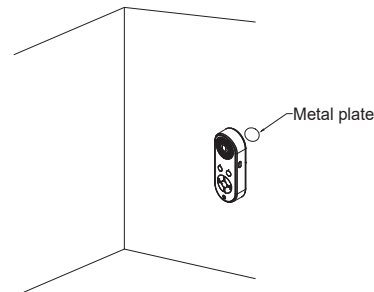


The alarm device is magnetically attracted to the refrigerator door or carried in your pocket.

 When you need to replace the battery, slide the battery back cover to replace the battery.

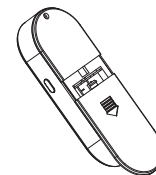


## PIR detector

 1. Install on the wall, about 1.8-2m above the floor.

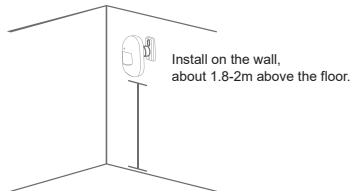

Installation way 1:

 
Use 3M super double-sided tape to fix the PIR detector on the wall. This way is suitable for the wall which is smooth and hard;

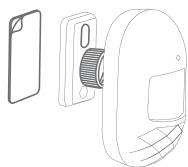

Installation way 2:


Use the screws to fix the stand of the PIR. This way is suitable for most of the walls, we recommend to use this way.

 Loose the stand you can adjust the angle of the PIR.

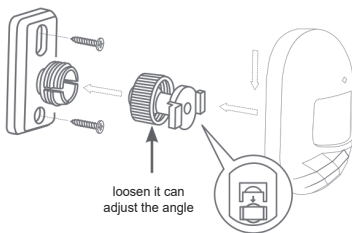

2. Installation Suggestions:

 Note: This PIR detector detection angle (detection distance  $\approx 7\text{m}$  / detection angle  $\approx 90^\circ$ )

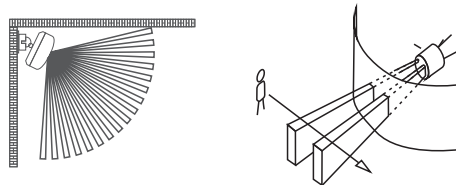

3. Notifications:



Away from heat;



Away from the  
straight sunshine;




Don't install it  
outdoor;



Don't install near  
the waving curtain.


## Door Sensor

 Use double side tape to fix the door sensor on door or window.

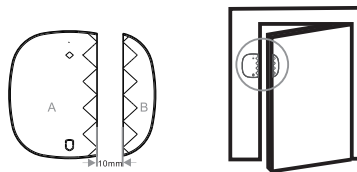

If need replace the battery:

 Pls use the screw driver to take off the back cover, and then change the battery.

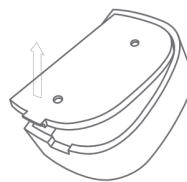

## Doorbell coding

Press and hold 5s until the indicator light is on. Enter the doorbell coding mode. After pressing [Multi-function key] to choose the favorite music, trigger doorbell, one "beep" sound, indicates that the coding is successful, two "beep" sound, indicates repeated coding.

Clear the code: In the doorbell coding mode, long press till one long "beep" sound, indicates that the code has been cleared.

## Zone coding

Press and hold 5s to one "beep" sound and the indicator light is on, enter [zone coding mode],

At this moment, trigger the PIR detector, the door magnetic sensor, the emergency button or the remote controller, one "beep" sound, indicates that the coding is successful, two "beep" sound, indicates repeated coding.

Note: Support continuous coding; if the indicator is always on, press it shortly, the indicator light will be off, exit the coding mode;

Clear the code: in the zone coding mode, long press till one long "beep" sound, indicates that the code has been cleared.

## Voice recording

[Zone 1], [Zone 2], and [Zone 3] support voice recording. Take [Zone 1] recording as an example, [Zone 2] and [Zone 3] are similar.

Press and hold [Multi-Function Key] until [Indicator light6] flashes slowly, indicates that the device enters voice recording mode. Press and hold [Zone 1] till one "beep" sound and [Indicator light1] flashes slowly. At this time, recording starts, and after 10s, the indicator light is on. When the light is off,

the recording is finished and the system automatically saves the recording. In the recording mode, press [Zone 1] to play the recording, and press [Multi-function key] to exit [Recording mode].

## Low battery reminder

The indicator 1, 2, 3, and 4 are always on, means the device lack of power, need to change the battery.

## System disarm

Press [arm/disarm key] or use remote controller to disarm.

## Factory Restore

Switch off the device, press and hold [Zone 3] and [Zone 4] at the same time and switch on the device till hearing one long "beep" sound, indicates that the factory setting has been restored.

After the factory restored, all the added accessories will be cleared.

## Technical Parameters

### Portable Voice Play Spot Alarm

Battery: 3\*AAA

Standby time: 6 months

Wireless frequency: 433MHz

Wireless distance: 70m(for free space)

Dimension: 116\*45\*23 mm