# Self-powered Doorbell user manual



## I Product Features

Battery-free wireless doorbell;

- Patented appearance, small and exquisite 35 melodies for options;
- •Volume adjustable: 4-speed adjustment (mute, 90dB, 100dB, 110dB);
- •Support more match one, one match more;
- •One song can pair to more doorbell buttons;
- •One indoor panel supports max 40pcs doorbell buttons.



Understanding of Product

Indoor panel



Volume button: 4 levels adjustment (mute, 90dB, 100dB, 110dB), click to switch one level, cycling switching. Music selection key: 35 melodies cycling switching, short press to switch one. Short press: switching music. Long press for 5s: Enter doorbell paring mode. Long press 15s: Factory restore. Indicator light: Blue indicator light.



#### **Doorbell Pairing**

 Short press [Music selection button] choose music, indicator light flashes.

②After LED light off, long press [Music selection button] 5s till indicator light flashes, press the doorbell button at same time, indicator light off.

③Press doorbell button again, play the music you selected, pairing completed, non music, then need re-pair. Note: One doorbell button to pair a song.

One song can pair to more doorbell buttons. One indoor panel supports max 40 pcs doorbell buttons.

#### Factory Restore

Long press [Music selection button] 15s till indicator light fast flashes, delete all the paired codes, factory restore.

## Install Instruction

**Indoor panel:** Indoor install, plug into power outlet. **Doorbell button:** Paste it on a flat wall by 3M glue.



### **Technical Parameters**

Wireless frequency: 433M Wireless distance: ≤80m ( for free space ) Power: Doorball Button: Self-powered Indoor Panel: AC 100V-230V 50/ 60Hz Working temperature: Doorball Button: -20°C++60°C Indoor Panel: -10°C++45°C Size of indoor panel: 87m x 45mm x 44mm Size of doorbell button: 78mmx 45mm x 22mm

Wall / 3M Glue / Button