说明书设计注意事项:

- 1、 封面封底材质: 157g双铜彩印
- 2、 内页材质: 100g书纸
- 3、 骑马钉

4、 尺寸: 100\*210mm

PT7564C C:0 M:45 Y:100 K:4

C:3 M:2 Y:4 K:O

# receiving the product.



# WARRANTY

 This product is covered by 1 year warranty from date of purchase. Please activate your warranty within 7 days to get full replacement guarantee within 30 days after

Sometimes Amazon might have repackaged returned units as new. If you purchased a new unit but received the product used, please contact MegaWise Live Chat support for exchange.



♥♥♥♥₩want you to be happy♥♥♥♥

support@megawise.com megawise.com

# IMPORTANT SAFETY NOTICE & TIPS Please read the user manual carefully before using the

to the local voltage before you connect the appliance. 2. Do not operate the appliance with a damaged power cord or plug. Do not operate the appliance if it malfunctions or damaged. If the cord or the appliance is damaged, it must be returned to an authorized service center for repairing. 3. To disconnect, unplug the power cord from the electrical outlet. Do not disconnect by pulling on cord. Do not use an extension cord with the appliance.

appliance and follow the safety instructions.

5. If the supply cord is damaged, contact the manufacturer, or its service agent or qualified person to replace it in order to avoid a 6. When it is not in use or to be cleaned, unplug the cord from the power outlet. 7. Do not use the appliance on wet or hot surfaces, or close to a heat source. 8. Do not immerse any part of the appliance, power cord or plug into the water or other liquids.. 9. A short power cord is provided to reduce the risk of becoming entangled in a long cord or tripping over.

Check if the voltage indicated on the appliance is corresponding

10. Use accessories or attachments recommended by the manufacturer only. 11. Use the appliance for its intended use only. For indoor use only. 12. Closely supervise children when using any electrical appliance. Do not allow the appliance to be used as a toy. 13. CAUTION: HOT SURFACE. DO NOT TOUCH. 14. Allow the appliance to cool down, for 60 seconds before the next 15. To reduce the risk of electric shock, this product has a polarized

The indicator light will be illuminated when the appliance is under any

# FUNCTIONS ① DRY/ MOIST FOOD SETTINGS BUTTON ⑤ INDICATOR LIGHTS ② SEAL BUTTON ③ VAC & SEAL BUTTON

If several lights flashing at the same time after continuous working, overheating protection activated. Please wait for 5-10 minutes for cooling down and the appliance will be back to normal mode. (1) DRY/ MOIST FOOD SETTINGS BUTTON It will take a longer time to seal moist food than dry food. The indicator light will be illuminated when the corresponding function

It is the most frequently used function. Press the vac & seal button to

(Wait for 60s between each cycle to allow the appliance to cool down)

During any working status, press STOP button to stop current processing

In the standby mode, press and hold the PULSE/STOP button to activate

the function, when it starts to PULSE vacuum, the operator can control

the vacuum pressure manually by this button according to different

food. After achieving the desired vacuum effect, release the button and

FUNCTIONS

vacuum package and seal the food airtight with a single touch.

(4) STOP AND PULSE VACUUM BUTTON

choose SEAL to seal the bag.

(5) INDICATOR LIGHTS

selected. (2) SEAL BUTTON Press the seal button to seal, no matter the bag is vacuumed or not. (Wait for 30s between each cycle to allow the appliance to cool down) (3) VAC & SEAL BUTTON

plug (one blade is wider than the other). This plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully into the outlet at the beginning, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

1 IMPORTANT SAFETY NOTICE & TIPS

# PRODUCT FEATURES


(1) SILICONE CONTACT BAR Work with silicone sealing gasket to get an optimal sealing. (2) SEALING FOAM GASKET Work with silicone sealing gasket to get an optimal sealing.


(3) VACUUM NOZZLE This is used for removing air from bags/canisters/bottles. Do not block the vacuum nozzle while vacuuming a bag. The accessory hose is required during the vacuuming a canister or bottle (4) VACUUM CHAMBER

(5) SEALING STRIP Works with the silicone contact bar for sealing function.

An airtight chamber for vacuuming.

(6) ACCESSORY BUTTON Determines the connection of the vacuum tube before vacuuming the wine stoppers, vacuum canisters. Press this button to start vacuuming bottle or canister when the light is flashing. As soon as a certain negative pressure will be reached, it will stop automatically.

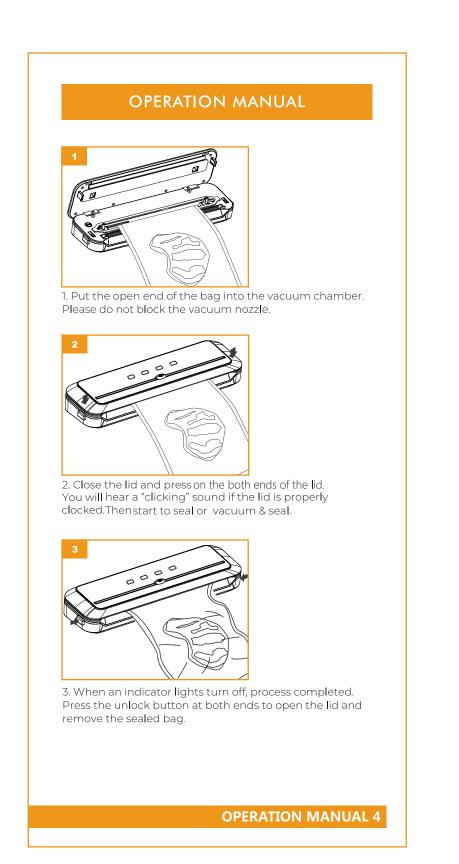

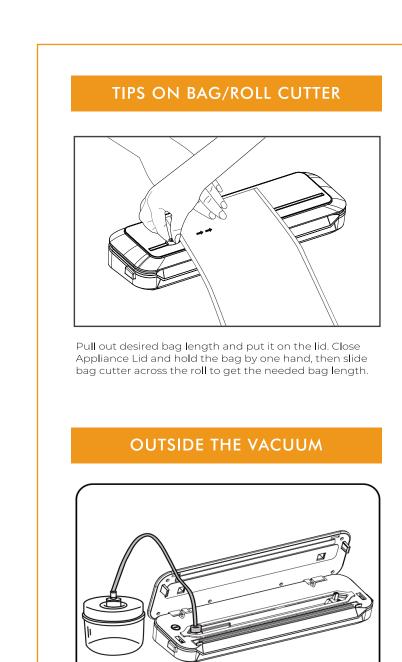

It can be connected to the vacuum preservation tank, vacuum zipper bag, and wine stopper via the vacuum tube to keep the food or wine in the canisters fresh.

5 TIPS ON BAG/ROLL CUTTER

(1) Nothing happens when the power cord is plugged into A. Make sure the power cord is not damaged. B. Make sure the power cord is correctly plugged into the electrical

outlet and appliance. (2) The appliance is plugged in but cannot vacuum. A. Ensure the lid is accurately closed. B. Ensure the opening end of the bag is correctly installed into the vacuum chamber. C. If the indicator lights are flashing, the appliance may become overheated. Allow it to cool down for several minutes before using it

D. Check if the bag is punctured. E. Check if the foam sealing gasket is deformed or cracked. (3) The bag was vacuumed, but the air has re-entered. A. Check if there is a hole or puncture on the bag. It may be punctured by sharp objects. Use a new bag if necessary. B. Check the sealing seam. Any wrinkle along the sealing seam may cause air re-entering. If yes, simply cut the sealed edge and C. If there is moisture or liquid at the opening end, cut the bag and wipe it away. Then choose MOIST FOOD setting and reseal.

D. If the food has been stored for a long period of time and the bag

is full of gases, it may spoil and it is suggested to discard the food. 1. To prevent the overheating, allow the appliance to cool down for 60 seconds before the next use. Keep the lid opened to accelerate heat 2. If the bag melts, the sealing strip may be overheated. Allow the appliance to cool down for 60 seconds before the next use. 3. For the best preservation, do not reuse the bags after storing raw meats, fish or greasy foods. Do not use again bags after simmering or microwaving.

1. Unplug the appliance before cleaning. food or liquid on the vacuum chamber with paper towel. 3. Dry the appliance thoroughly before using it again.

seal, gently stretch bag flat before placing it into the vacuum chamber and closing the lid. 4. Ensure the bag is dry. It will be difficult to make a tight seal if the bag is wet. 5. Vacuum sealing process is NOT a substitute for the heat process of canning. For best results, perishables still need to be frozen or refrigerated. 6. When you are vacuum sealing items with sharp edges (such as dry spaghetti, silverware, etc.), protect the bag from punctures by wrapping the item in a soft cushioning material, such as a paper towel. You may use a canister or glass jar instead of a bag. 7. When using accessories, always leave 2.5 cm / 1 inch of space

at the top of canister. 8. Pre-freeze fruits and vegetables before vacuum sealing for the 9. Allow the appliance to cool for 1 minute between uses to avoid activating overheating protection. 10. If you are not sure whether your bag was sealed properly, 11. For best results, use only with MegaWise bags, containers and 12. Microwave: Make sure the bag is punctured before heating by

1. Avoid overfilling, always leave at least 7.6 cm / 3 inches of bag

material between bag contents and top of the bag. Leave at least

one additional inch of bag material for each time you plan to

2. Clean the opening end of the bag inside and outside. Flatten

3. While vacuum packaging large items, to prevent wrinkles in the

the bag opening.

2. Wipe the outer surface with a soft soapy cloth. Wipe away any 4. Do not immerse the appliance in water or other liquids. Prevent water or other liquids from entering the AC power port on the 5. Do not clean the appliance with abrasive cleaning agent


to avoid damaging the surface. NTC Thermistor-temperature sensor: Control the temperature of the appliance. Protection mode will be activated automatically if the appliance becomes overheated while lights starting to flash and the operation will be unavilable. When lights stops flashing the appliance will be back to normal mode once cooled.




Eggs 10-15 Days 30-50 Days Meat 3-5 Months 1 Year Seafood and Fish 3-5 Months 1 Year Bread 1-2 Days 6-8 Days Rice/ Flour 3-5 Months >1 year Peanuts/ Beans 3-6 Months >1 year Tea Leaves 5-6 Months >1 year

PACKAGE CONTENTS

4 Bag 10

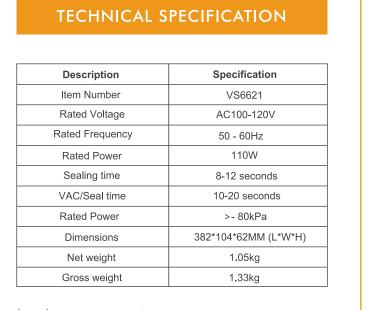

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

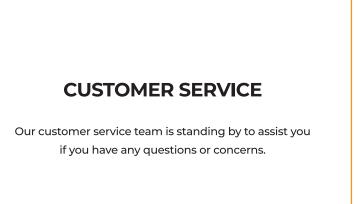



www.megawise.com/M6 support@megawise.com megawise.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



