

## Read before use

Thank you for choosing our hearing devices! Before using the device, please read the following matters carefully.

 Application: The hearing device is intended to amplify and transmit sound to the ear and thereby compensate for mild to severe impaired hearing.

2. Before using your hearing device for the first time, it is recommended that you charge it for 2 hours.

3. The hearing device apply without earplugs.

4. Use 4-8 weeks to adapt quality sound with your new hearing device. The more you wear them, the more comfortable your ears feel it.

01

# **Contents**

What included
Know the device
How to charge
Use the device
Maintenance
Troubleshooting
Technical parameter

## 02

## Use the device

#### How to wear the hearing devices

- 1. The hearing devices apply without earplugs.
- 2. Gently insert the hearing devices into the ear.



#### How to turn ON/OFF your hearing device

1. Turn ON/OFF Automatically

Turn ON: When taking the hearing devices out of the charger case, the indicator light on side of the device flashes green 3 times indicating auto turn ON.

Turn OFF: When putting them back in the charger case, they turn OFF automatically and are in charging status.



AUTO OFF



Press and hold the button for around 7 seconds, the indicator light flashes green 3 times indicating turn ON/OFF.

#### Adjusting sound volume

Short press multi-function finger touch button to increase/decrease volume. You hear 'Beep Beep' after each press of the button. When you hear 'Beep Beep Beep', means it reaching the maximum volume.

Tips: The hearing devices have memory setting to keep the previous volume after turning OFF.

08



Manually ON/OFF

## Maintenance

Keep your hearing aid and charger case clean. Heat, mo foreign substances can result in poor performance. 1. Wipe daily with tissue.

 Clean regularly with cleaning brush to remove debris cleaning brushes to remove debris blocking the micropl
Avoid physical shock like dropping your hearing aids surface.

Avoid exposure to moisture or heat and store in a coordinate to the store of the st

6. Charging contacts should always be kept clean and d 7. Do not take apart your hearing aids or insert the clean inside them.

When not in use, place your hearing aids in the charg store.

9. Away from direct sunlight or heat to avoid extreme ten

09





· · · · · · · · · · · · · · · · · · ·											
	Troubleshooting								Technical parameter		
moisture and	Symptom Possible cause		Solution		Symptom	Possible cause	Solution		Product Parameters		
	Cymptom		Coldion		Oymptom				Maximum Sound Output	≤115dB <sup>.</sup>	
s. Use the		Volume may be turned down	Turn up the volume			Too high volume	Turn down your hearing aid volume		Average Sound Output	113dB:	
ohone. on a hard ool, dry place. ean your	Not loud			Whistlin					Maximum Sound Gain	35dB±	
		Low power or power off	Recharge			Too much earwax	Get your ears cleaned	Av	Average Sound Gain	30dB±	
			Turn on hearing instrument		Whistling	Something interference	Don't put the finger, mobile phone or other things close to the microphone on the device		Equivalent Input Noise	≤29dB+	
	enough								Frequency Range	200Hz~5	
d dry. eaning tools									Total Harmonic Wave Distortion	≤5%	
0		Microphone is blocked with debris	Clean both microphone and receiver with brush						Battery	Lithium b	
arger case to									Working Current	≤5m/	
temperatures.									Single Device N.W.	3.45g (0.	
	10				11				12		

