



AL0005-GrH Assembling Instruction

				1		2																	
A		B																					
C		D																					
E		F																					
G		H	<table border="0"> <tr> <td>H1</td> <td>6*20</td> <td></td> <td>*4</td> </tr> <tr> <td>H2</td> <td>6*25</td> <td></td> <td>*4</td> </tr> <tr> <td>H3</td> <td>6*30</td> <td></td> <td>*2</td> </tr> <tr> <td>H4</td> <td>8*30</td> <td></td> <td>*4</td> </tr> <tr> <td>H5</td> <td>4*25</td> <td></td> <td>*2</td> </tr> </table>					H1	6*20		*4	H2	6*25		*4	H3	6*30		*2	H4	8*30		*4
H1	6*20		*4																				
H2	6*25		*4																				
H3	6*30		*2																				
H4	8*30		*4																				
H5	4*25		*2																				
				3		4																	
				5		6																	

The electronic installation manual is available on our website. (www.voffov.com)