



ensure data safety.

cloth to maintain its clarity.

Usage Restrictions: Please strictly adhere to the relevant laws and regulations of the state and refrain from using this product for any illegal purposes. Failure to comply may result in you being held responsible for the consequences.

Battery Usage: As the device's usage time increases, the battery's working duration will be reduced. If the product has not been used for an extended period, kindly ensure to fully charge it before use.

File Security: This product is not intended for professional storage purposes. We strongly recommend backing up important files on your computer or other storage devices to

Operating Conditions: The recommended working temperature for this product is between -5 $^{\circ}$ C and 40 $^{\circ}$ C. Maintain a working humidity of 20%-80% and avoid exposing the device to high levels of moisture as it does not have a waterproof function.

Photography Illumination: Always use the product in well-lit 12.Camera Lens environments. Avoid pointing the camera directly at strong ligh sources like the sun to prevent damage to the optical compo

Cleaning Requirements: Refrain from using the device in areas with excessive dust density to avoid contamination of 17.Back Bracket the lens and other parts, which can adversely impact camera performance. Clean the lens gently with lens tissue or a lens

After you power on the device, you ca short-press the power button to light on or off the screen.

approximately 3 hours before using it for the first time. The indicator light will turn blue during charging and will go off once POWER ON/OFF: Simply press and hold the power button for about 3 seconds. The green light will turn on, and you'll hear voice prompts. the device has entered standby mode. Press the button for about 3 seconds again, and the device will power of Light ON/OFF Screen:

Adjust camera angle

Please connect the device to your

 
phone charger or computer using a

Power on the device(a), then guickly press the video button once(b). You'll hear a voice prompt, and the red light will flash slowly to indicate that it's now recording. To stop the recording and save the video, simply press the video button once again. You'll hear another

been stopped and the video has been

Quick Video Record: If the device is powered off, you can

once you do this.



initiate video recording by performing

approximately 3 seconds. The device

will automatically start recording video


long press on the video button for

Video Recor

Normal Way:

Power on the device, then quickly press the audio button once. You'll

been stopped and the audio has been saved.

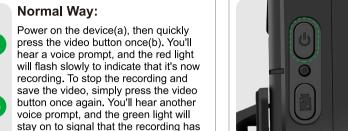


Power on the device, then quickly press the photo button once. You'll hear a voice prompt, and the red light will flash once to indicate that it's now taking a photo and saving automatically.

Take Photo

hear a voice prompt, and the vellow light will flash slowly to indicate that it's now recording. To stop the recording and save the audio. simply press the audio button once again. You'll hear another voice prompt, and the green light will stay on to signal that the recording has

alarm button again, and the flashing lights will stop.

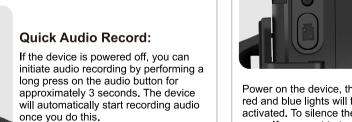

Power on the device, then quickly press the alarm button once. The red and blue lights will flash alternately while an alarm sound is activated. To silence the alarm sound, press the alarm button once more. If you want to turn off the alarm lights as well, simply press the

2. Press the Album button ((🔎)) again to choose the "Video." "Photo. or "Audio" option you want to view. After selecting, press the Confirm

button ((0x)), and you will be able to access your videos, photos, or

audio files, on the "file list page". Short press the Confirm button (6) reader into your MAC computer to transfer 3. During playback, you can use either the Album button ((iii)) or the

Menu button (M) to fast forward or rewind the media. 4. If you want to delete a video, short press the Video button back to

last step, and enter the "file list page" (see the last picture above), then ong press the Album button((•ii)) for about 3 second You will see the option "YES" or "NO", choose " YES", and press

After capturing a video, photo, or recording audio, simply press the

Album button (()), and you'll see the "Video," "Photo," and "Audio"

 
Confirm button ((ok)) to delete the file that you want,

Power on the device. Long press the photo

low-light or dark conditions.

button to manually turn on the night vision

function, allowing you to capture images in



How to playback on the local device

Click into the "file" folder on your iPhone, yo will enter the Browse interface, click" Browse" on the top, and then you will see a " NO NAME" device display on the "Locations" menu Click on NO NAME, and you will find your video and photo files there.

come with Lightning adapter and your iPhone.

come with card reader, and connect it to the

nnect the body camera device to you computer directly, no need to take out the The device will be recognized as a drive, oper

it and you will see the "video", "Photo", and

Take out the MicroSD card plug it into the come with card reader, then plug the card


202307290128 0013 mg f the device encounters any issues like 202307290129 0014. m

reezing, inability to record, or not ınctioning under normal circumstance please perform a quick press on the reset button to initiate a reset.

NOTE: Press the" video button" once back to the last step or exit the menu


How to watch videos and photos on phone of

 How to change the date and time?



2. Short press the Album button (🕪) until you find the "Date & Time" setting. The press the Confirm button to enter the

off" option, short press

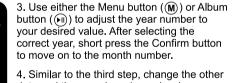

automatically use the updated settings for

1. Short press the Menu button (M) to

access the setting management

changing state for date and time.

date and time numbers (e.g., day, hour, minute) using the Menu button or Albur outton until they reflect the correct settings Short press the Confirm button after

adjusting each value to proceed to the next Once you've set the new date and time, any new video recordings vou make wil

press the Confirm button and choose the already recorded. The length that you need, it change will be applied to

How to turn off the date stamp watermark

confirm button again.

Album button (()) until that the new video length

can be 5- 30 minutes. all new videos captured

any videos that you have



Menu button ((M)) to button ((N)) until you find video, you will see 1. If you want to use a new MicroSD card 64G, 128G, or 256G.


please back up your file. The device will format the new card button and choose the " the new video.

 
ail: sixmou_kevin@out**l**ool

 
will be locked, and it can not be deleted on the device. You will see there is a "warning" icon marked in the file.

Video resolution Video frame rate 30FPS Operating system built-in or mainstream audio and Playback software

How to turn off the indicator light and button sound?

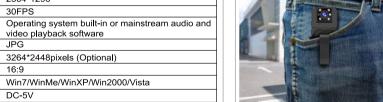







2. If you Press the Menu button (M) while recording, the video file . At the neckline of the clothes. 2. Clothes pocket, clip is outside clip is outside (the best position)



















