



# SLOW JUICER

## USER MANUAL

[WWW.MYKOIOS.COM](http://WWW.MYKOIOS.COM)



# CONTENTS

CUSTOMER SERVICE .....	01
PRODUCT OVERVIEW .....	02
ASSEMBLING GUIDANCE .....	04
USING THE SLOW JUICE .....	06
FUNCTION PANEL GUIDANCE .....	07
DISASSEMBLE .....	08
CLEANING AND MAINTENANCE .....	10
SAFETY PRECAUTIONS .....	11
TROUBLESHOOTING .....	15

# CUSTOMER SERVICE

Our customer service team is standing by to assist you if you have any questions or concerns.


 Scan the QR-code to start chatting (live chat):

Scan QR Code & Start Chatting



1-855-558-8777  
support@mykoios.com  
www.mykoios.com

## COMPONENTS NAME

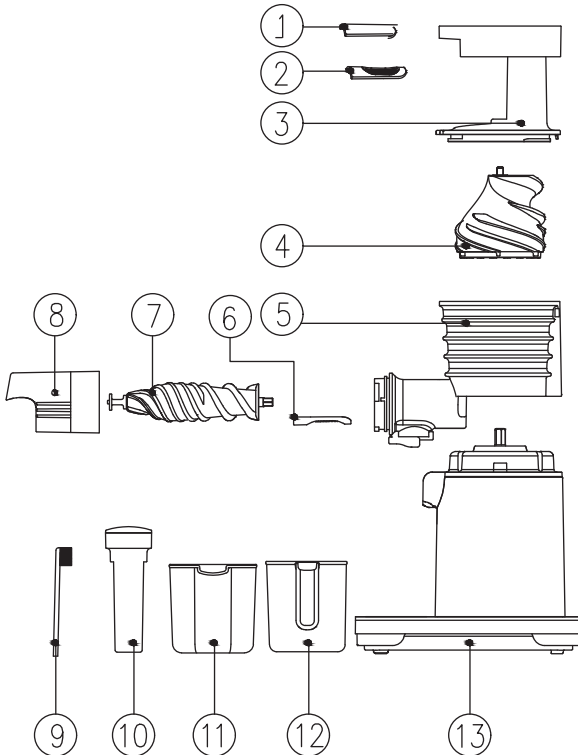


No	Name
01	Strainer (round)
02	Strainer (strip)
03	Feeding Tube
04	Vertical Auger
05	Juice Bowl
06	Strainer (Round)
07	Horizontal Auger
08	Pulp Outlet
09	Brush
10	Pusher
11	Pulp Container
12	Juice Container
13	Body

## 03 PRODUCT OVERVIEW

### COMPONENTS NAME


Model No.	SJE-011
Voltage	120V
Rated Frequency	60Hz
Rated Power	200W
Continuous Working Time	20mins/time
Motor Speed	40-65RPM

## ASSEMBLING GUIDANCE 04

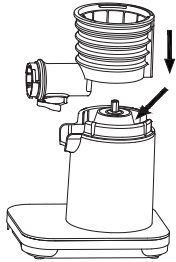


### 1. Juice Bowl:

Put the juice bowl in the main body and install it properly until it is fixed well.

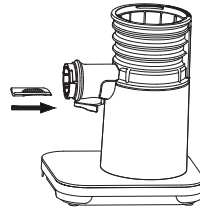


### 2. Strainer:

Insert the strainer into the flute until it is fixed well.

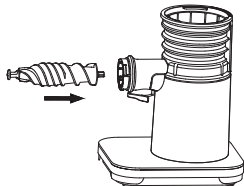

### 3. Horizontal Auger:


Insert the horizontal auger into the center hole of the juice bowl and rotate it clockwise until it is fixed.

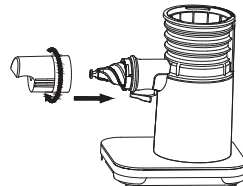

### 4. Pulp Outlet:


Find the "▲" symbol on the pulp outlet, keep it against "♣" symbol depicted on a juice bowl, then rotate it clockwise to fix it against "♣" symbol

## 05 ASSEMBLING GUIDANCE

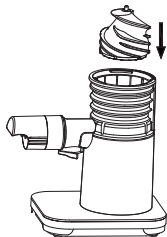


### 5. Vertical Auger:

Put the vertical auger into the juice bowl and rotate it properly until it is fixed.

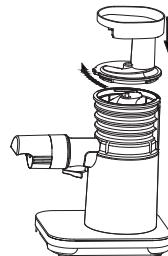

### 6. Feeding Tube:

Find the "▲" symbol on the feeding tube, keep it against "☒" symbol depicted on a juice cup, then rotate it clockwise to fix it against "🔒" symbol.

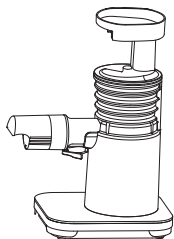

7. Assembling is finished!



### FUNCTION PANEL:



Check if the voltage indicated on the appliance is corresponding to the local mains voltage before you connect the appliance.

## 07 FUNCTION PANEL GUIDANCE


1. Check if the voltage indicated on the appliance is corresponding to the local mains voltage before you connect the appliance. Plug in the power cord to an approved power source. When the appliance is powered on, all the green light will keep flashing for 1 second, Bi-directional keeps for 1s; "ON/OFF" red flashing in red color 0.5 seconds, other LED buttons are not displayed.

2. Hard Function: After the appliance is plugged in, press the "ON/OFF" LED button for 2 seconds to turn it ON. The red light remains ON, other LED buttons are not displayed. Once the appliance is turned on, press "HARD" and the appliance will start to perform the specified procedure. While the juicer is in use, the green light remains ON, other LED buttons are not displayed. Press the "ON/OFF" button to stop the juicer.

3. Soft Function: After the appliance is plugged in, press the "ON/OFF" LED button for 2 seconds to turn it ON. Press "SOFT" and the appliance will start to perform the specified procedure. While the juicer is in use, the green light remains ON, other LED buttons are not displayed. Press the "ON/OFF" button to stop the juicer.


4. Rev: After the appliance is plugged in, press the "ON/OFF" LED button for 2 seconds to turn it ON. Press "REV" and the appliance will start to perform the specified procedure. While the juicer is in use, the green light remains ON, other LED buttons are not displayed. Press the "ON/OFF" button to stop the juicer.

5. Stop and switch: If you need to switch the function to "HARD", "SOFT", "REV" or to turn "ON/OFF" the appliance, just press the appropriate LED button. (Note: please press the "ON/OFF" LED button gently to stop the juicer)

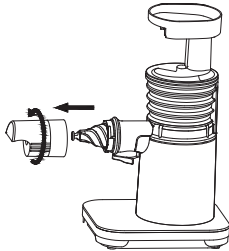


### 1. Pulp Outlet:

Rotate the pulp outlet counterclockwise, when the "▲" symbol on the pulp outlet reaches the "⊞" symbol depicted on a juice bowl, take the pulp outlet out.

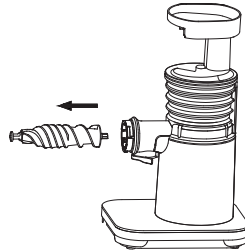


### 2. Horizontal Auger:

Take the horizontal auger out from the juice bowl in a horizontal position.

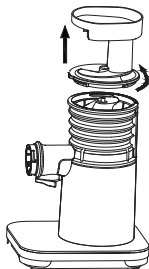

### 3. Feeding Tube:


Rotate the feeding tube counterclockwise, when "▲" symbol on the feeding tube reaches the "⊞" symbol depicted on a juice bowl, take it out.

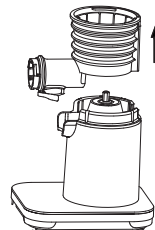

### 4. Juice Bowl:


Take the juice bowl out from the main body.

## 09 DISASSEMBLE

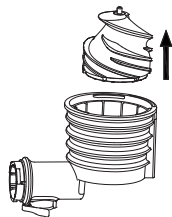

### 5. Vertical Auger:



Take the vertical auger out from the juice bowl.

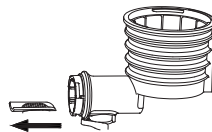



### 6. Filter:

Take the filter out from the flute in a horizontal position.

1. All removable parts below can be cleaned in the sink directly under the faucet;

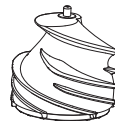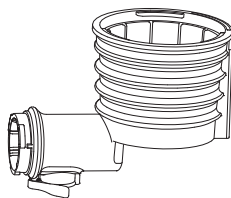

 2. If the strainer can not be cleaned clearly by the water, please use a brush

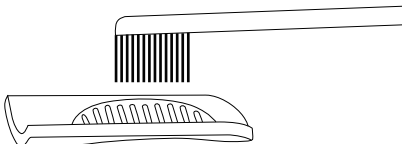

## 11 SAFETY PRECAUTIONS

When using the electrical appliance, basic safety precautions should always be followed. Failure to follow the safety warning may result in an accident. Please follow the warnings as stated below:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge;
- This product is strictly prohibited for no-load operating or overload operating;
- Do not place the appliance on an unstable surface. Before using the product, please ensure that the surface is flat, stable and clean.
- Keep the appliance away from children.
- This appliance is only for home use, not for commercial. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply;
- Do not move or touch the operating parts. Make sure the motor stops completely before disassembling to avoid any injury;
- Do not let the power cord hang over a sharp edge and avoid contact with moving objects;
- Keep the distance between this product and other kitchen appliances not less than 30CM;
- All parts are not allowed to put into the disinfection cabinet, high-temperature oven, or boiling water;
- Do not push food with fingers, rice spoon, chopsticks and etc. For this purpose the pusher can be used only;
- Do not use inferior socket to avoid causing fire or personal injury;
- Never place or use the appliance on a hotplate or near an open flame (gas cooker);

## SAFETY PRECAUTIONS 12

- If the plug or other parts get any cracks or damage, do not use the appliance and contact the professional service personnel for repairing;
- Always disconnect the appliance from the supply before assembling, disassembling or cleaning and if it is left unattended;
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard;
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision;
- Do not use accessories and components that do not belong to this product to avoid fire or personal injury;
- Cleaning and maintenance shall not be made by children without supervision;
- Make sure the voltage mark on the appliance corresponds to the voltage at your home before plugging in the power cord in order to avoid damage to the appliance;
- Please ensure that the product parts are clean before using the product to avoid corrosion;
- If the appliance can not perform properly, please refer to the following page "Troubleshooting" guidelines. In case it still can not perform properly, please contact our customer support service for assistance. Do not disassemble by yourself;
- This product is not intended for crushing dry goods, such as dried soybeans, rice and so on;

## 13 SAFETY PRECAUTIONS

Precautions	Reason
Do not crush the ice	Too hard substance, it will damage the juice bowl.
Do not crush dry goods and hard food	Too hard substance, hard to be crashed, easy to get the internal parts broken.
Crude fiber, please cut it into 5-10CM pieces	It's easy to wind fiber pieces that are too long. That will cause the appliance internal parts to get damaged.
Please use a strainer (strip) for soft fruit	The soft fruits juice is very thick, using small mesh may stuck the juicing process. That causes juice can not flow out.
Please choose slow speed for soft fruit juicing	The soft fruits juice is very thick, using the high speed will cause the juice can not flow out quickly.
Fruits that have a hard core must be used after removing the core.	It may cause the appliance internal parts to get damaged.



## SAFETY PRECAUTIONS 14

<p>Use the pusher only to push food. Do not push food with fingers, knife, spoon, chopsticks and etc.</p>	<p>It may cause personal injury or the appliance to get damage.</p>
<p>Appliance maximum operating time should be less than 20 minutes</p>	<p>If operating time is too long, the motor will exceed the normal operating temperature, and that will affect the motor's lifetime.</p>
<p>Please do not put the squeezed fruit pulp into the juice cup for re-juicing</p>	<p>That may cause pulp stuck.</p>
<p>Do not put the fruits dunked by wine, honey, sugar and so on into the juice bowl</p>	<p>That may cause: the juicing cup can't be opened easily.</p>
<p>After the juicing process has been finished, try to enjoy it as soon as possible</p>	<p>The organic juice is easy to be oxidized, keep that in mind.</p>
<p>It's a normal phenomenon if you hear the friction sound while the juicer is operating</p>	<p>Normal phenomenon.</p>
<p>Please control the feeding speed while juicing as cup level can not exceed the max scale</p>	<p>As fruits in the juice bowl need long-time juicing, the juice flows out slowly. If the feeding process will be too fast, that will cause fruit juice overflow.</p>
<p>It's a normal phenomenon if the juicer has slightly deformed during the juicing process.</p>	<p>The juice bowl can be slightly deformed when the juicing fruits and vegetables are large.</p>

## 15 TROUBLESHOOTING

No	Issue	Solutions
1	The appliance parts do not operate	Check the power cord and power supply Check if all parts have been assembled correctly
2	The appliance stops operating	Check the food chute is clear and is not blocked Check if hard seeds have been removed before juicing and are not stuck in the machine
3	The appliance stops operating during the juicing process	Whether put too many foods inside? Press "Rev" to make this machine working in the opposite direction. If the appliance still doesn't work, take the food out, and cut it into small pieces first, then put it inside again repeat the procedure.
4	Leaking from underneath the bowl	Ensure if the silicone layer is tight enough after the last cleaning.



KOIOS

[WWW.MYKOIOS.COM](http://WWW.MYKOIOS.COM)



Made in China