

▶▶ CONTENTS OF PACKAGE

- 1 Speaker
- 1 Remote control
- 1 Wireless microphone
- 1 Instruction manual
- 1 Shoulder strap
- 1 Power cable

NOTE:

- Bluetooth connection method: Turn on the speaker, press the 'M' key on the speaker panel, and the screen will show 'BLUE'. Use your phone to connect the Bluetooth of the speaker. The Bluetooth name is VS-0803. If the connection fails, please restart the device or the phone and try again. The use range of the Bluetooth is 32ft in the open area.
- Music files in USB and TF cards should be formatted as FAT32 on the computer. Copy MP3 or WMA music files to USB/TF cards. It is recommended to delete unnecessary files and folders to speed up card reading and reduce card reading problems.
- The charging time should be 6 ~ 8 hours. After being fully charged, unplug the power supply to avoid damage to the battery due to long-term charging. If the battery is used out, please recharge the battery within 48 hours. Do not leave the empty battery for a long time, otherwise the battery will be damaged.

MADE IN CHINA



Please read the instructions carefully before use

4

1

▶▶ REMOTE CONTROL

1. Power

To power on/off the machine

2. Play/Pause

To play/pause the playing music or start FM scan to store local FM channels

3. EQ

Choose from 5 pre-set EQ modes

4. Numeric Keypad

Select a song when plugged into USB/SD card or set FM channel under FM mode

5. Mode

Mode change (AUX/Bluetooth/FM/USB/SD)

6. Mute

To mute the music

7. Prev

Previous song or previous FM channel

8. Next

Next song or next FM channel

9. Vol.-

To decrease the volume

10. Vol.+

 
To increase the volume

11. Repeat


To start or stop the current repeating (only for USB/SD mode)

12. USB/SD

To switch USB or SD card mode

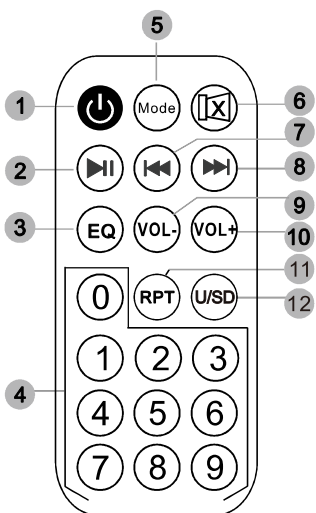

▶▶ PLAY PANELS

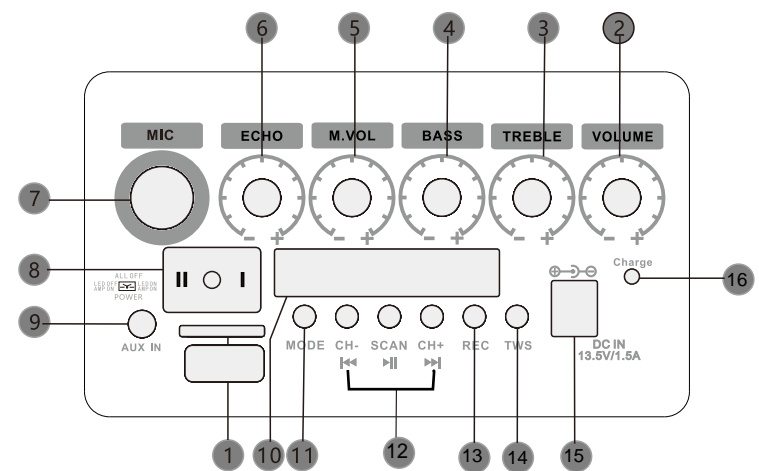 

1. SD/USB port

Only supports cards of FAT32 and maximum capacity of 32GB.

2. Music Volume

Adjust the volume of music

3. TREBLE

Adjust the treble effect of music

4. BASS

Adjust the bass effect of music

5. Mic Volume

Adjust the microphones volume

6. ECHO

Adjust the echo effect of microphones.

7. Main Volume control

Turn the knob to adjust the volume of speaker.

8. Power Switch

" II " means power on and LED off,

" | " means power on and LED on,

" O " means power off

9. AUX IN

Plug into a 3.5mm(1/4") Aux cable or a TV

Audio to Aux cable to play the music from your device.

10. LED Digital Display

Show the battery power, FM frequency,

Modes and music play-time.

11. Music Modes

• **Line-in mode:** Use the cable included to connect the machine to your TV or other devices.

• **Bluetooth mode:** Connect your phone or other devices via bluetooth to the machine.

• **FM mode:** Search radio or music from FM radio stations.

• **USB or SD mode:** Insert USB or SD card to play the stored music from cards.

12. Music and FM Controls

• **Music Controls**

-PRVE Previous song

-PLAY Play/Pause

-NEXT Next song

• **FM Controls**

-PRVE Previous stored channel

-PLAY Hold down the button to start FM scan to

store all local channels

-NEXT Next stored channel

13. Record Function

Press the button to record your voice (mics sound only)

Insert USB or SD card first, and press REC. Then

speaker or sing with the mics on. When finish, press

again to stop the recording. Finally, unplug and replug

into the USB or SD card to automatically begin the recording.

14. TWS

15. Power Input

Use the 13.5DC power cable (included) to charge the machine.

16. Charging Indicator

When charging, the light shows red. And the light turns green after full charging.

3

2