


User's Manual

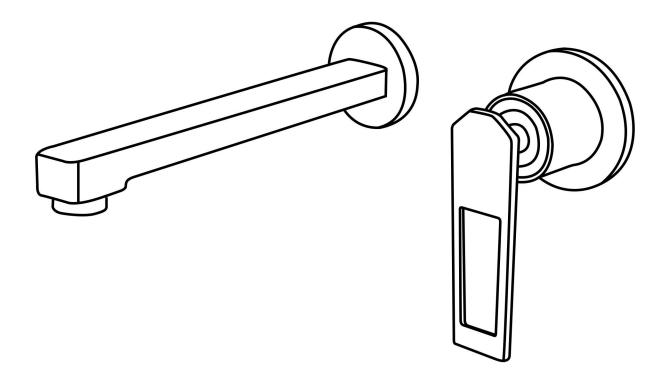

INSTALLATION INSTRUCTIONS

Installation Manual



RB0894













IAPMO RESEARCH AND TESTING, INC.











IAPMO RESEARCH AND TESTING, INC.












INSTALLATION STEPS

This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.




Before installing the product, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the product.



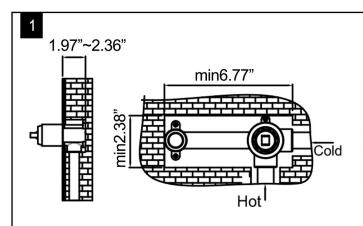



1.The wall opening Min size of the main valve body is 6.77"x2.38" and the depth is 1.97". Note: The depth dimension is the size of the tile after the wall is finished. If installing on the wall embryo, please reserve the appropriate tile thickness.

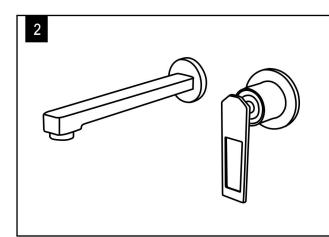

2.After installing the main valve body, the water to be tested is completed, and the pipeline and the main valve body can be covered after confirming that there is no leakage.

► Installation Dimension

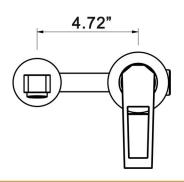

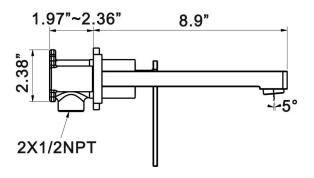

CLEANING CARE

In order to keep the appearance of product clean, bright and good performance, please take care of the product as follows;

- 1. Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect:



- 4.Do not use acid cleaner, or cleaner and soap with insoluble gran etc;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show,

The bubbler can be unscrewed, rinsed with water, and then installed back in place.





Please feel free to contact us if you have any questions. We will help to solve the issue together with you. OUR EMAIL: services@rbrohant.com





Service Contact:

+1(801) 800-9309 services@rbrohant.com

Made in China