INSTALLATION INSTRUCTION



via Amazon before returning

Safety Caution

Please read this instruction carefully before installation. If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, please contact us.

- This product is designed for use in wood stud or solid concrete wall. - DO NOT install into drywall alone.
- The wall must be capable of supporting five times the weight of the TV and mount combined. Incorrect installation may result in product damage / property damage or body injury. We shall bear no responsibility for any damage or injury resulted from incorrect installation, incorrect assembly or misuse.

WARNING: This product contains small items that could be a choking hazard if swallowed. Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the damaged item to your dealer; please contact our customer service team. Never use damaged parts!



Must Check Before Getting Started

Minimum VESA Pattern (W × H): 150mm × 100mm / 6 in × 4 in **Maximum VESA Pattern** (W × H): 800mm × 400mm / 32 in × 16 in



WARNING

DO NOT exceed the maximum weight indicated. This mounting system is intended for use only withir the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in failure of the mount and its accessories, causing possible damage or injury.

Verify Your Wall Construction



CAUTION:

Avoid potential personal injuries and property damage! Drywall covering the wall must not exceed 5/8 in. (16 mm). Minimum wood stud size: nominal 2 x 4 in. (51 x 102 mm) actual 1 ½ x 3 ½ in. (38 x 89 mm).



CAUTION:

Avoid potential personal injuries and property damage! Mount the wall plate assembly directly onto the concrete surface (no surface covering).



Ø Φ7/32"

Wood

Drill Bit

Stud Awl

Finder

Ф3/8"

Drill Bit

Band

Tape

Socket

Wrench

Screwdrive

Product Dimensions



F





! CAUTION: DO NOT install into drywall alone.

Attach Brackets to TV

A Horizonta Ð Ð B B D 2-1 Assemble two Wall Plates (H) with Bolts (D), Washers (E) and Nuts (F). Keep the upside of the two Wall Plates (H) horizontal, and then use Wrench (G) to fasten the Nuts (F). G 2-2 Buckle the Wall Plate Cover (K) on the Wall Plate (H). 203mm / 8" 406mm / 16" 610mm / 24"

813mm / 32"

2 Assemble Wall Plate



insert the holes on two brackets respectively. Leveling Adjustment \otimes 🛕 Unlevel Turn the screw on the lower bracket clockwise until the TV is level. (Maximum leveling adjustment 15mm) Clockwise T1 🛕 Level

-15°

Ř

0

Option

To keep TV in vertical position,

please use two M4 screws (MA) to

Looser

MA