



Driving Tips & Transmitter

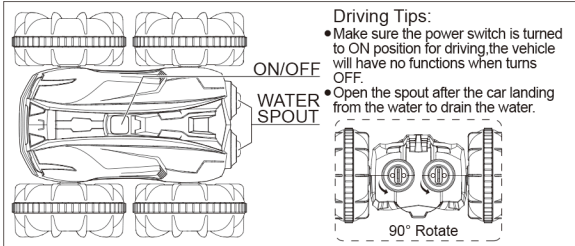

Driving Tips:

- Make sure the power switch is turned to ON position for driving, the vehicle will have no functions when turns OFF.
- Open the spout after the car landing from the water to drain the water.

ON/OFF
WATER SPOUT
90° Rotate

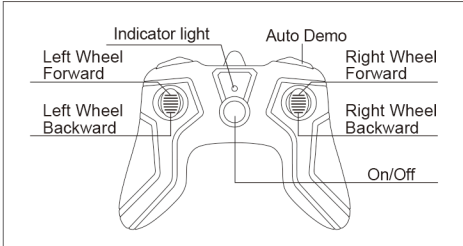


Indicator light Auto Demo
Left Wheel Forward Right Wheel Forward
Left Wheel Backward Right Wheel Backward
On/Off

Battery Installation

1. Open the vehicle's battery cover, install the battery pack and connect to the vehicle.
2. Open the transmitter's battery cover, install 2X1.5V "AA" batteries with correct polarity as shown inside the battery compartment. (NOT INCLUDED)
3. Replace the battery cover and tighten screw with a screwdriver.


Battery Installation for Vehicle

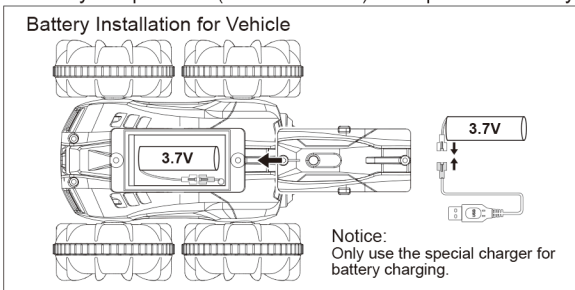

3.7V

Notice:
Only use the special charger for battery charging.

Battery Installation for Transmitter

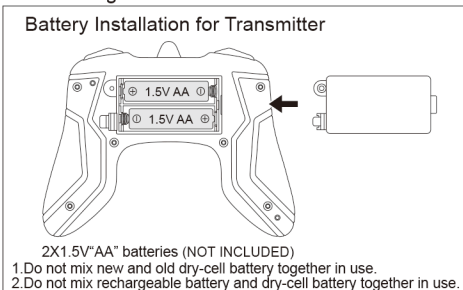


1.5V AA
1.5V AA

2X1.5V "AA" batteries (NOT INCLUDED)

1. Do not mix new and old dry-cell battery together in use.
2. Do not mix rechargeable battery and dry-cell battery together in use.

Operation Manual of Remote Control

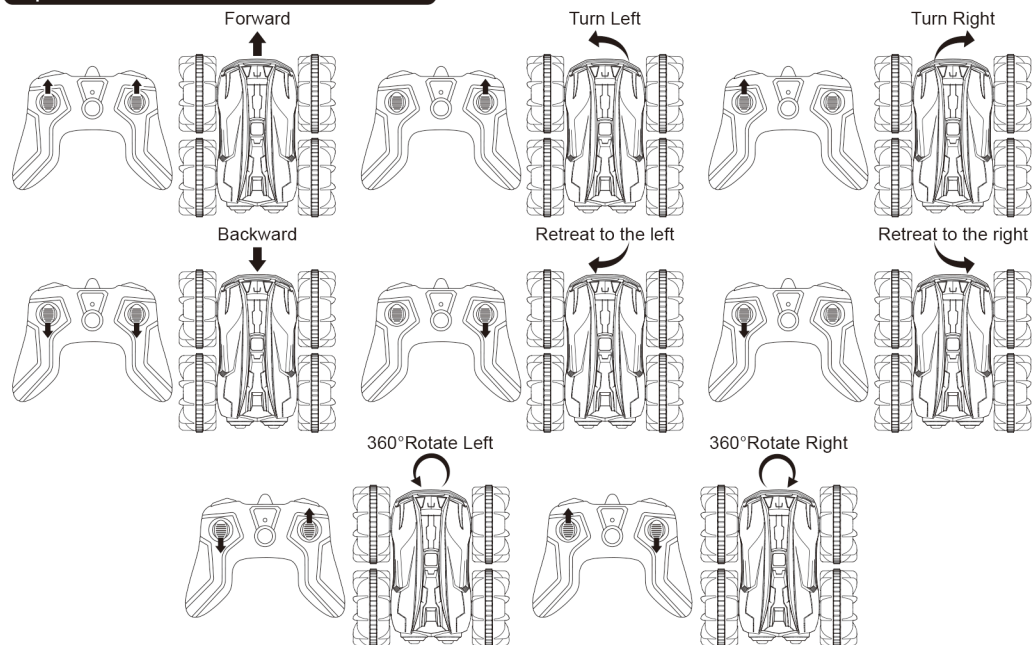

Forward
Backward
Turn Left
Retreat to the left
Turn Right
Retreat to the right
360° Rotate Left
360° Rotate Right

Bind the transmitter to the receiver: The indicator lights on after the body power is connected. The indicator flashes when the remote controller is connected with power supply and lights go out after the frequency alignment is completed. The indicator lights on when operation. Switch the power OFF on the transmitter and vehicle after use, prevent power from consumption.