


Use Instructions

Power button on vibrator:

- Press and hold power button for 3 seconds to power on/ off. Press repeatedly to cycle through 3 speeds and 7 patterns of vibration.
- Press and hold inflation button to inflate plug.
- Press deflation button to deflate plug.

Note: Plug will automatically deflate when plug is powered off.

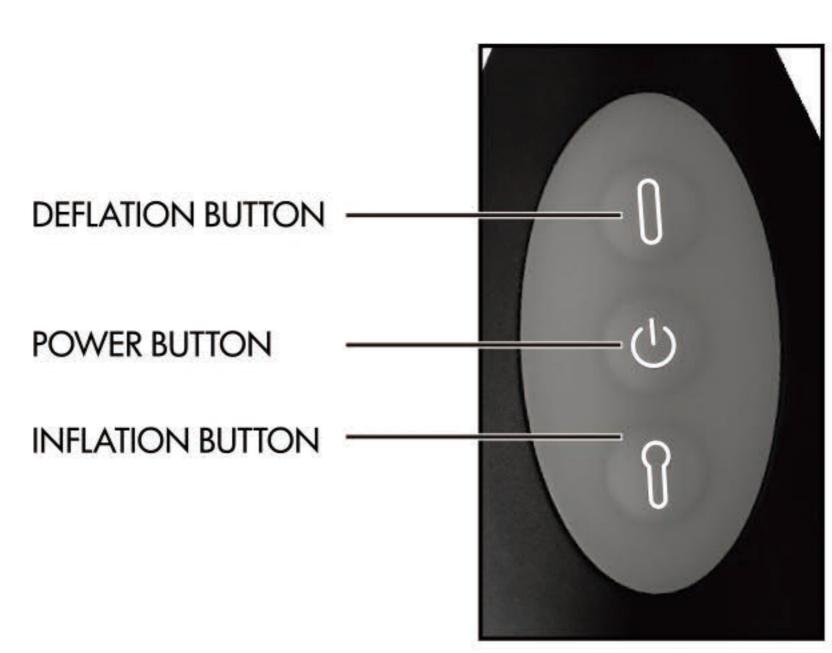

Remote Buttons

Press and hold to inflate plug. Quickly double-press to deflate plug.

INFLATION BUTTON



Press to turn on vibration.
Press repeatedly to cycle through 3 speeds and 7 patterns of vibration.
Press and hold for 3 seconds to stop vibration.
ely.

VIBE BUTTON

Remote Battery

Remote Control requires 1x CR2032 (included)

Charging Instructions

base and connect to USB port or adapter. Control panel will flash while charging. Remove from charger promptly once fully charged.

Insert jack pin into dimple at



Lube compatibility: Water-based

Use with water-based lubricant.

Wash with warm water and toy cleaner after each use.

dual motors

Air or pat dry and store in a cool, dry location, away from direct sunlight and separated from other toys.

Product Information

Material: Silicone + ABS plastic Battery type: Li-ion battery

Charging time: 2 hours Voltage: 3.7v

Running time: 1 hour Remote distance: 25 ft

Functions: 3 speeds + Waterproof IPX5 7 functions;