


T1 Quick release installation guide

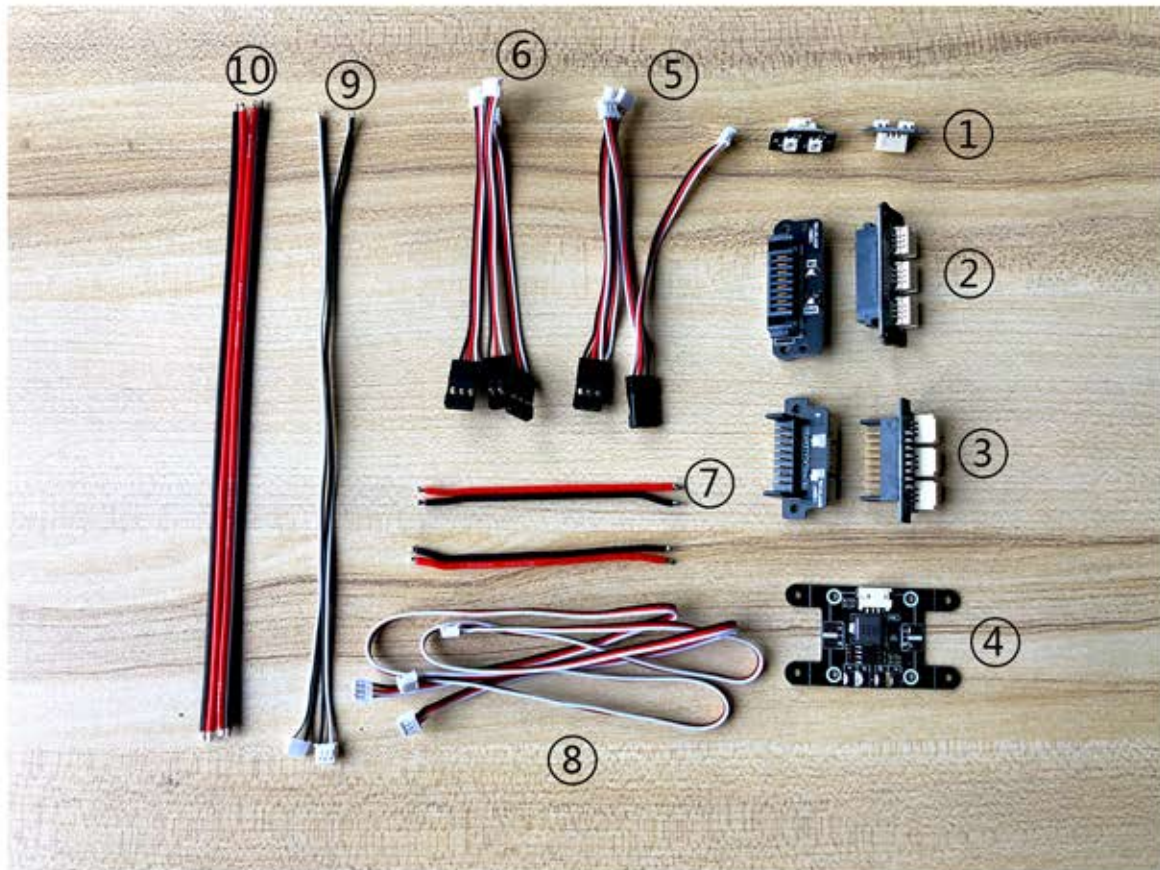

1. RGB light 2. Connector in fuselage 3. Connector in wings 4. UBEC module
5. Y type pluger signal cable 6. Single pluger signal cable 7. Power supply cable
8. RGB cable 9. ESC signal cable 10. ESC power supply cable

一、Welding in fuselage

1、Welding connector in fuselage



weld the power cable, be care of the B+ is positive pole







Tin the pads first



2、 Tin the UBEC module pad, weld to fuselage and weld main power cable depends on your battery

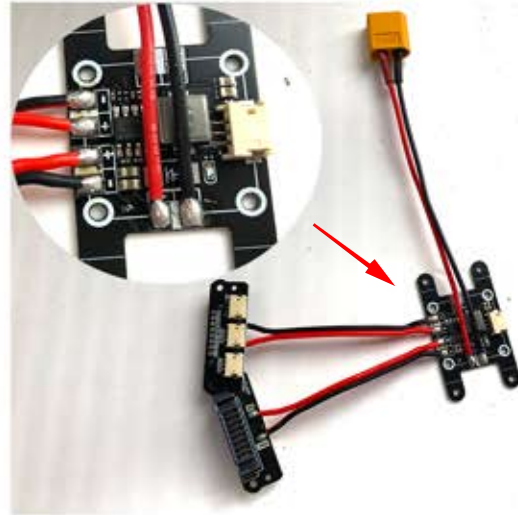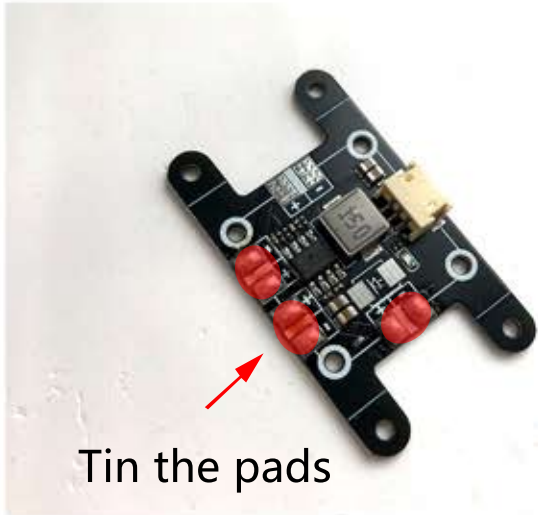


3、 Clean the dust cover on the quick release pluger, the wiring - corresponds to the black wire. (The LED is connected with a Y wire, -5VS is connected with Y type cable, -5VM is connected with single-pluger cable respectively)

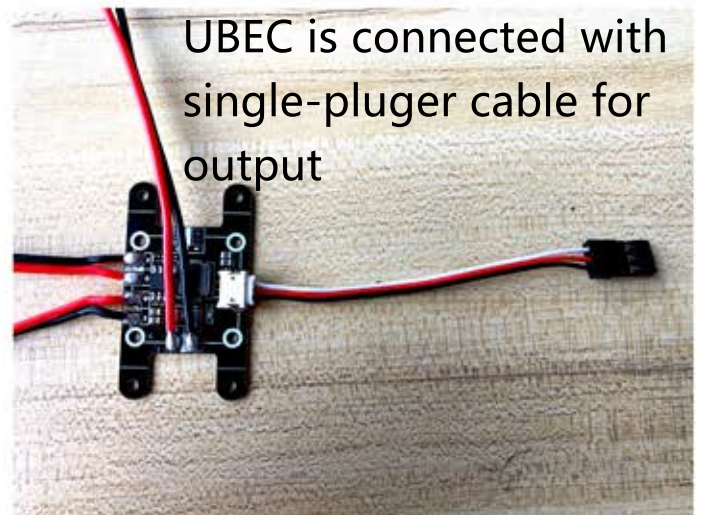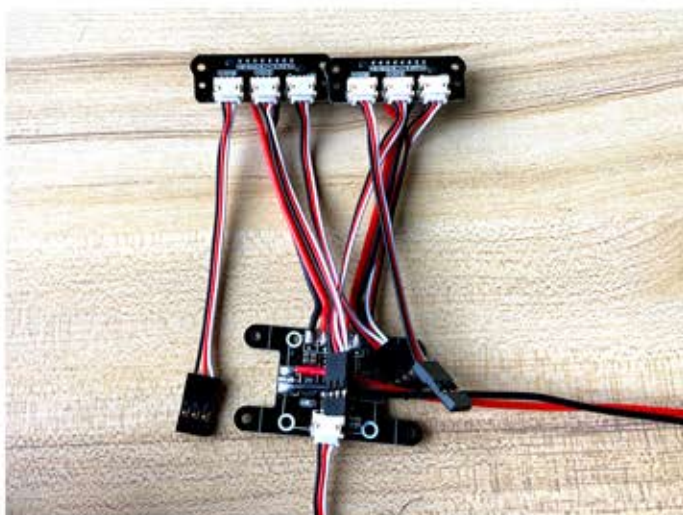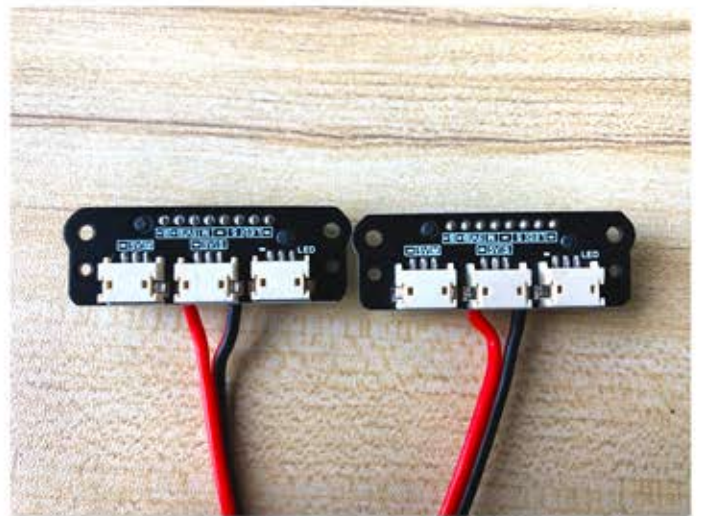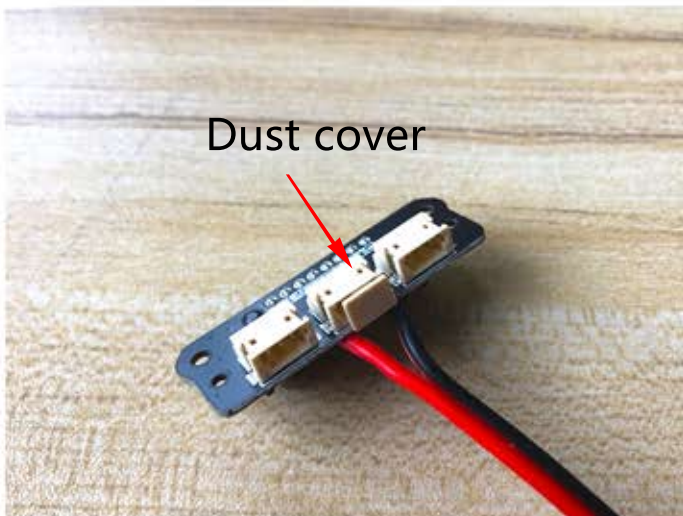

二、Welding in wings (the same methods to weld 2 ESCs)

- 1、Tin the quick release connector, weld with the ESC power cable (B+ is positive pole)

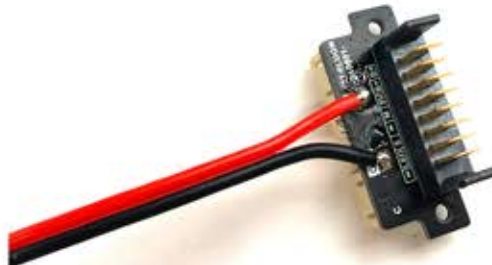


- 2、Welding the power cable and signal cable in ESC

Signal cable- Black



Power supply cable GND black cable

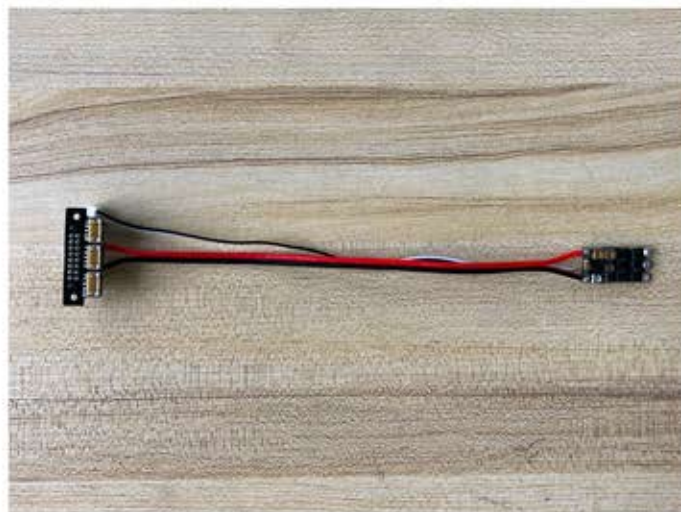

- 3、Connection in wings (- corresponds to th black cable)

