

Kalado

Cordless Vacuum Cleaner

User Manual

KCV01



Introduction

Dear New Kalado KCV01 Owner,

Thank you for choosing Kalado's KCV01 Cordless Vacuum Cleaner. We believe that this cordless vacuum will satisfy all your vacuuming needs.

Our Kalado team is always on standby to provide you top quality after sales serve.

Warranty: Your vacuum is under a **2-YEAR** guarantee from the date of purchase.

Online: Questions or concerns will be answered within **24 hours** by the Kalado Team

Kalado Team

Email: service@kalado.com

Website: www.kalado.com

Safety Instructions

Important: Read all instructions before use. Retain instructions for future reference. Do not use in rain or leave outdoors while raining.

Warning: Basic safety precautions should always be observed when using an electrical appliance, including the following to reduce the risk of fire, electrical shock, or injury.

Personal Safety

1. Store indoors in a dry place out of reach of children.
2. Always use responsibly. This appliance is intended for use by able bodied and minded adults. For children 10+, or adults with physical or mental disabilities, only use under capable adult supervision.
3. Do not block the appliance's openings or hinder air flow. Keep openings free of any objects including dust, lint, clothing, fingers, and all body parts.
4. Use only manufacturer's recommended attachments as described in this manual; misuse or use of any accessory or attachment other than those recommended, may present a risk of personal injury.
5. Take extra care when cleaning stairs.
6. Keep the appliance and accessories away from hot surface.
7. Do not block the appliances openings or hinder air flow, keep openings free of any objects including dust, lint, clothing, fingers (and all parts of the body).
8. Particularly keep hair away from openings and moving parts.

Electrical Safety

1. Only use batteries and chargers supplied by the manufacturer.
2. Never modify the charger in any way.
3. The charger has been designed for a specific voltage. Always check that the main voltage is the same as stated on the rating plate.
4. A charger that is suitable for one type of battery pack may create a fire hazard when used with another battery pack.
5. Before use, check the charger cord for signs of damage or ageing. A damaged or entangled charger cord increases the risk of fire and electric shock.
6. Do not abuse the charger cord.
7. Take care that the charger cord is used and stored carefully.
8. Do not pull by the cord to disconnect from the the socket. Grasp the plug and and pull to disconnect.
9. Don't wrap the cord around the charger when storing.
10. Keep the charger cord away from hot surfaces and sharp edges.
11. Supplied cord cannot be replaced. If the cord is damaged the charger should be discarded and replaced.
12. Do not handle the charger or the appliance with wet hands.
13. Do not store or charge the appliance outdoors.
14. The charger must be removed from the socket before removing the battery, cleaning or maintaining the appliance.

Battery Safety

1. This appliance includes Li-ion batteries, do not incinerate batteries or expose to high temperatures, as they may explode.
2. Liquid ejected from the battery may cause irritation or burns.
3. In an emergency situation contact professional help immediately.
4. Leaks from the battery cells can occur under extreme conditions. Do not touch any liquid that leaks from the battery. If the liquid that gets on skin wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery an dispose of immediately in accordance with local regulations.
5. Shorting the battery terminals may cause burns or fire.
6. When the battery pack is not in use, keep it away from paper clips, coins, keys, nails, screws or other small metal objects that could make a connection from one terminal to another.
7. When you dispose of the appliance remove the battery and dispose of the battery safely in accordance with local regulations.

Service

1. Before using the appliance and after any impact, check for signs of wear or damage and repair if necessary.
2. Do not use the appliance if any part is damaged or defective.
3. Repairs should be carried out by a service agent or a suitably qualified person in accordance with relevant safety regulations. Repairs by unqualified persons could be dangerous.
4. Never modify the appliance in any way as this may increase the risk of personal injury.
5. Only use replacement parts or accessories provided or recommended by manufacturer.


Intended Use

1. This appliance has been designed for domestic dry vacuum cleaning only.
2. Do not pick up liquids or use on wet surfaces.
3. Do not pick up anything that is flammable, burning or smoking.
4. Use only as described in this manual.
5. Don't use on concrete, tarmacadam or other rough surfaces.


Warning

1. Do not use water, solvents, or polishes to clean the outside of the appliance; wipe clean with a dry cloth.
2. Never immerse the unit in water and do not clean in a dish washer.


Packing List

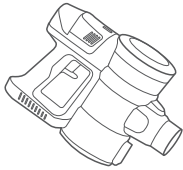

Handheld Vacuum

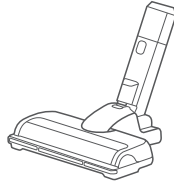


Floor Brush

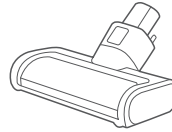


Mini-Motorized Brush



 Dusting Brush

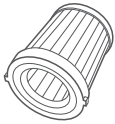


Washable Filter

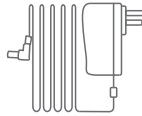 

Power Adapter



 
Attachment Clip

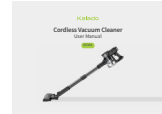

Manual Booklet Set



 
Extension Rod

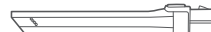

Crevice Tool

Product Overview


Product Parts Introduction

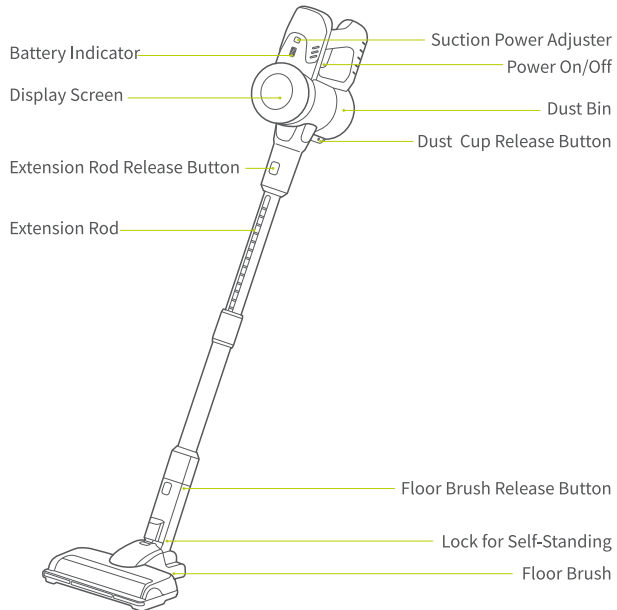

Display Screen Introduction

Suction Gear Status

- |||| Low
- ||||| Medium
- |||||| High

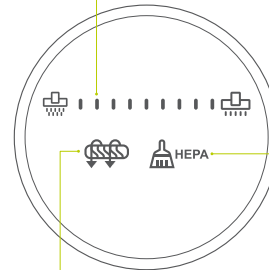

Garbage Cleaning

Will turn red if the dust bin is full.

Roller Brush Cleaning

Turn red if the roller brush is covered with hairs.

Charging

Important: Please fully charge your vacuum cleaner before the first use.

Battery


Battery Capacity: 2500mAh x7

Battery Charger Output: 31V




Charging Period: 5 hours

Installation Instruction

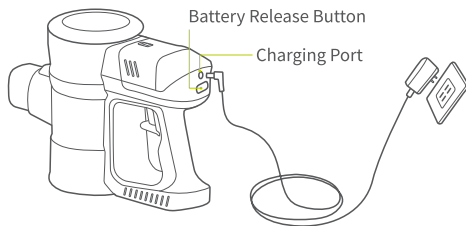Battery attached to vacuum cleaner




Battery Status Indicator

-  Low Battery (Battery indicator flashes for seconds and turns off)
-  Charging (Battery indicator is flashing)
-  Full Charge (Battery indicator is always on and no longer flashing)

Vacuum Degree	Suction Power	Battery Life
High	26KPA	14 Min
Middle	18KPA	20 Min
Low	12KPA	40 Min

Battery separated from vacuum cleaner

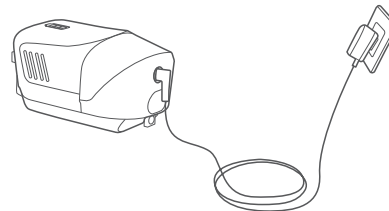


Notes

- Do not charge the vacuum cleaner while it's using.
- Do not take out the battery pack while connecting to the Handheld Vacuum for charging.
- It takes about 5 hours to reach a full charge.

Usage

Working Modes

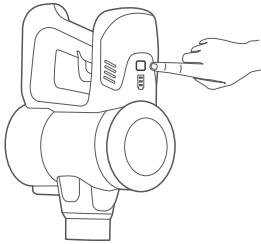


Speed Button


Three working Modes for option when using this vacuum cleaner.

Using Different Attachments

 
Floor Brush: Suitable for vacuuming wood, tile, marble, and other hard floor surfaces as well as for vacuuming up larger pieces of dirt and debris.

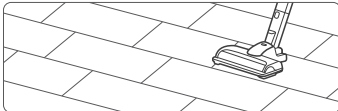

 
Dusting Brush: Suitable for vacuum cracks, desktop particles, computer keyboards, car garbage.

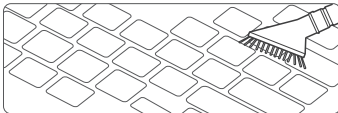

 Mini-Motorized Brush: For vacuuming dirt, pet hair, and other stubborn debris from sofas, bedding, and other fabric surfaces.

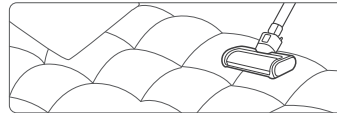

 
Crevice Tool: Suitable for vacuuming high places, curtains, corners of doors and windows, stairs and other hard-to-reach places.

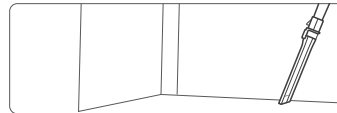


Maintenance

Cleaning the Roller Brush


1) Disconnect the power supply and slide the brush lock to the right as shown in the figure.

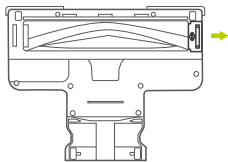


2) Slide the brush latch to the unlocked state.

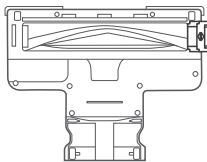


3) Take out the roller brush and clean the hair and other foreign matters on the roller brush.

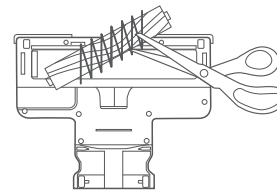


4) Wash the roller brush with water.

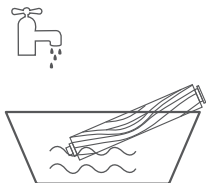

5) Dry the roller brush for 24 hours.

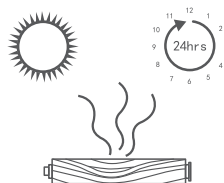

6) Install the roller brush back into the floor brush and slide the lock to the left until it is locked.

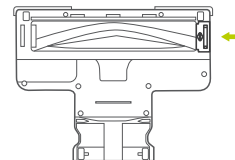



Made in China
Version 1.0