


福昕编辑



only applicable to LEGO lambo or lambo with the same instructions

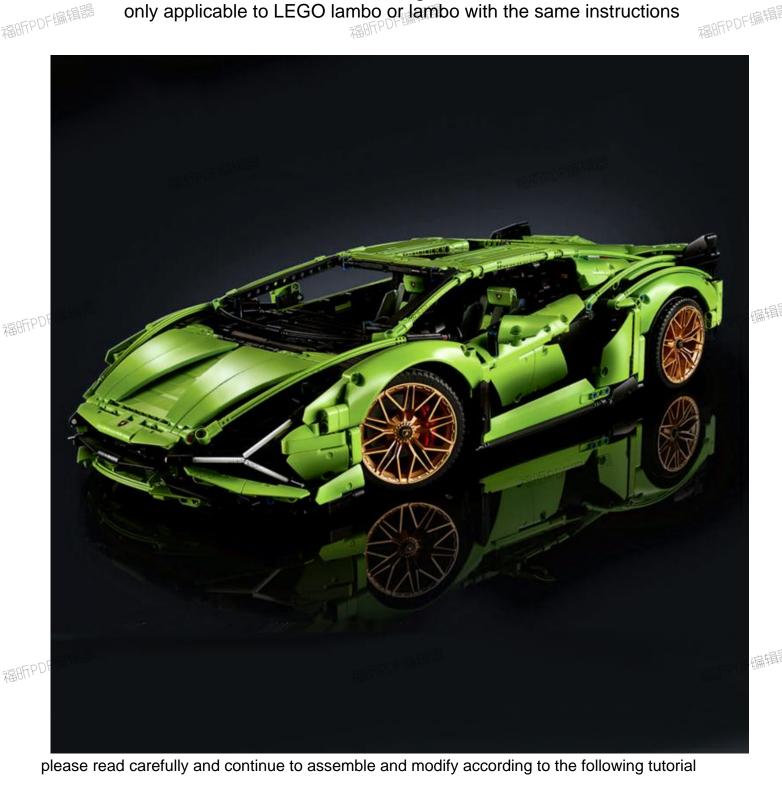



1. The color of some accessories may be different from that of the tutorial, please follow the actual 福昕PDF编辑器 福昕PDF编辑器 object.


2. Remember to recheck each step after assembly, and the orientation of the cross shaft gear spacing shall be well controlled.

3. Remember not to twist the linkage at will during assembly, and carefully recheck whether each step is completed correctly.

4. The step number below is paragraph oriented, and it can be assembled in sequence without paying attention to the sequence number arrangement of the steps.



Continue to assemble according to instructions 9-12, and change a gear in step 13

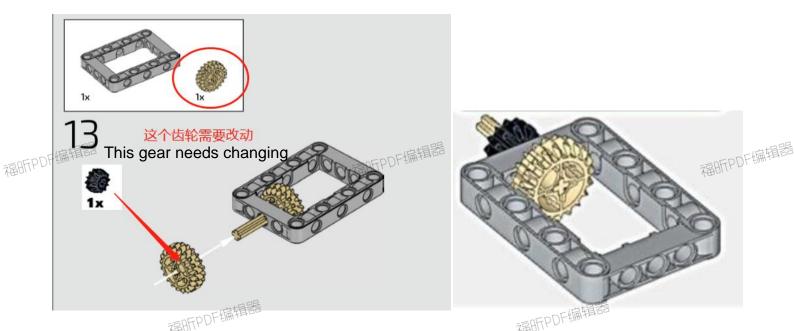



Continue to assemble according to the instructions 14-44, and the changes required in step 45 are as follows:









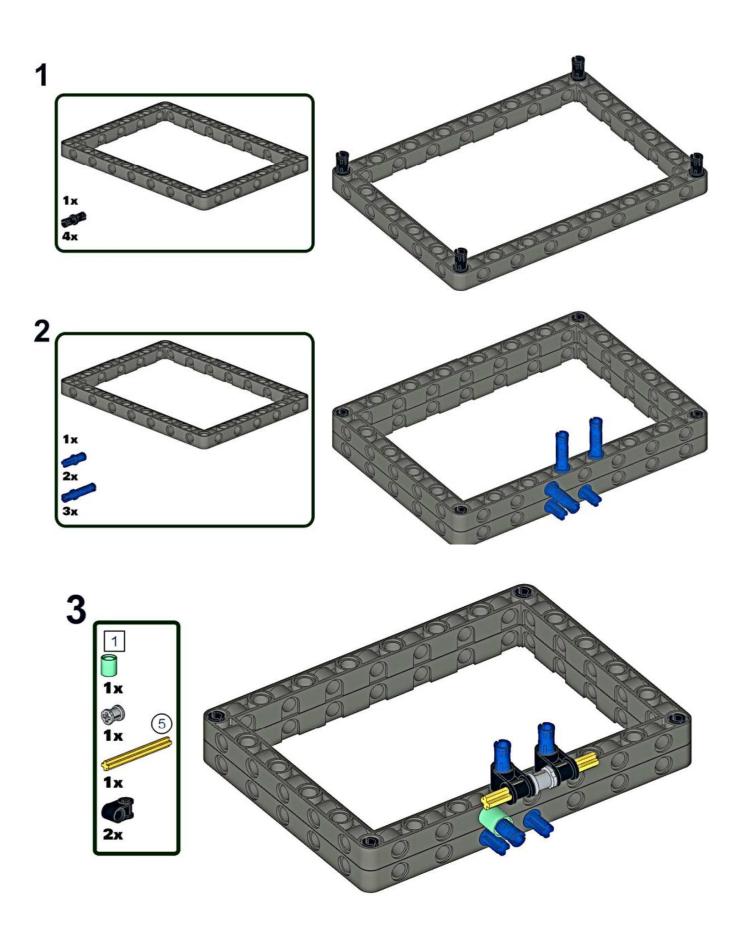


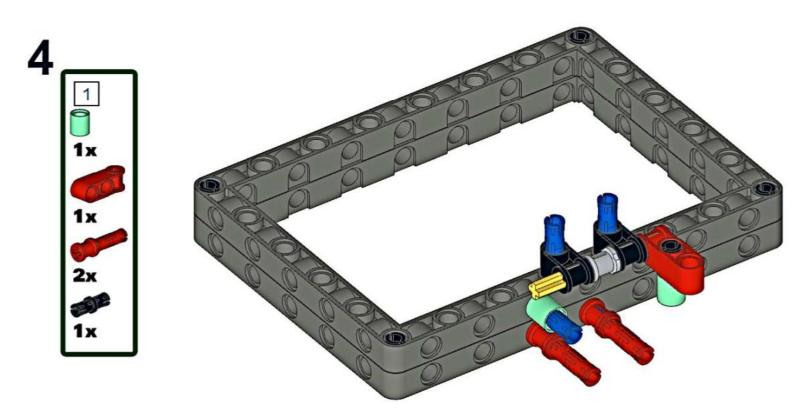


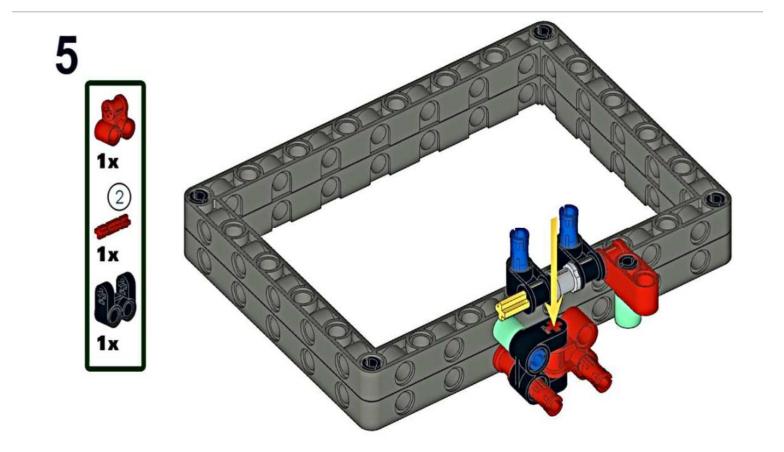





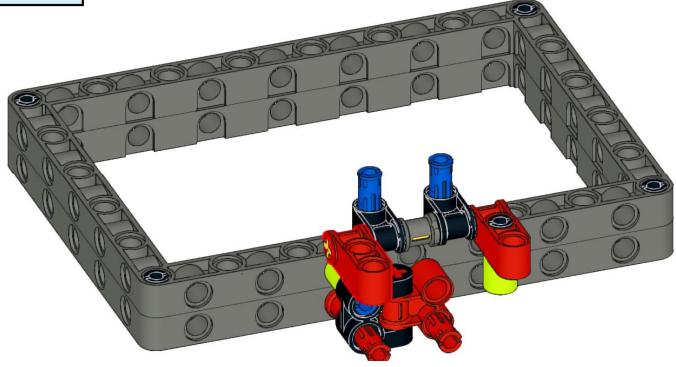


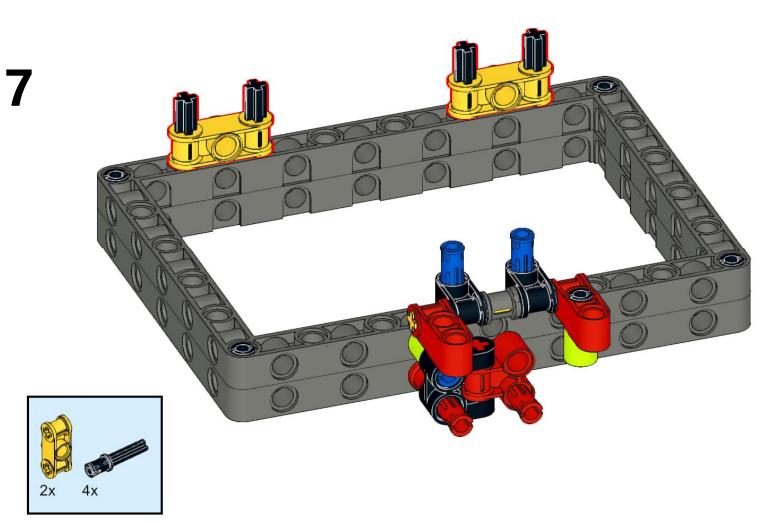


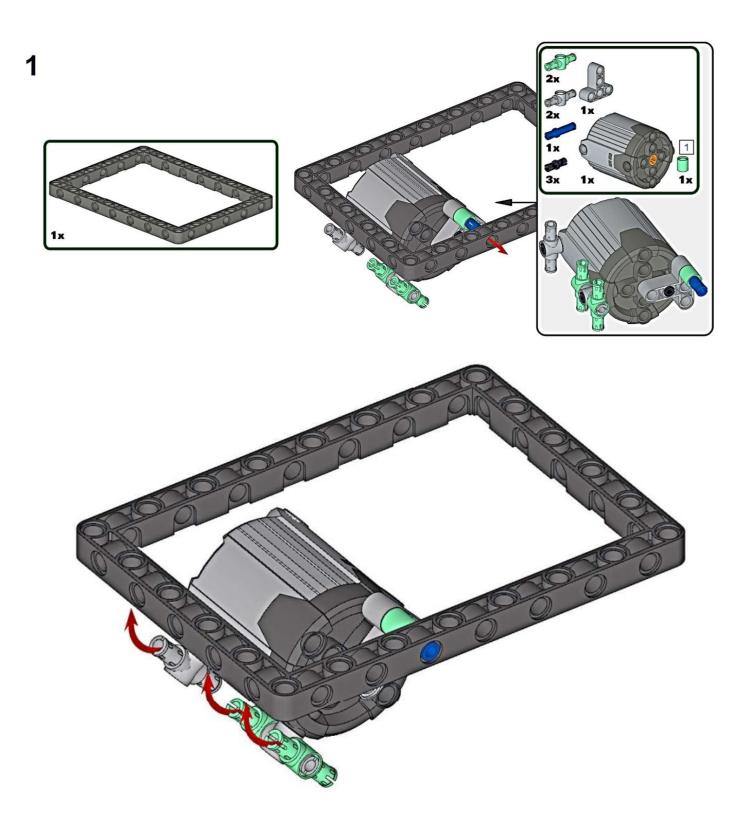


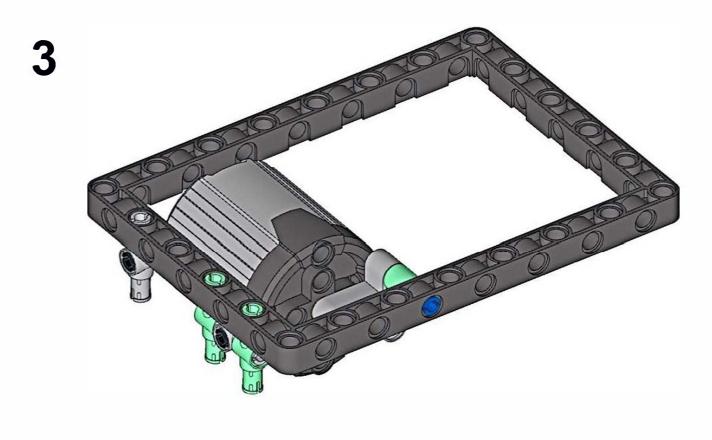


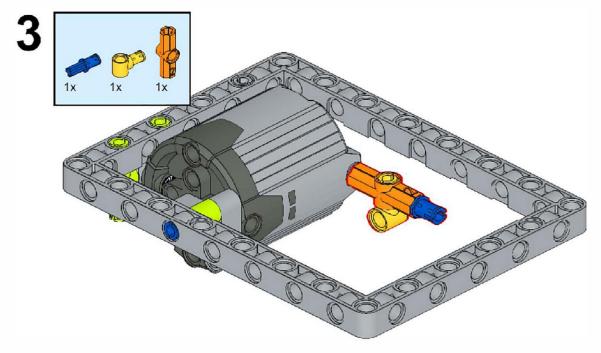

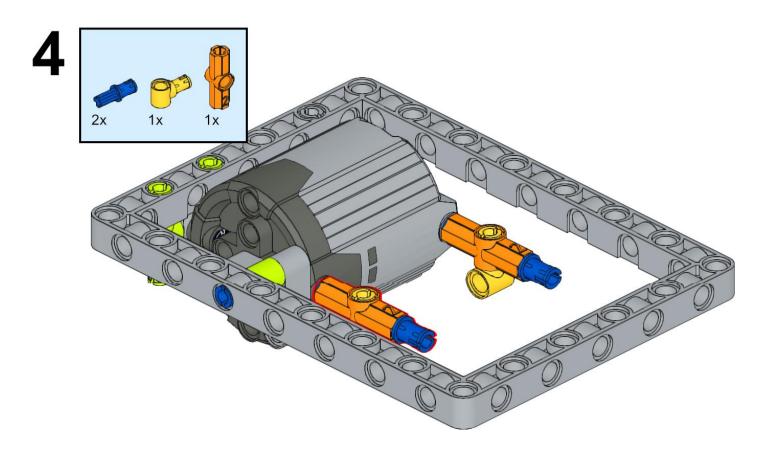

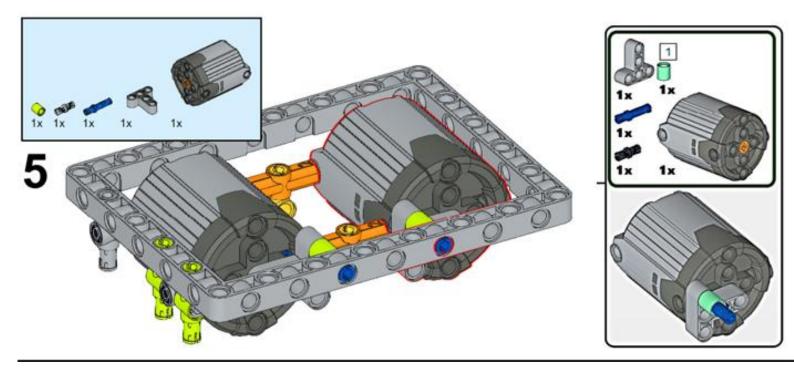

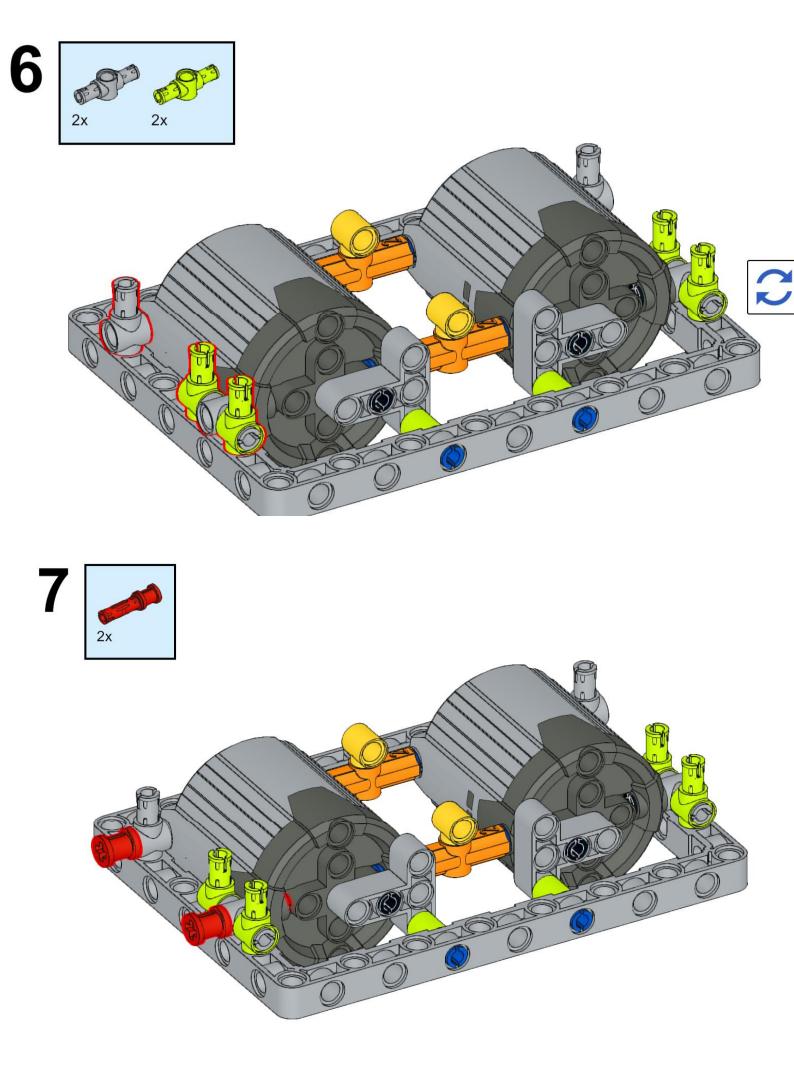

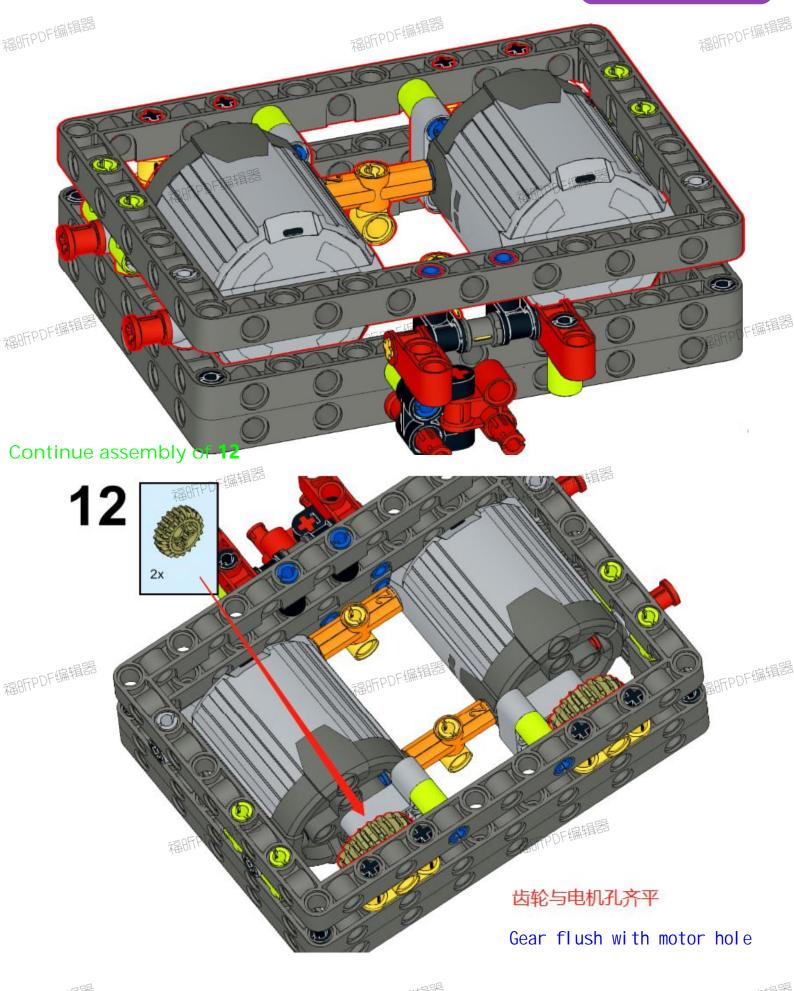






福明FPDF编辑器




 
删除标识丨丶福昕编辑器

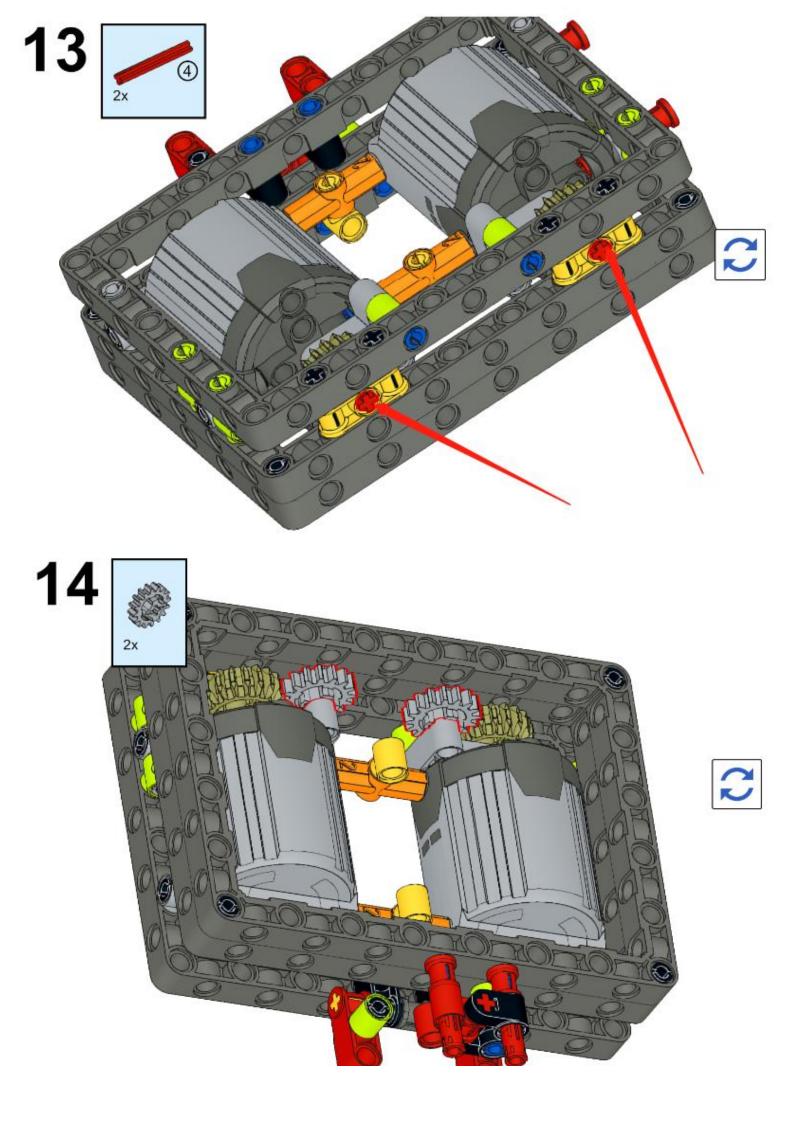

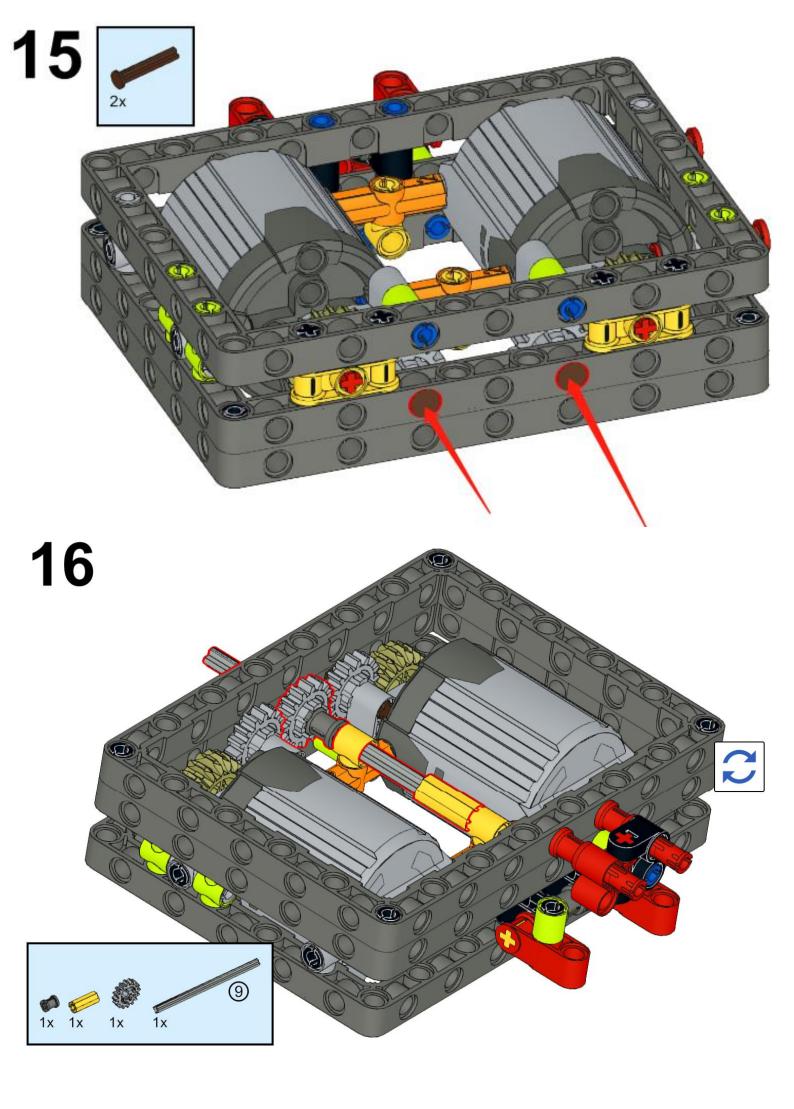


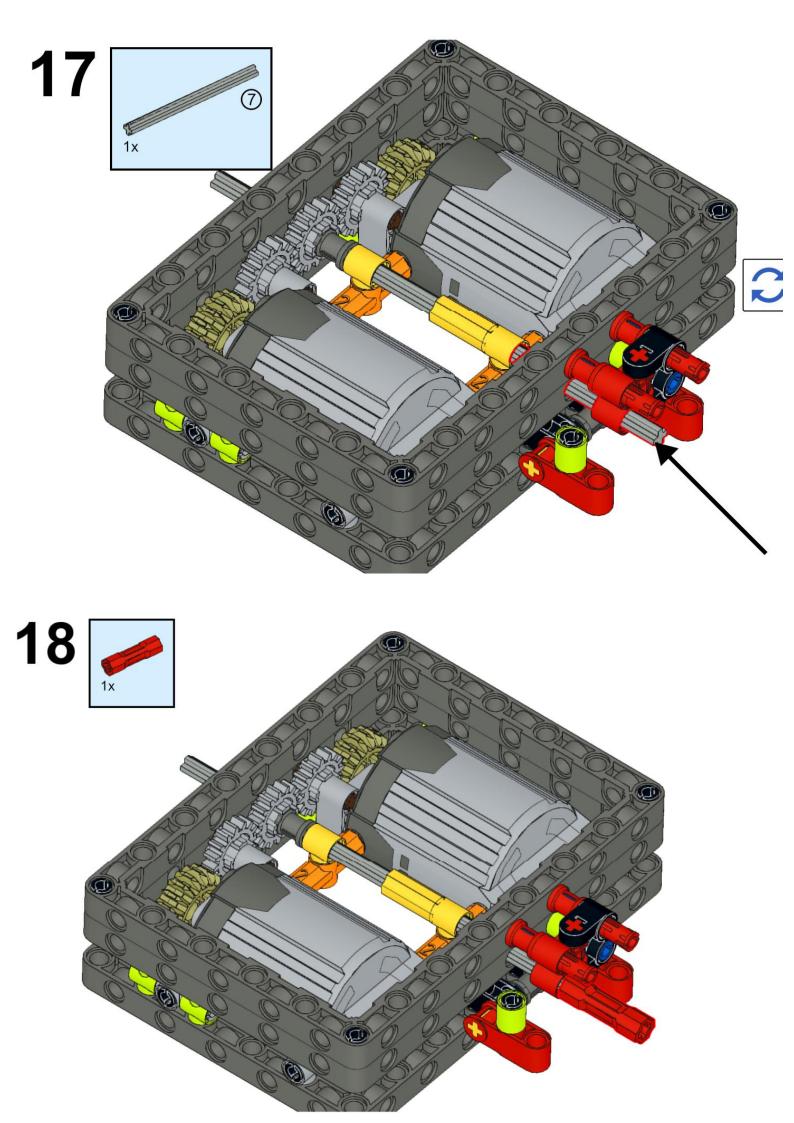





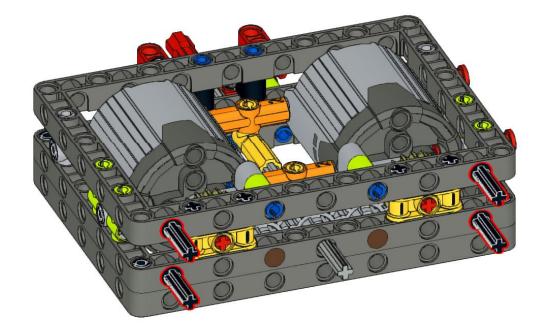




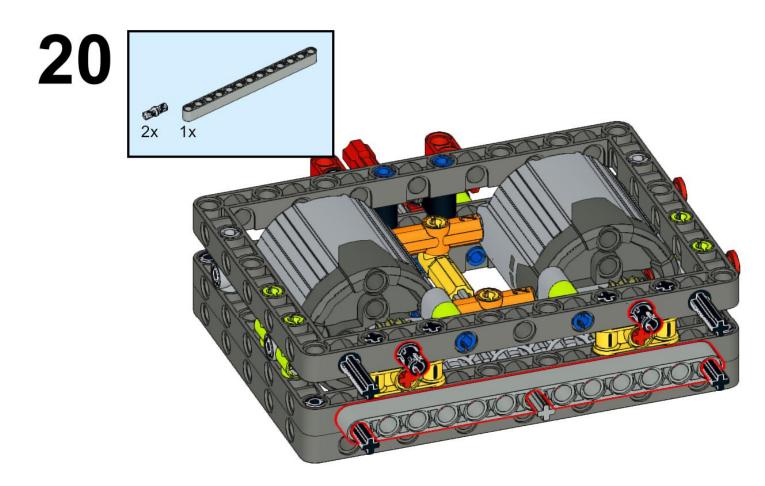


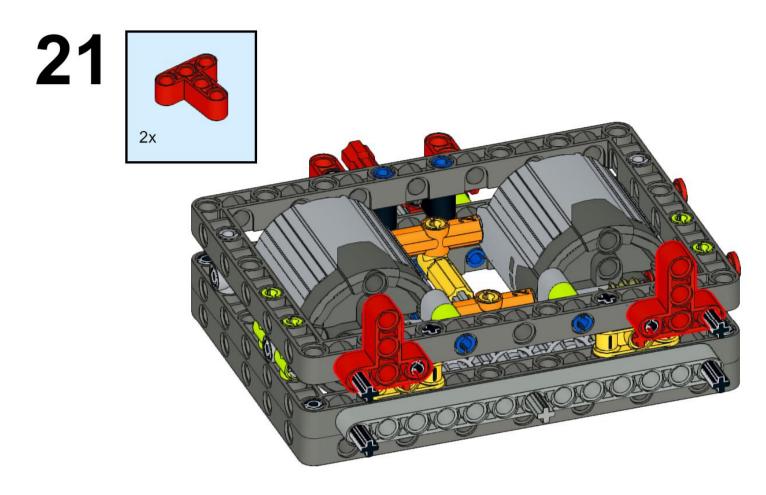

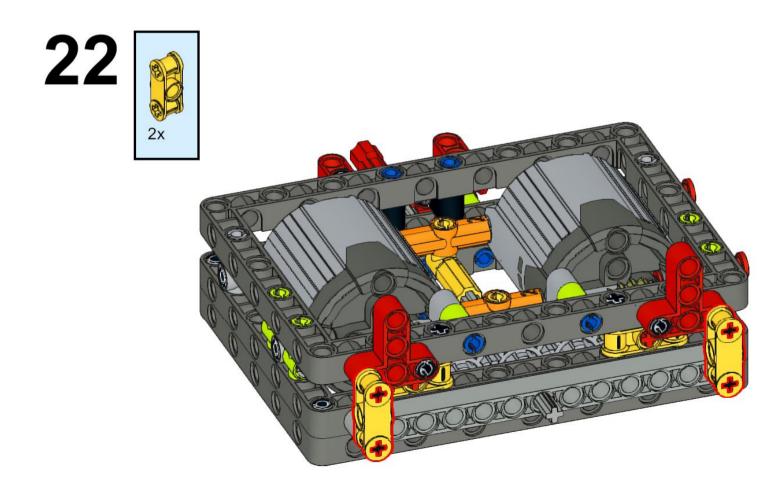

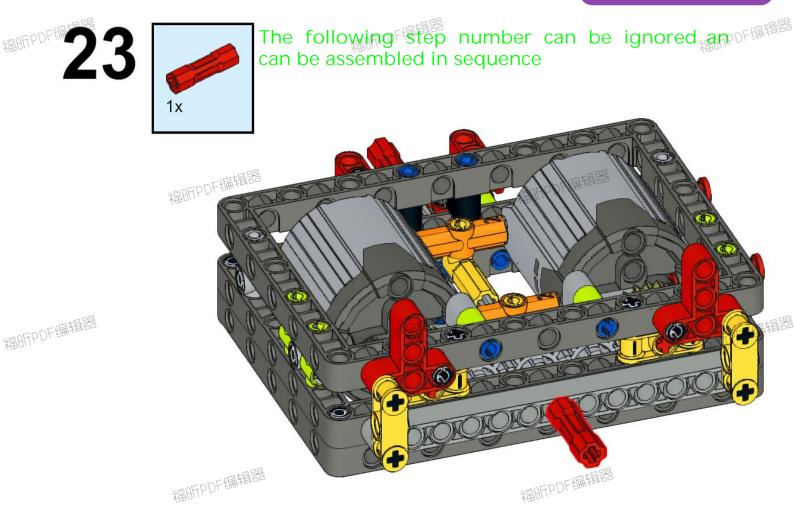

Assemble it here, stack and install the motor wire head on the lithium battery to test whether it can rotate normally, and then continue to assemble

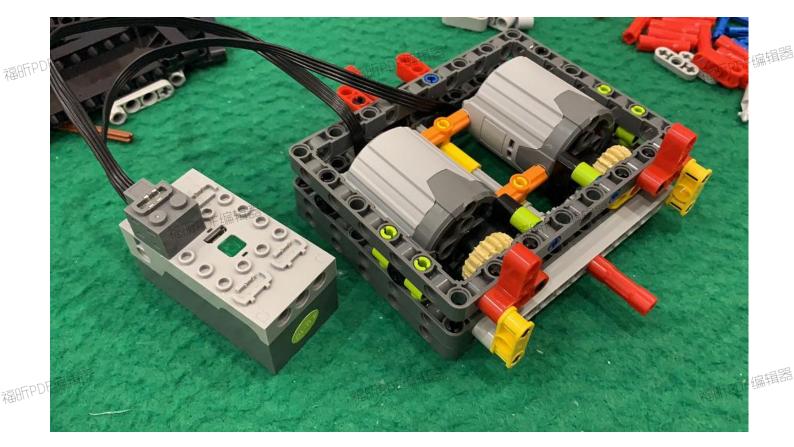



## Link the two parts together!




Follow the above tutorial to install without change.But There are 2 errors in the following electronic pictures. Electronic pictures need be ignored here. Please pay attention to 2 "X" points


**1.**Red differential cancelled in the following steps. Refer to the above figure 2. <u>Gray differential lock direction shall be follow</u> the actual picture, and the electronic picture is in the wrong direction)

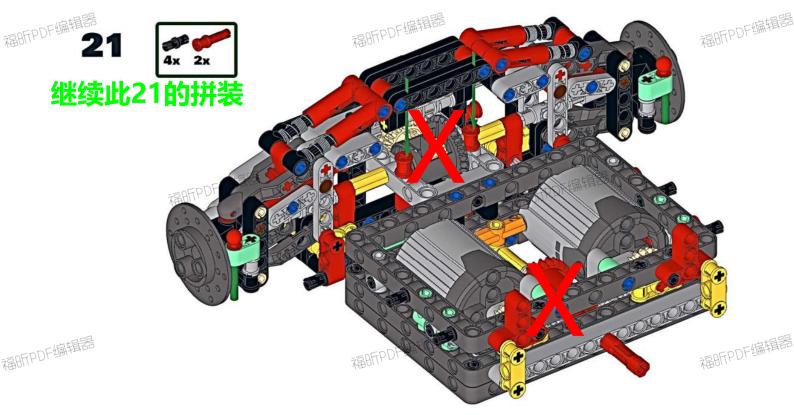

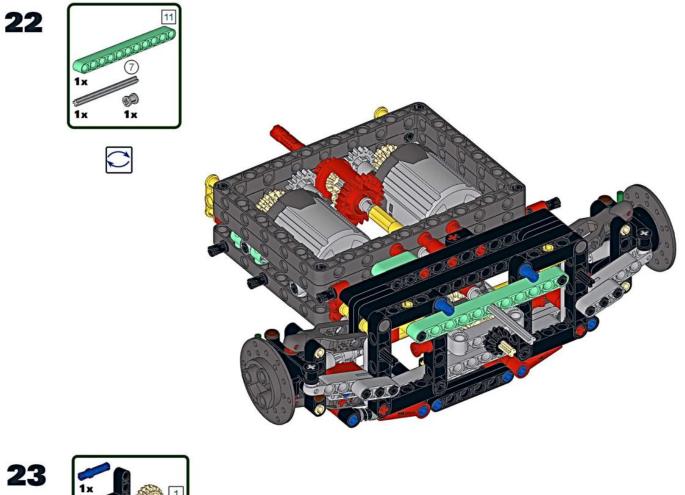





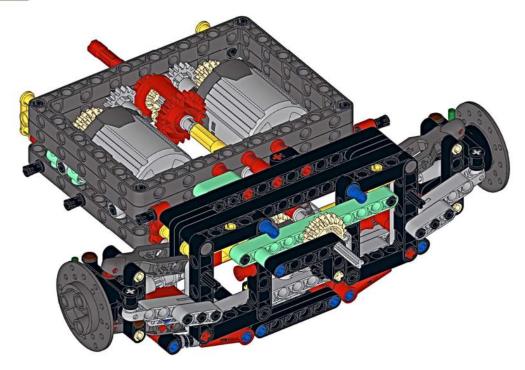

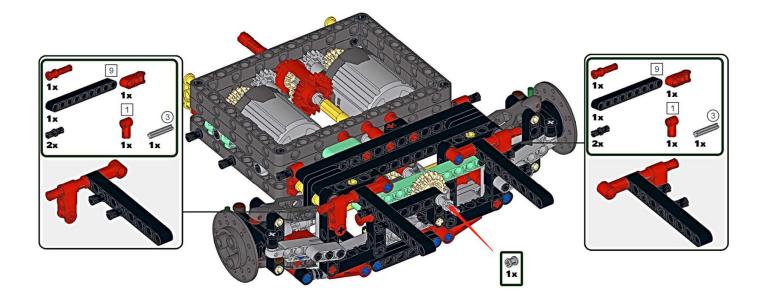




 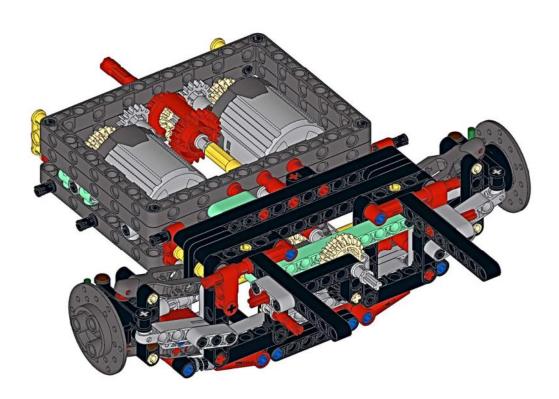


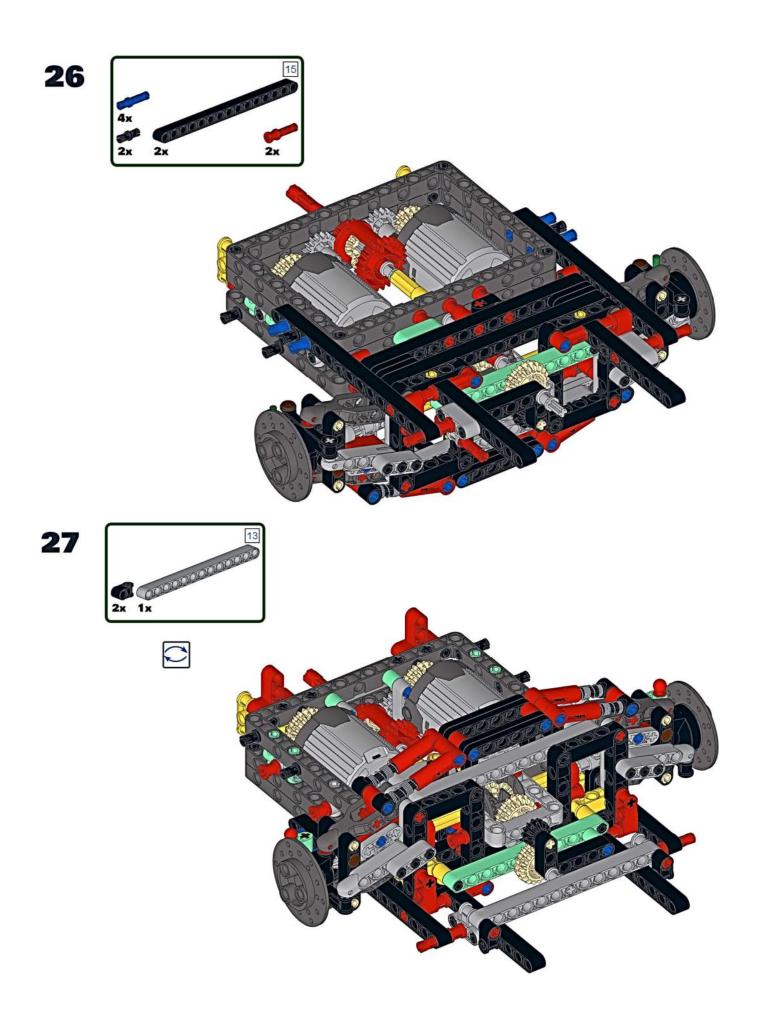


 


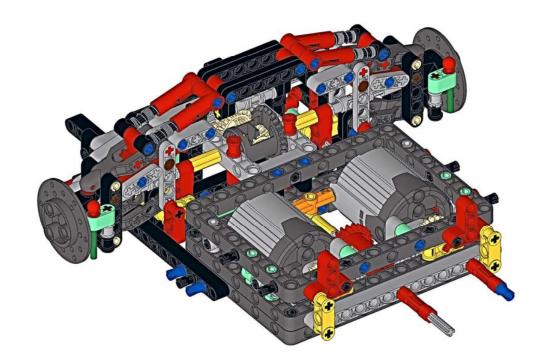








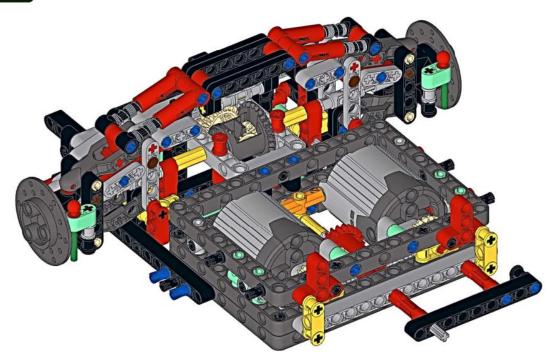





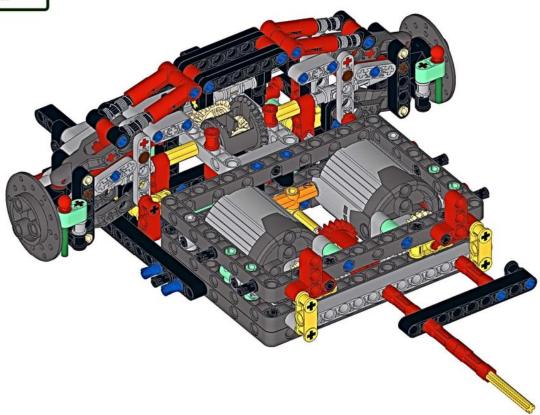


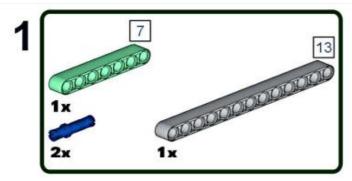


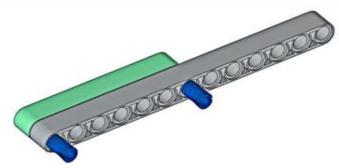


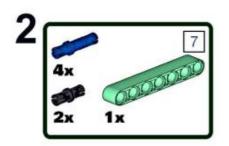


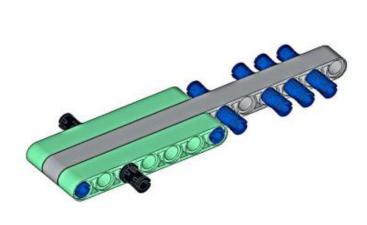


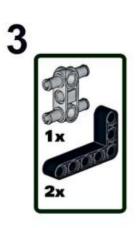

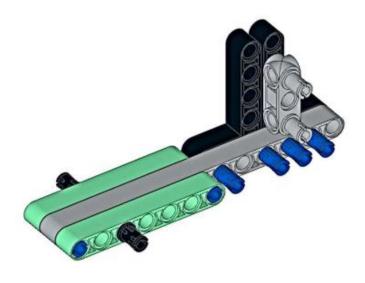


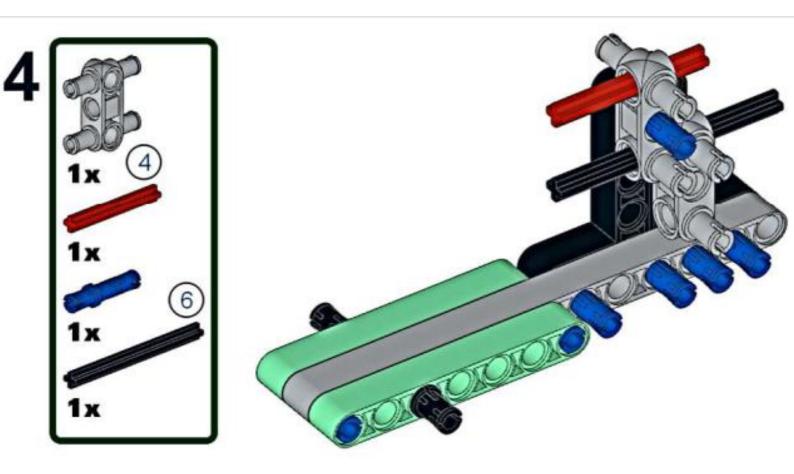

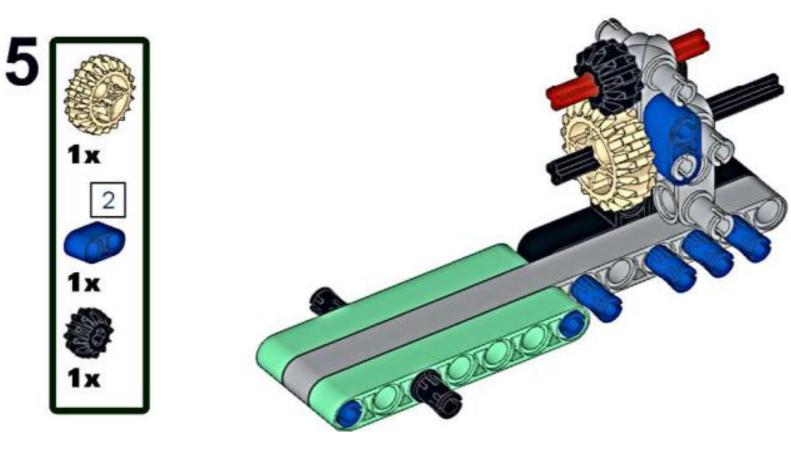

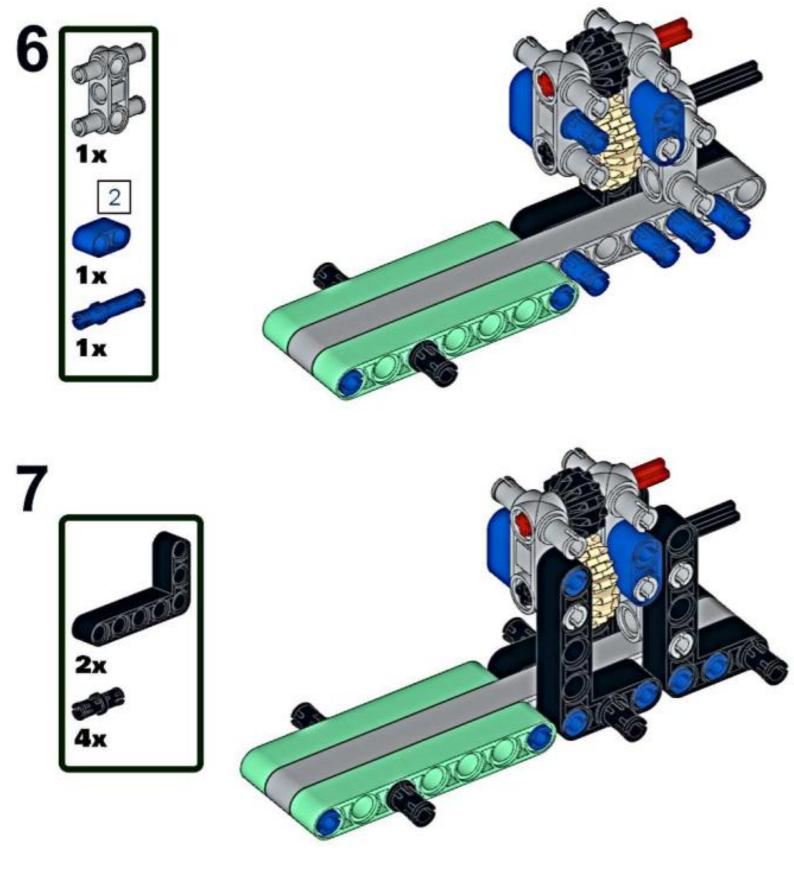




 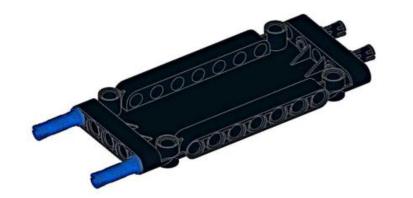







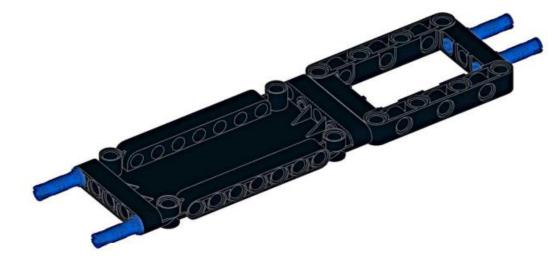







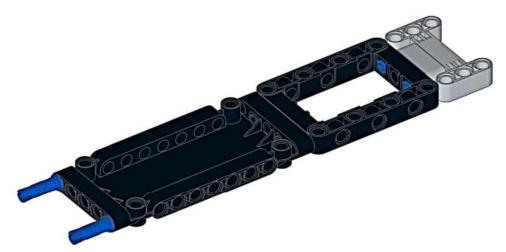



x2

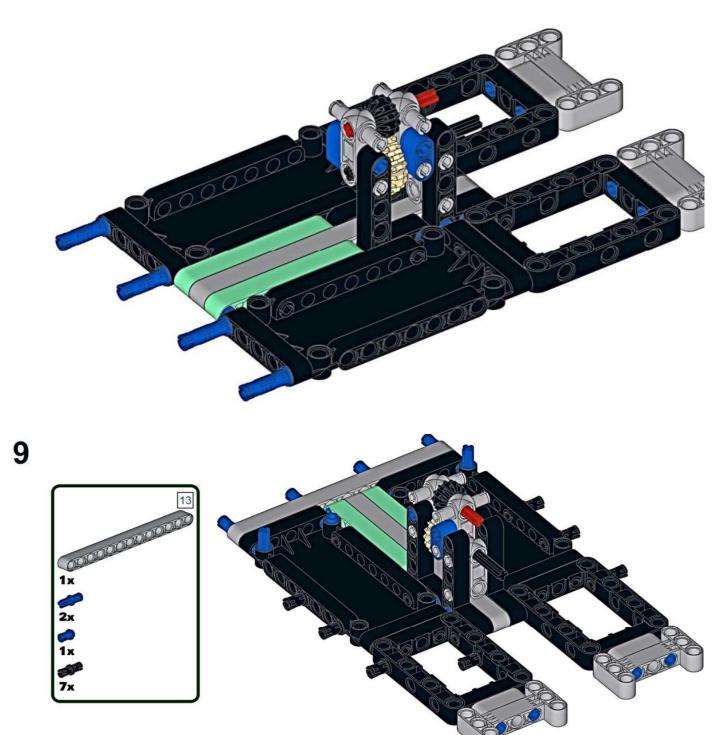



A

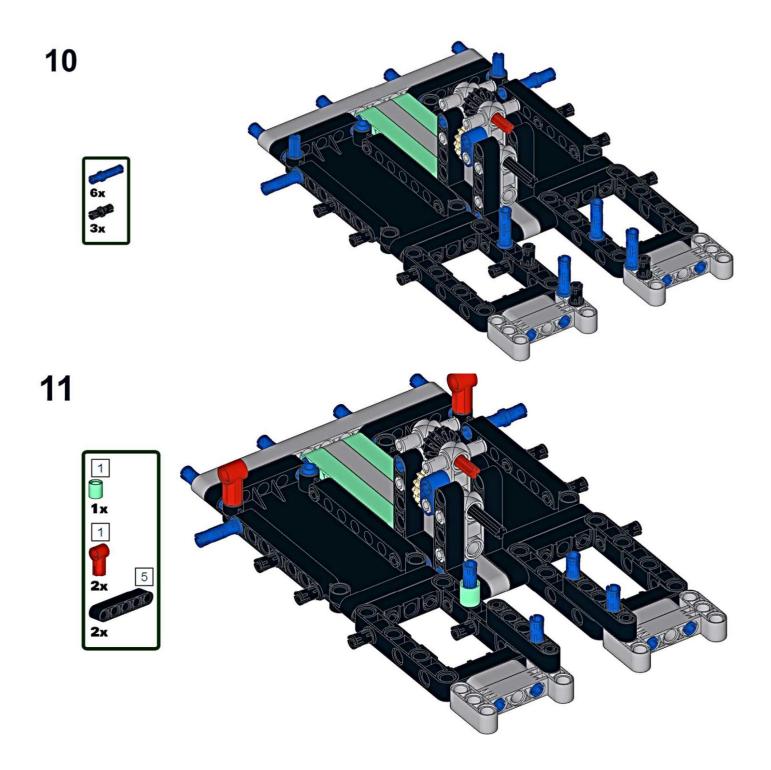


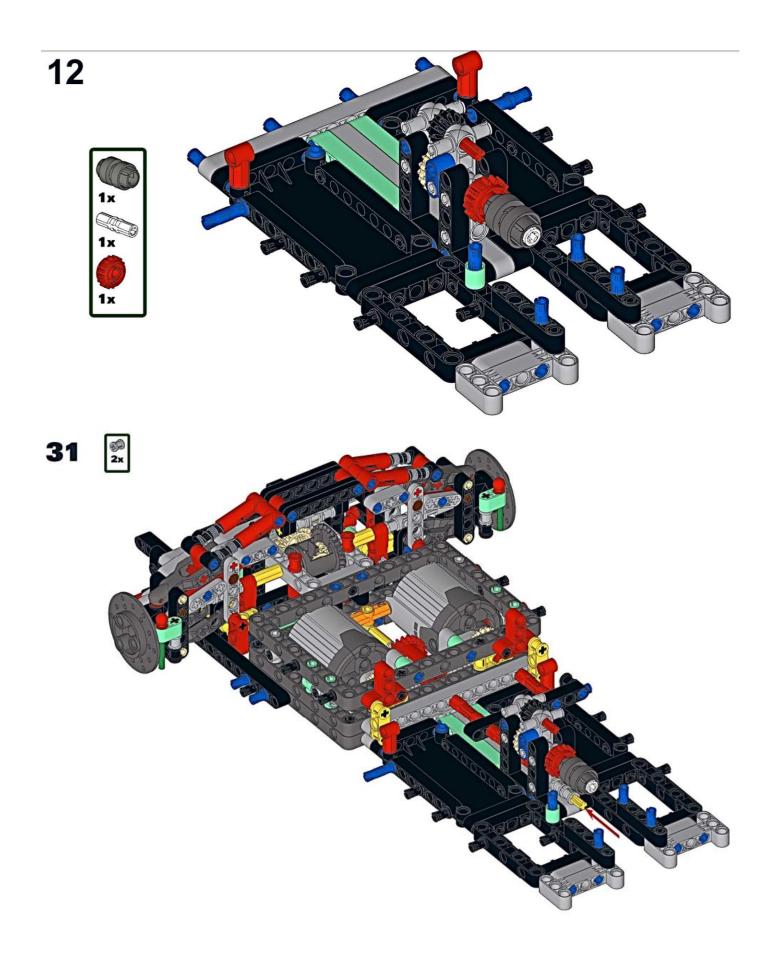


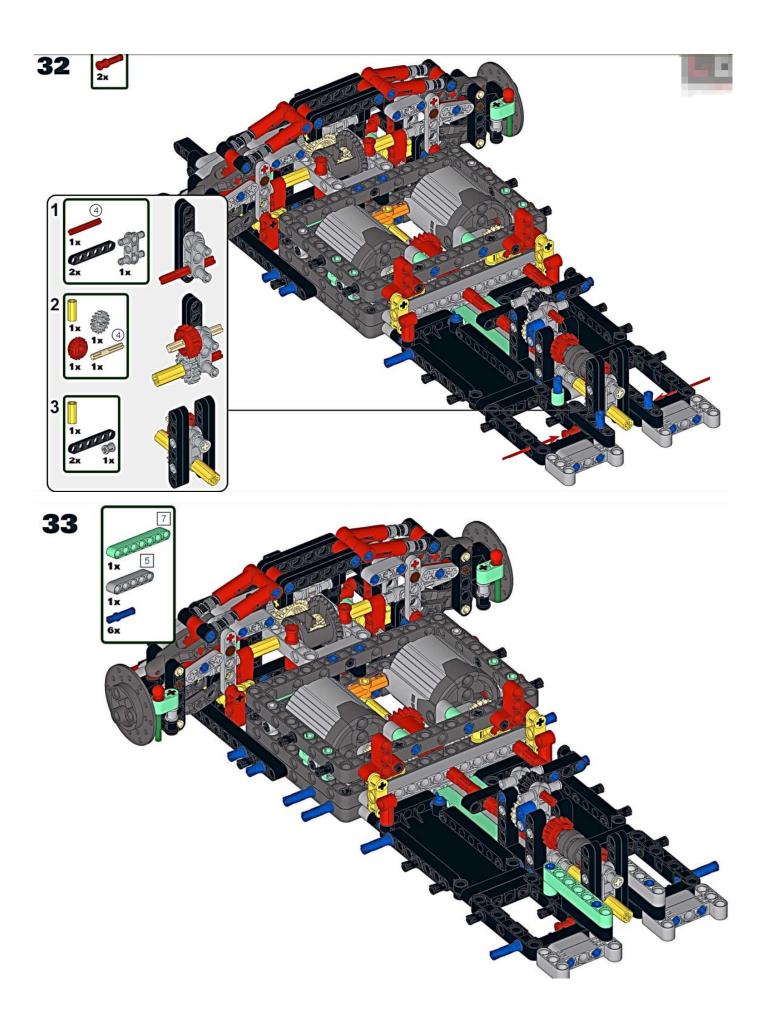

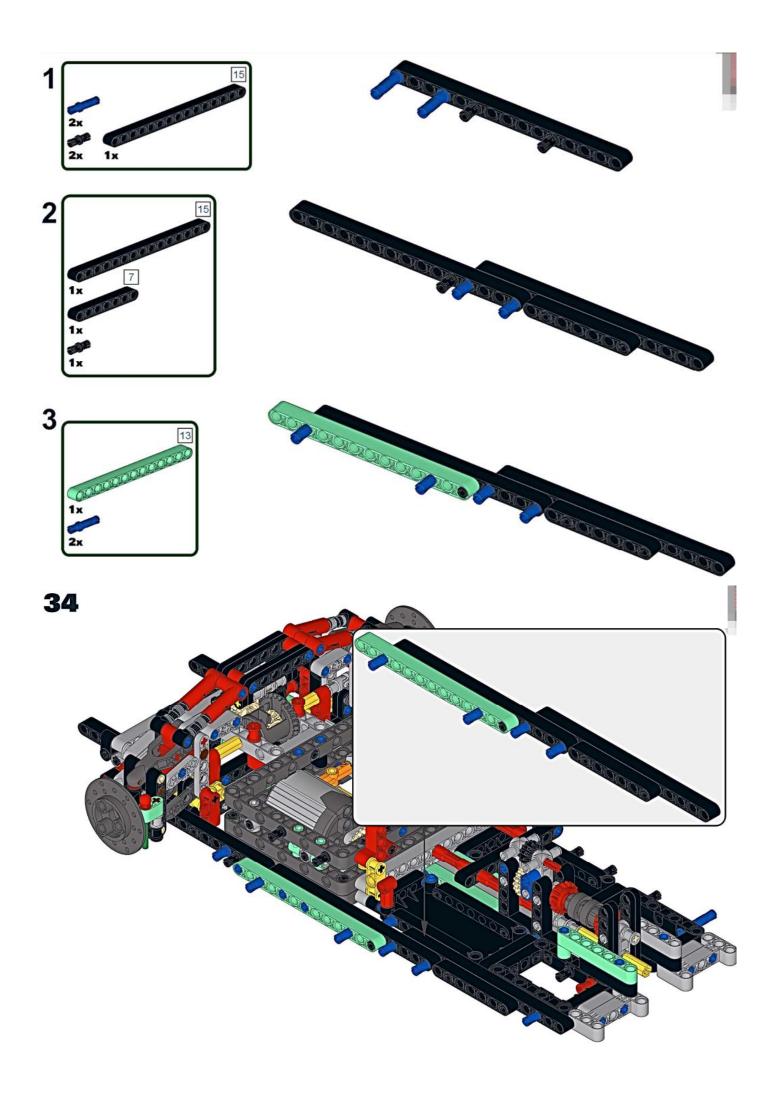


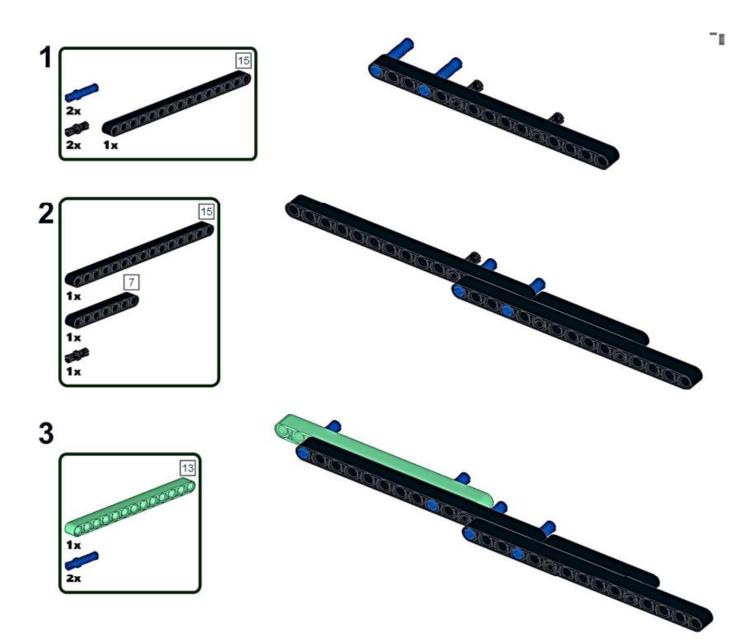

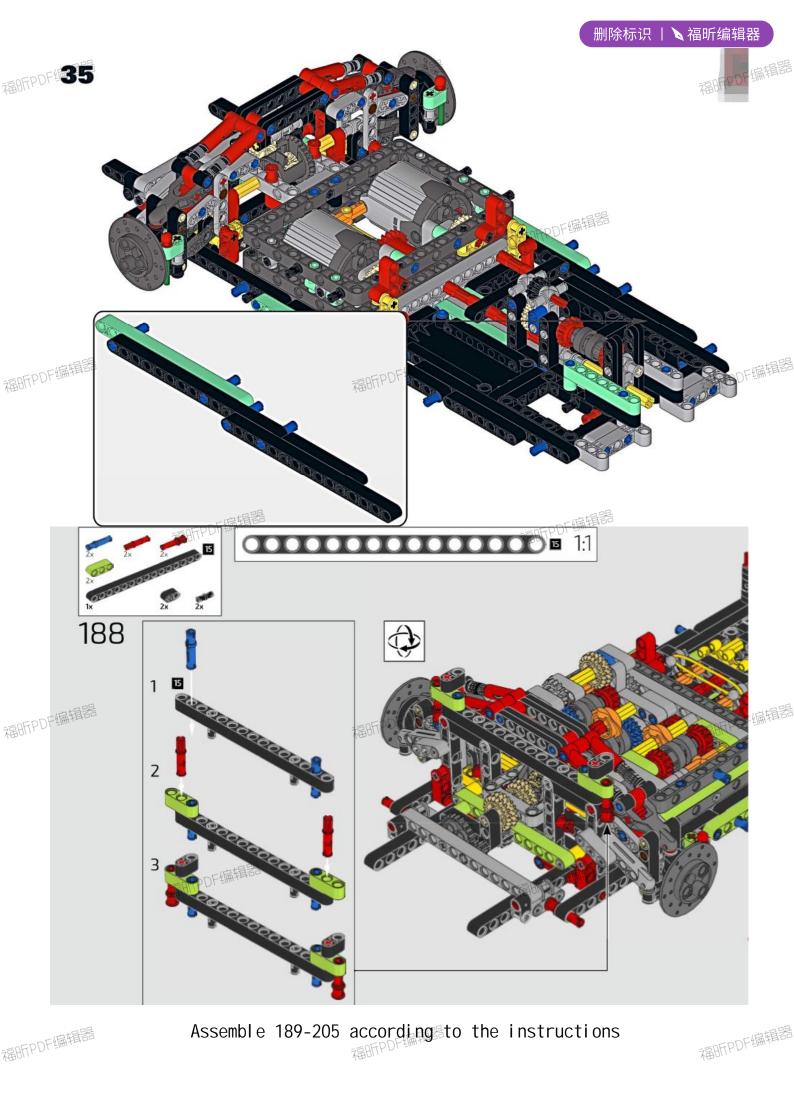


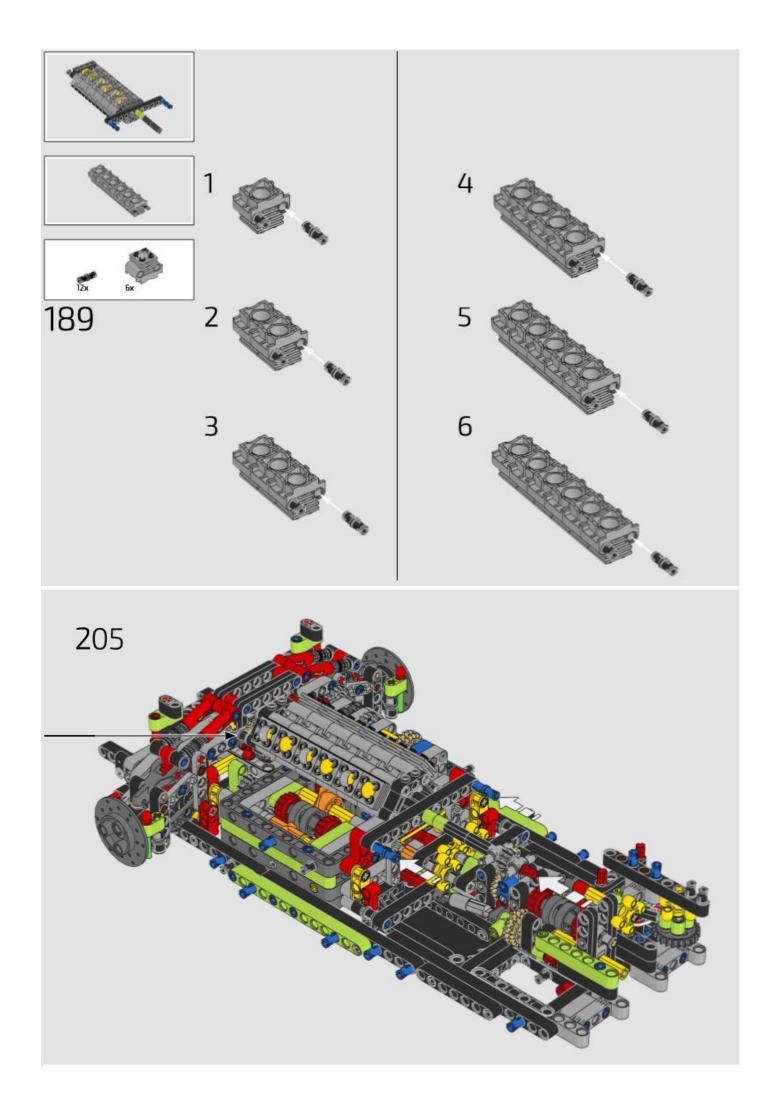


Install here, pull the motor wire head superposition to t删除标识 ION 福昕编辑器 trial installation of lithium battery, and test whether the wheel can rotate

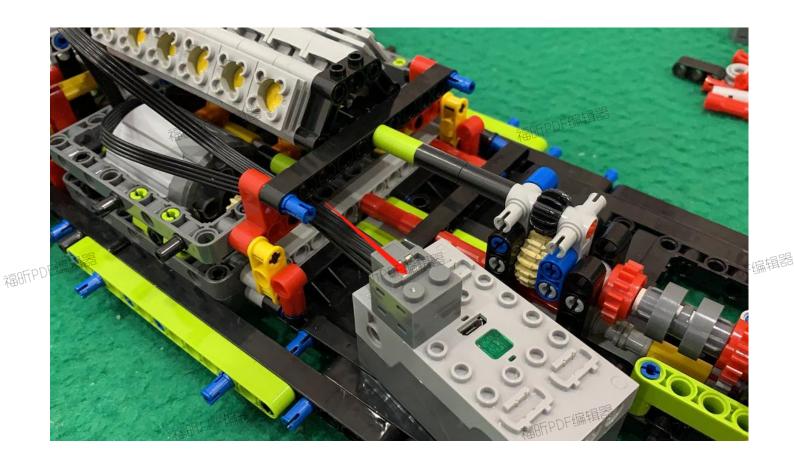



When the shift module is pushed forward, the engine can run together

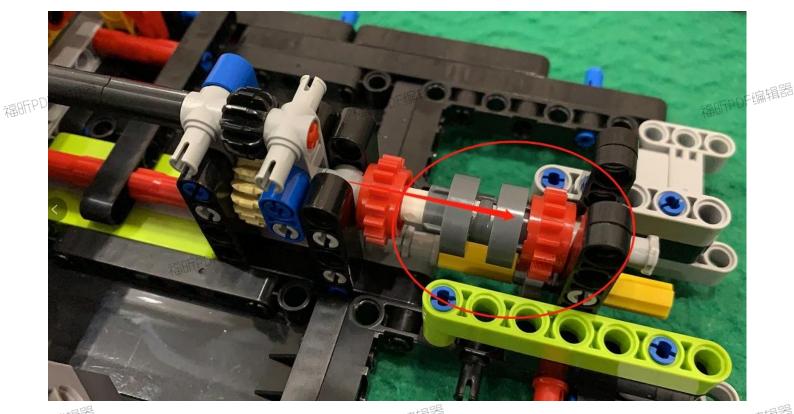



No problem with the function test Continue to assemble according to the PDF fails following tutorial

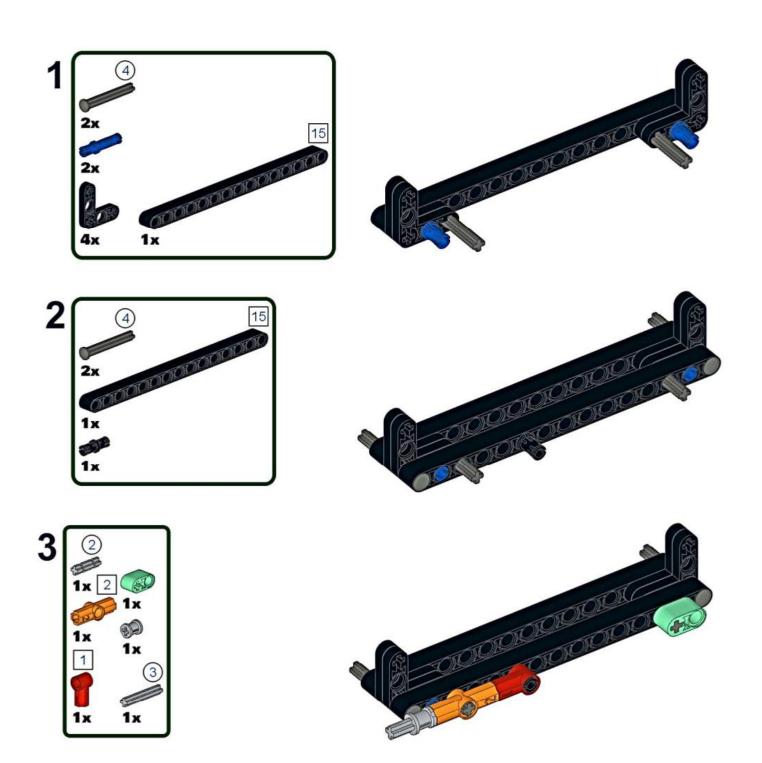

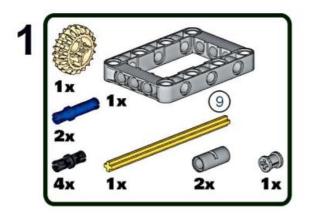

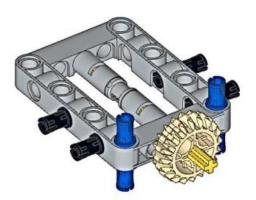


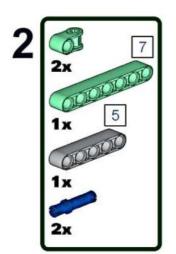

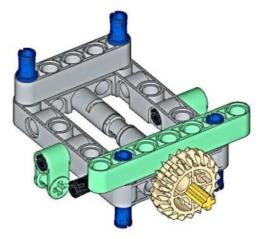








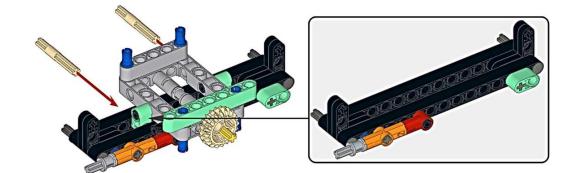



+

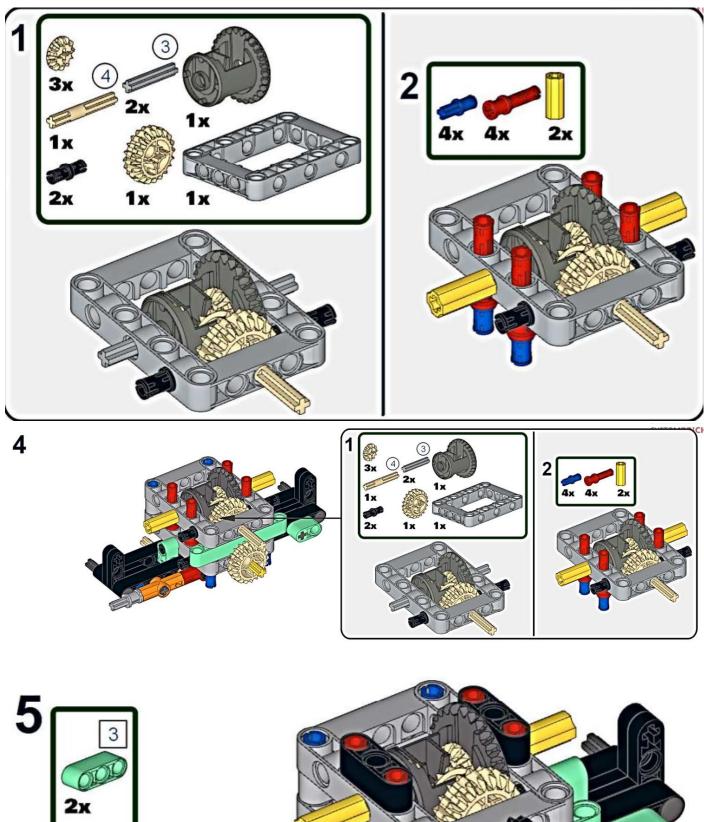


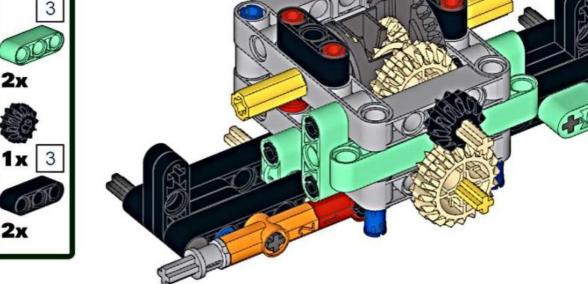


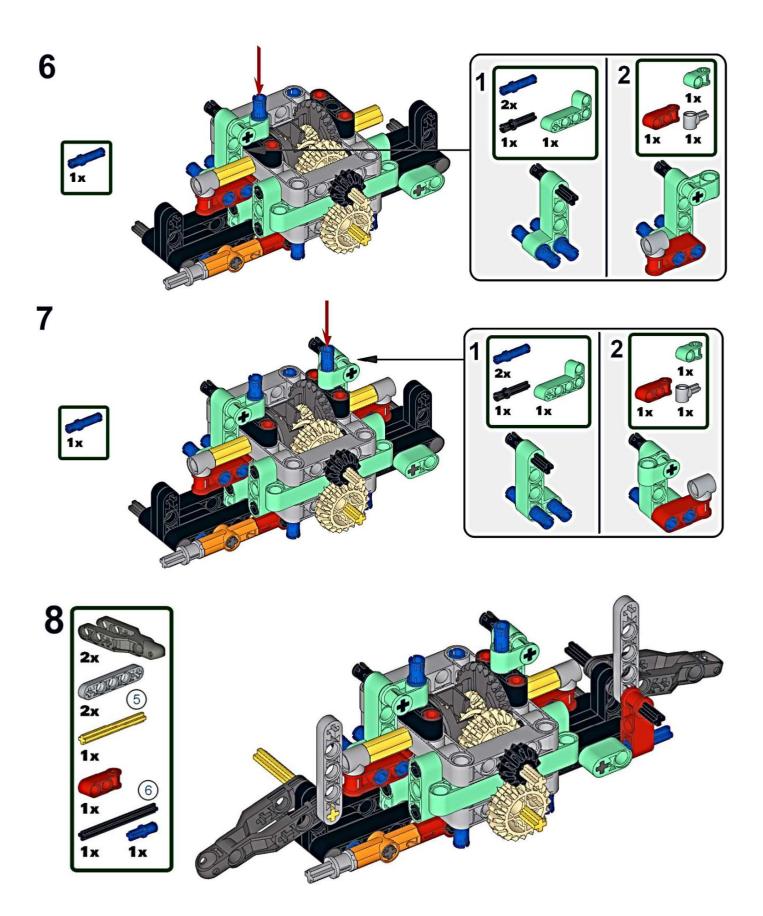


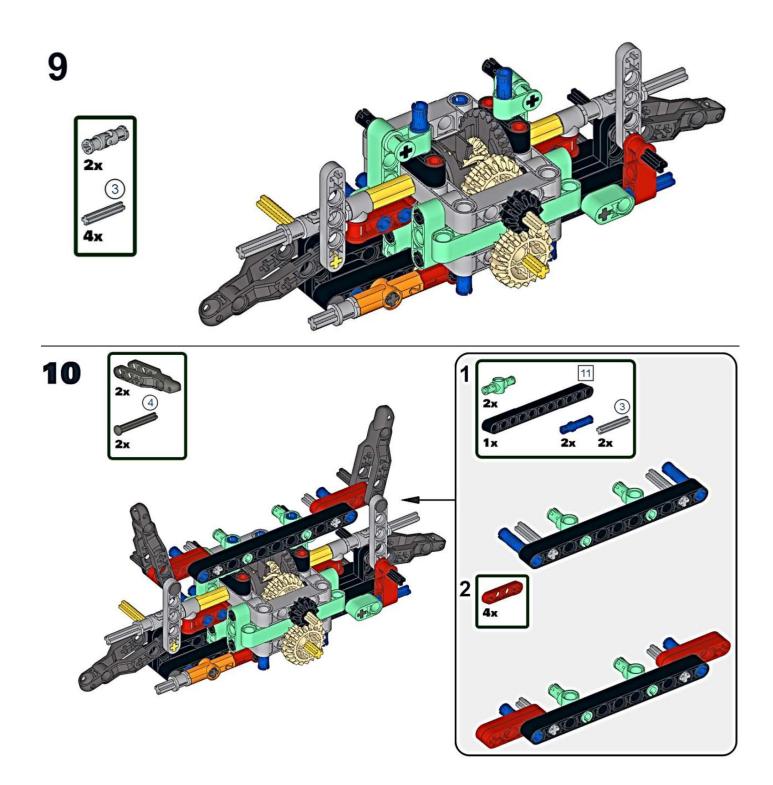

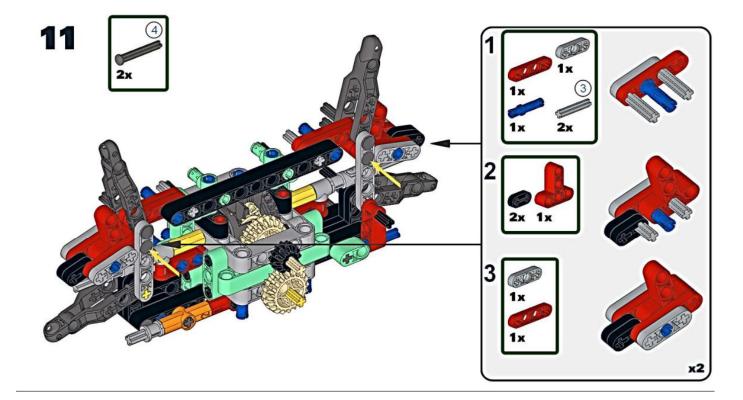

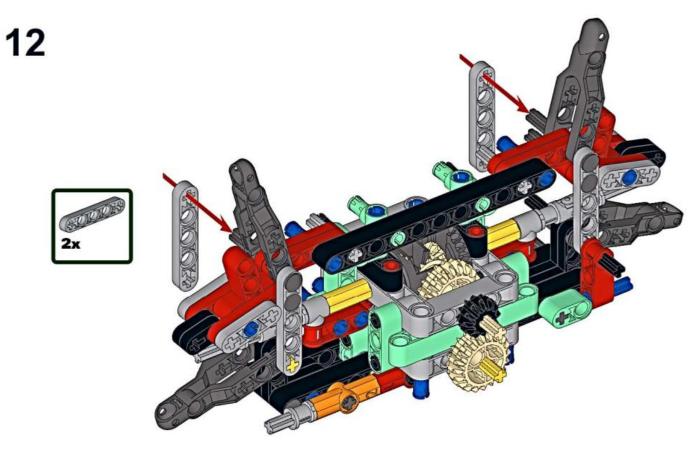

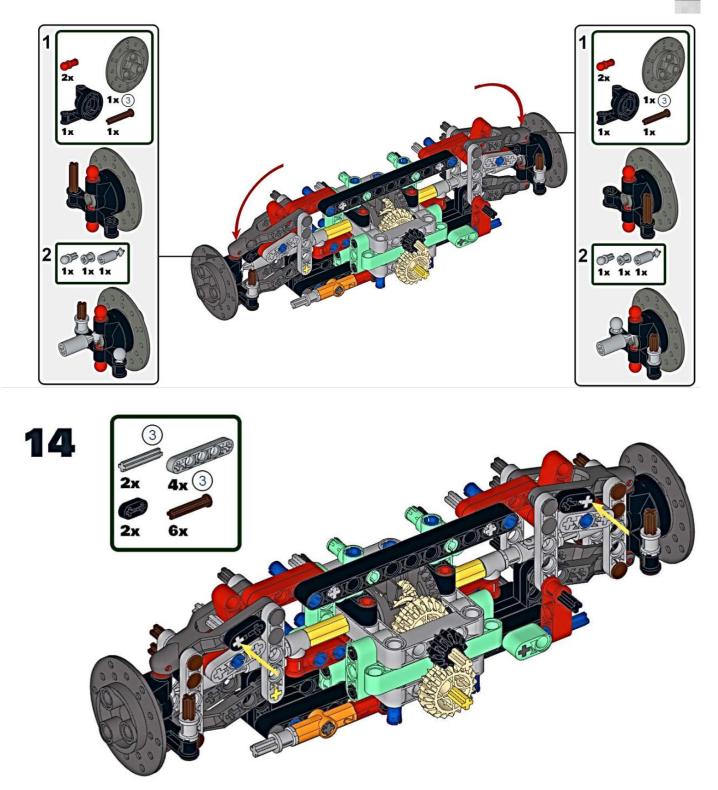

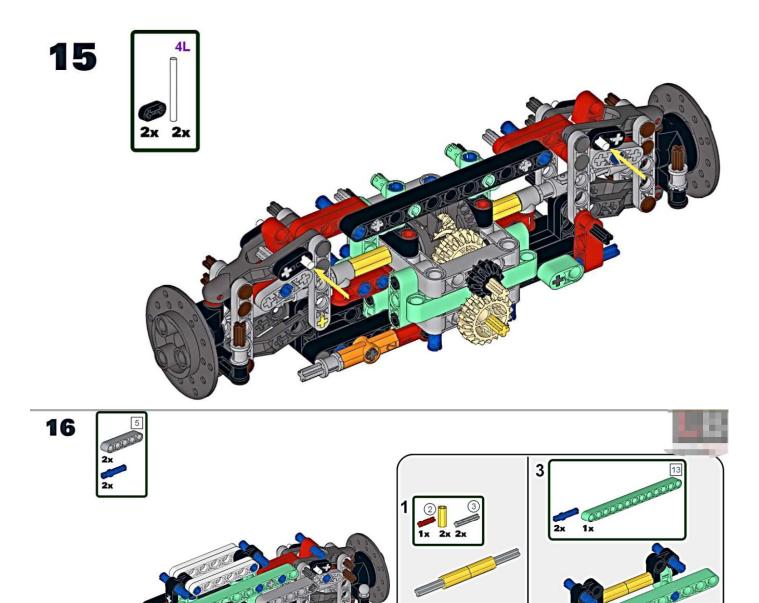

2

2x 2x


2x


4


ORIEIOIR

2101

4x

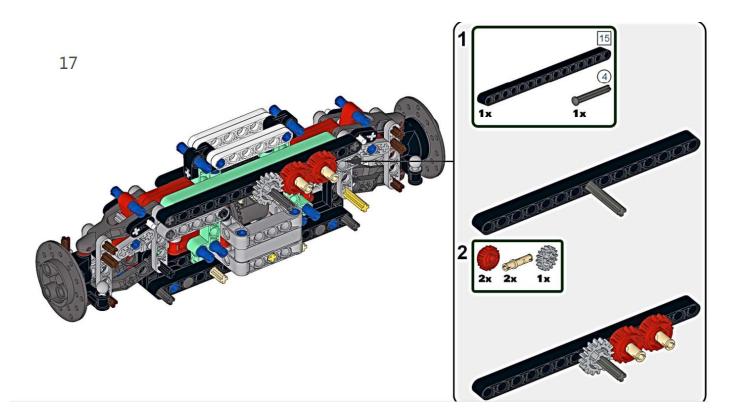

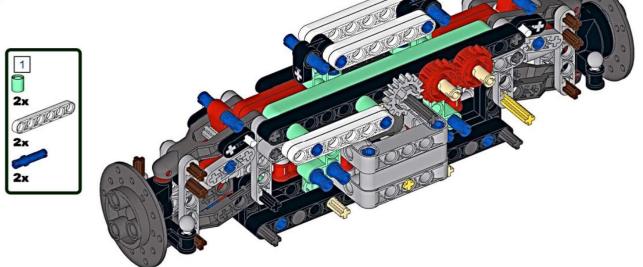

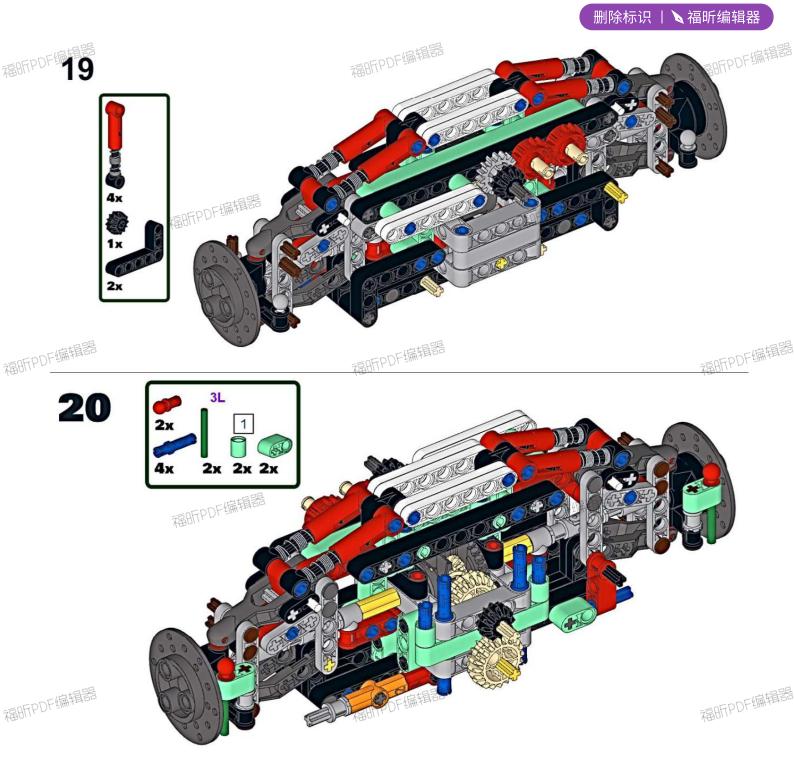

# Change the 1-unit fixings of this part to 2-unit fittings



福昕PDF编辑器










Push the shaft at the front towards the rear



Link the front and rear main bodies, and pay attention to the alignment 福昕PDF的节节he four hole positions! 福昕PDF编辑器

## 删除标识丨丶福昕编辑器

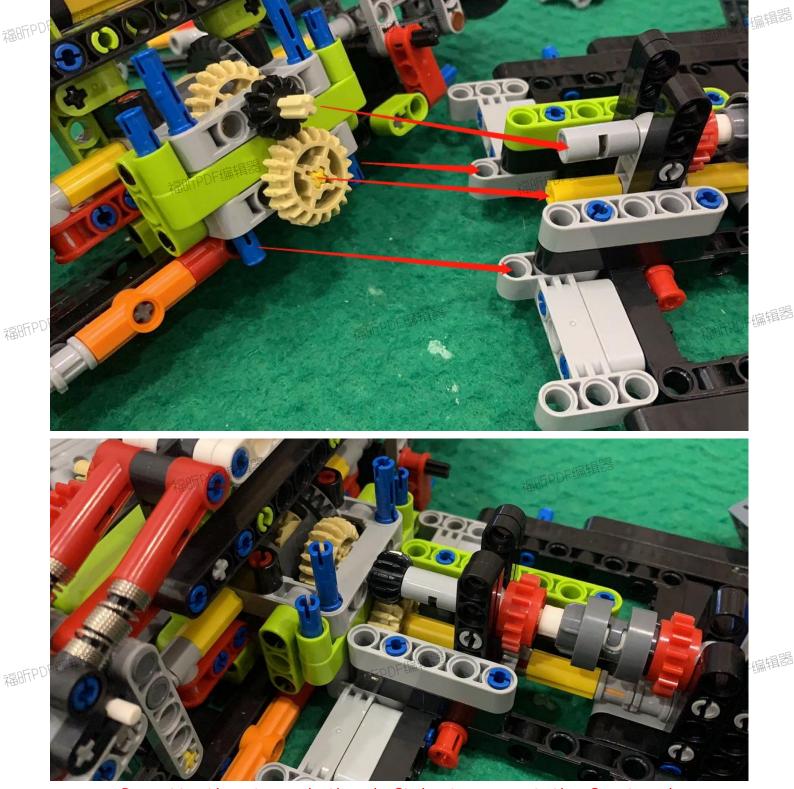

Pay attention to push the shaft in to connect the front and rear 福昕PDF编辑器



福昕PDF编辑器













福HFPDF




福明FPDF编辑器

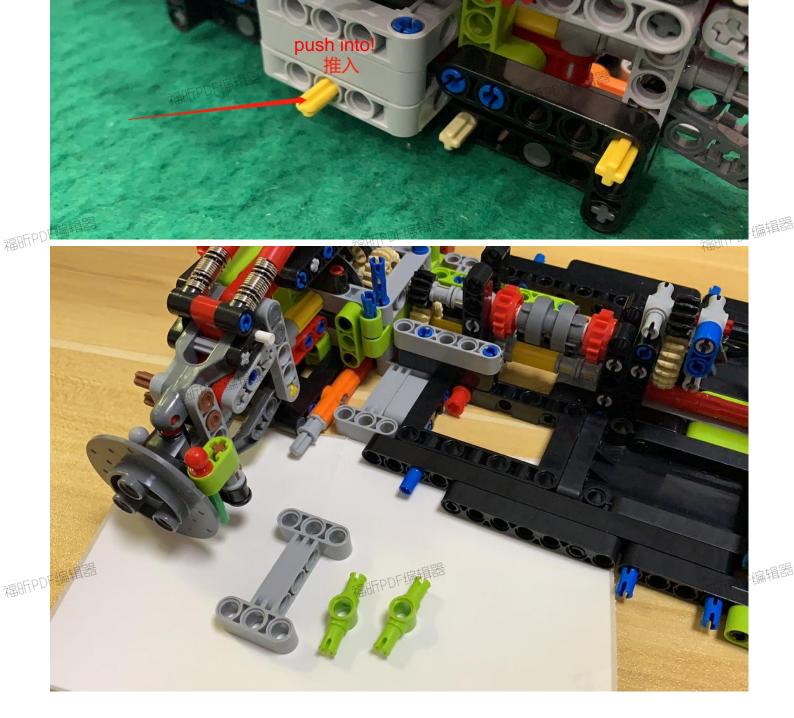


编辑器

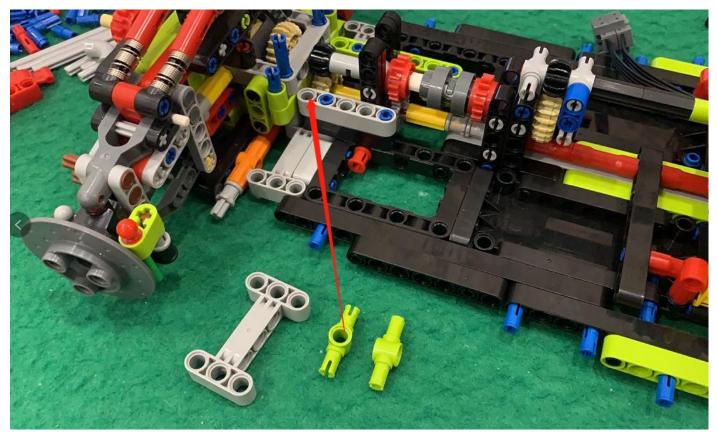


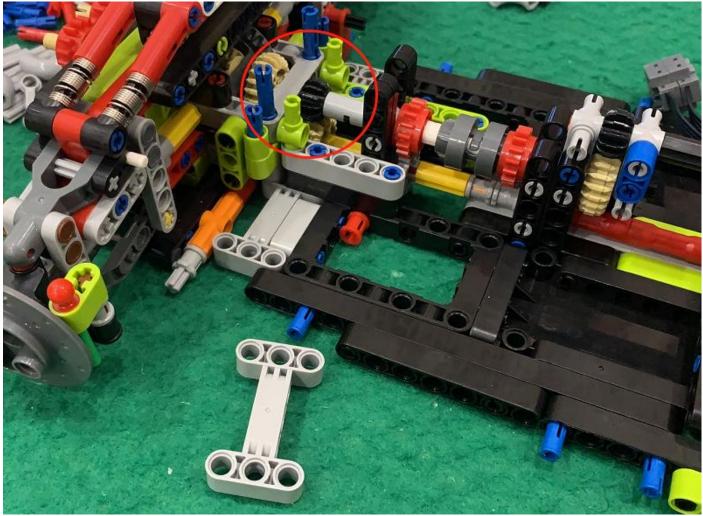



#### 删除标识 | 🔪 福昕编辑器

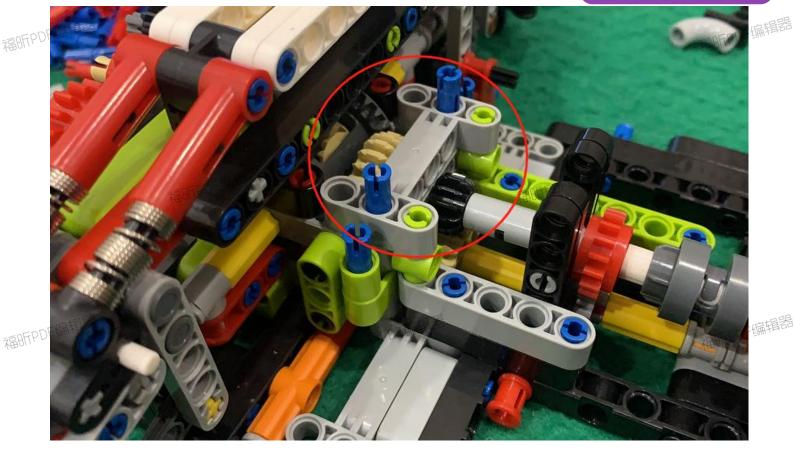


After fitting, installed wheels to test whether the car can move forward and backward normality  $\ensuremath{\mathsf{ref}}^{\mathsf{PDF}}$ 

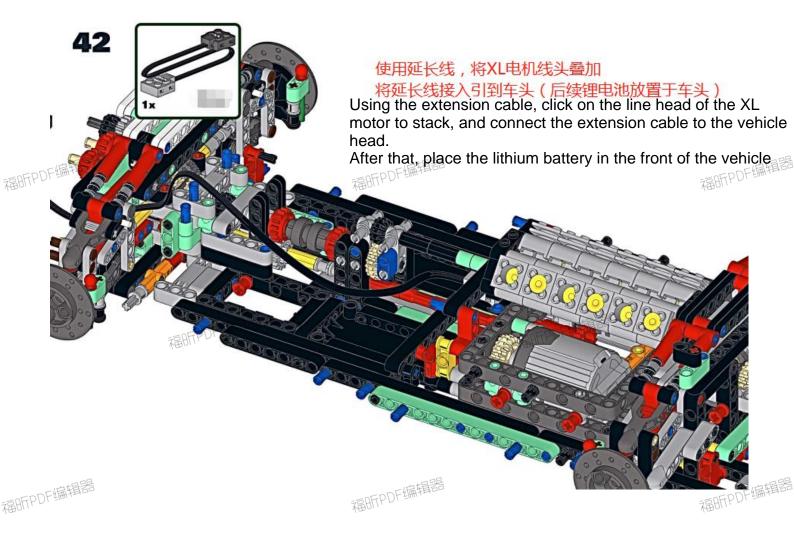

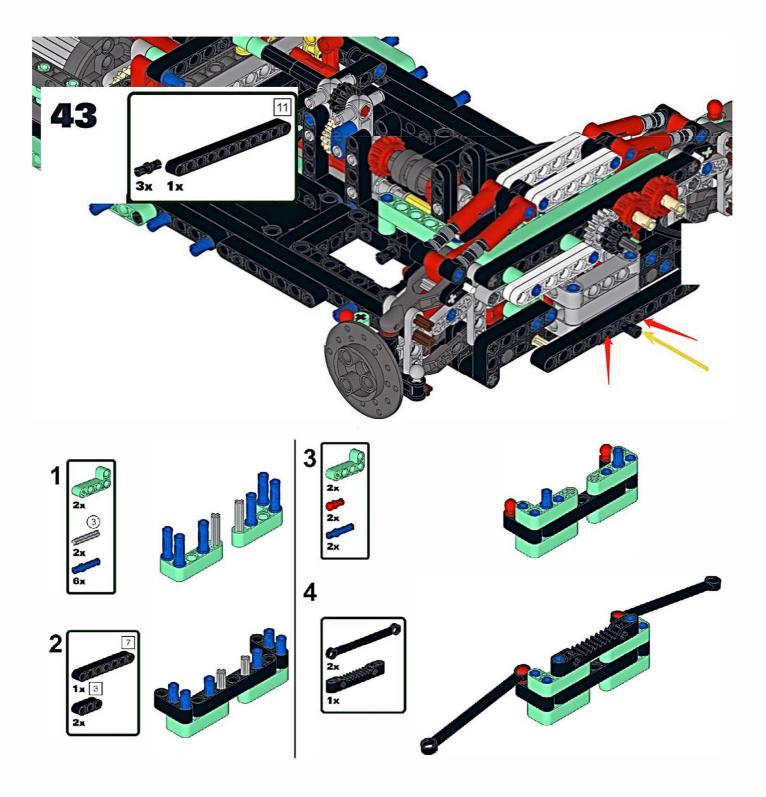

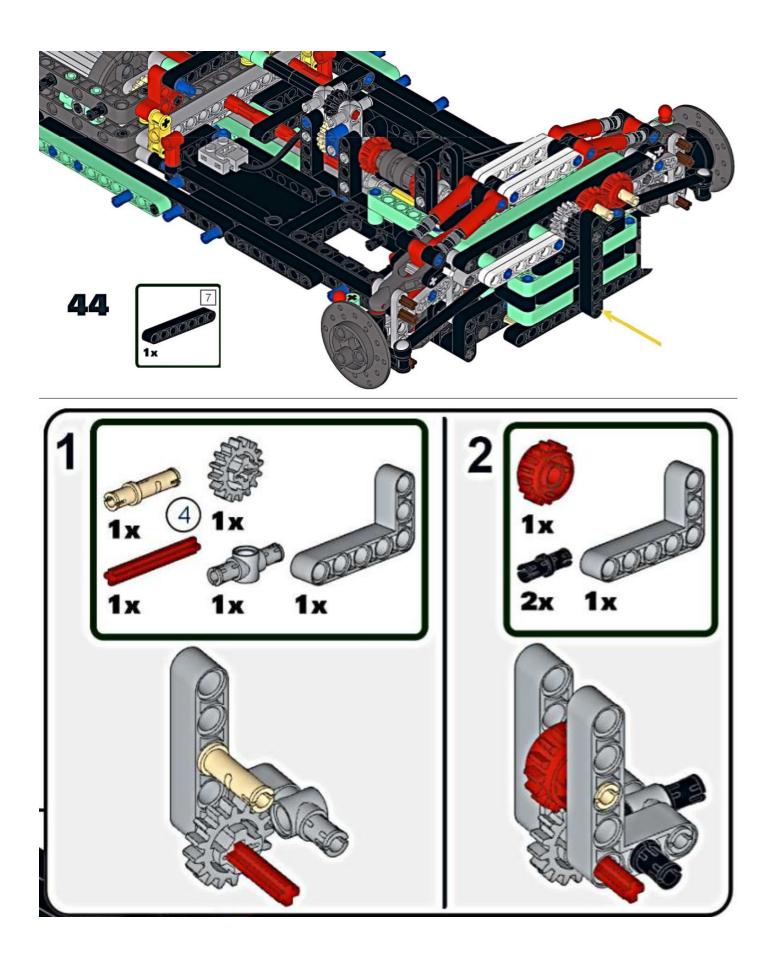

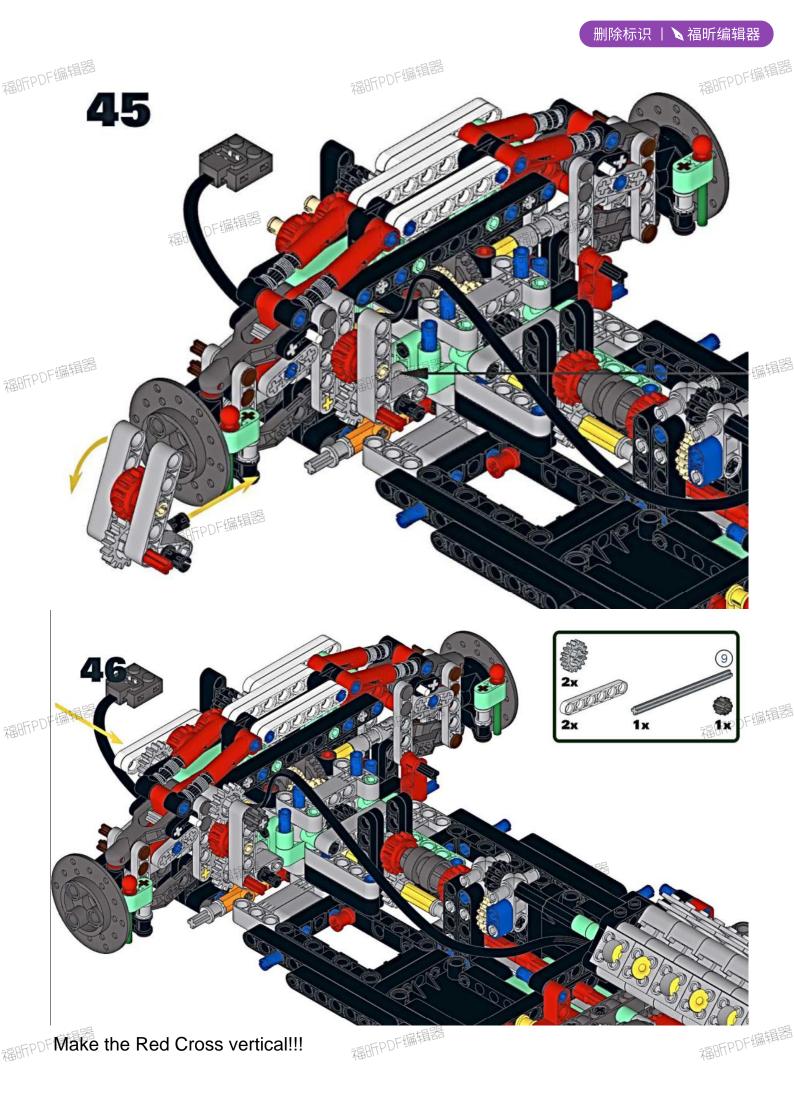


### 删除标识丨丶福昕编辑器

福昕PDF编辑器





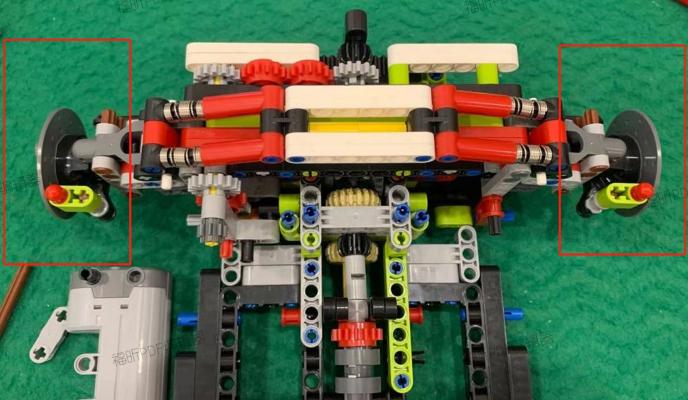

The servo motor can be installed only when both sides of the wheel are parallel and centered, and the cross hole of the gear on the serrated shaft is positive cross!





福FFPDF







编辑器

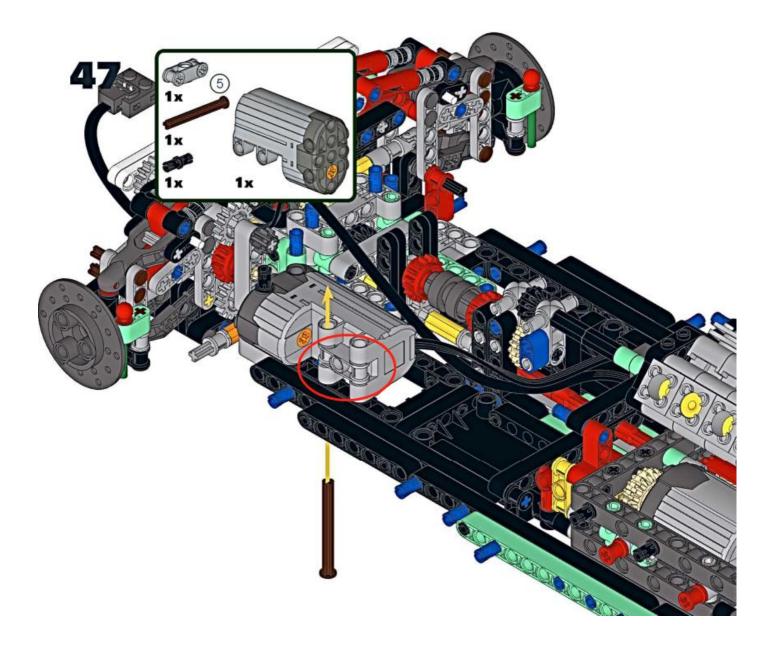

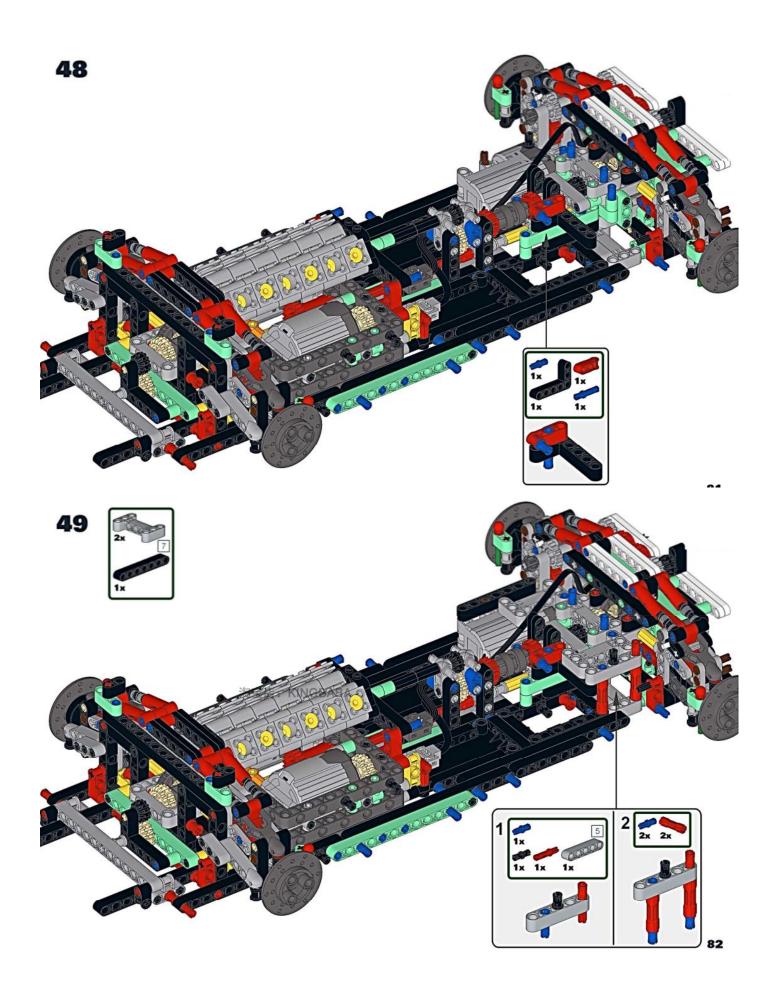

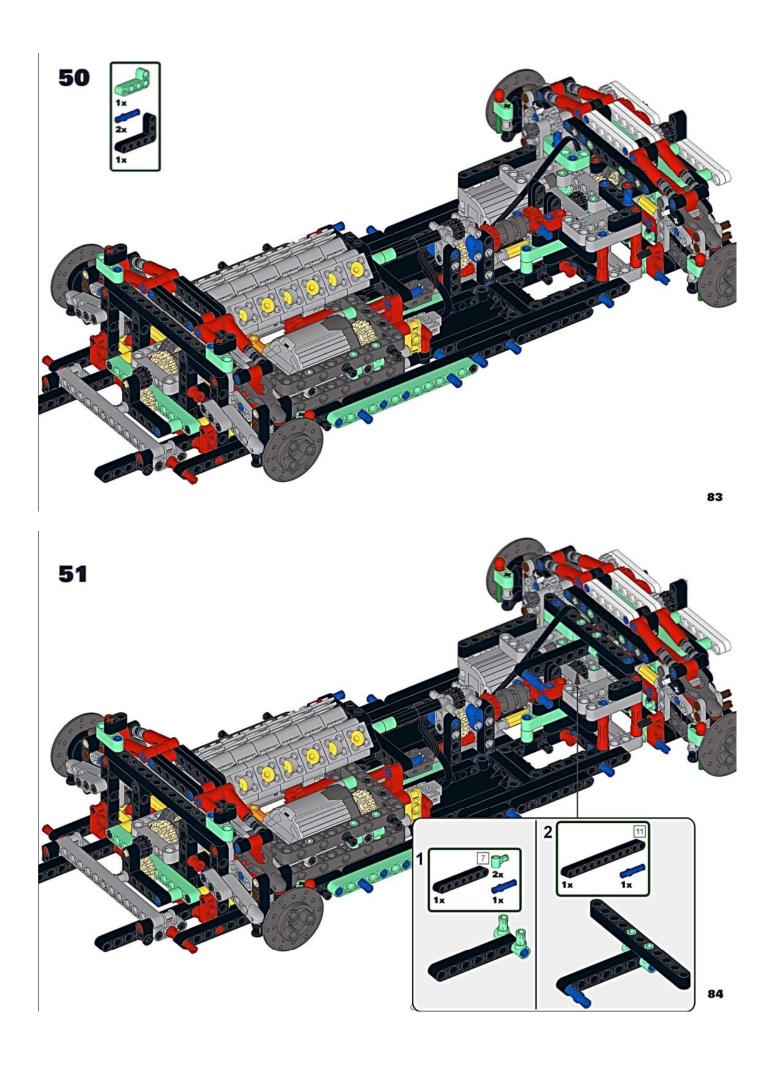

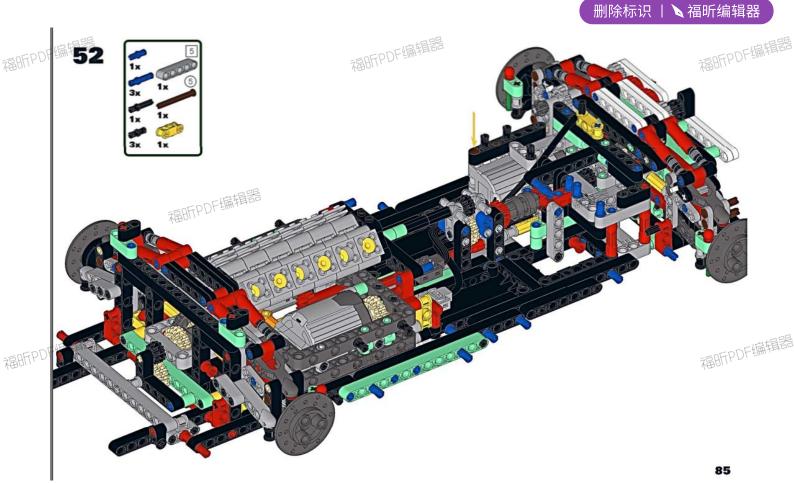


Please install the lithium battery here, continue to test the car's functions, forward and backward, turn left and right






#### 删除标识 | 🔪 福昕编辑器

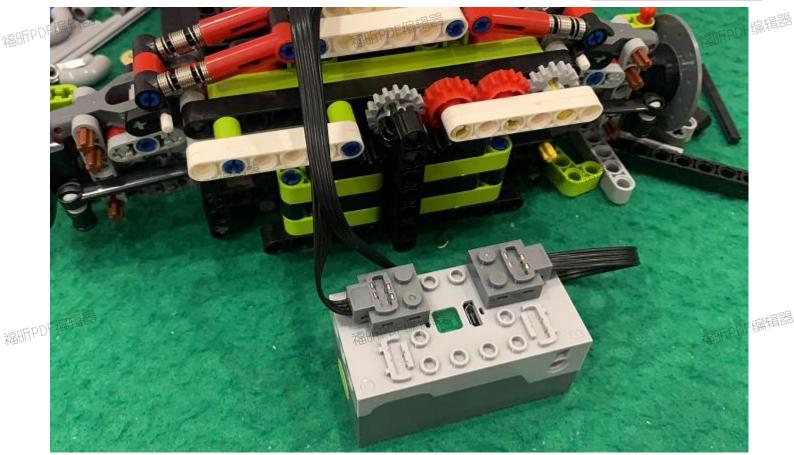


1. Assemble according to step 276 of the manual to step 282 (283-296 do not assemble) 2. Assemble according to step 297 of the manual to step 301-302. One red bolt is not installed

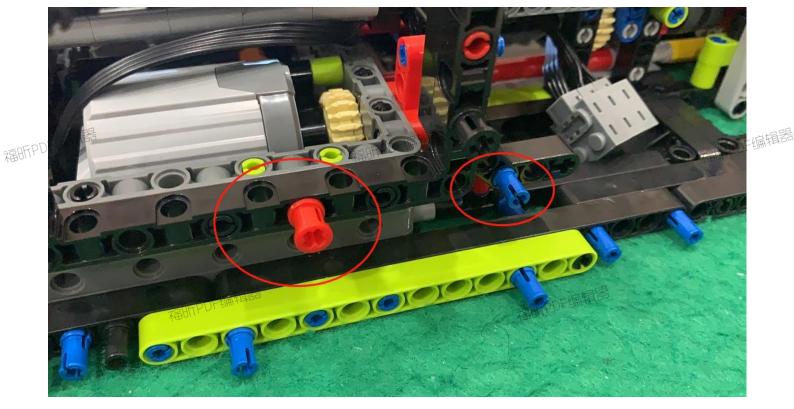

(303-317 not assembled) 福昕PDAssemble according to the instructions from step 318 to step 322-323. Qne<sup>DF编辑器</sup> red bolt is not installed



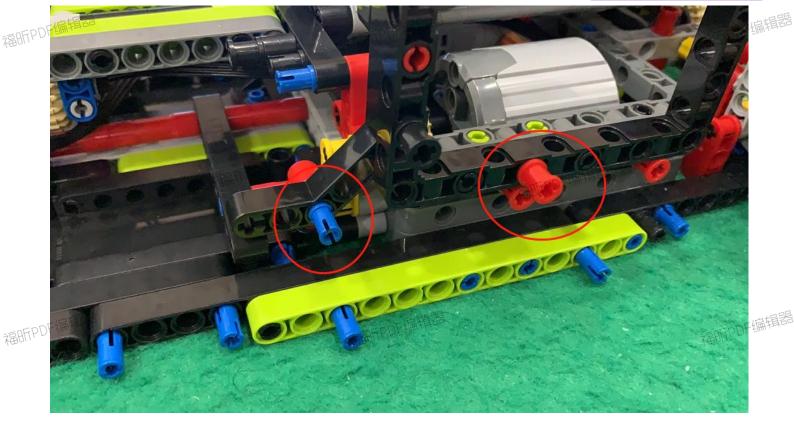


Assemble according to step 324 of the manual to step 333 (334-336 do not assemble)
Assemble according to step 337 of the manual to step 338







Continue to change according to the following figure:


福昕PDF编辑器

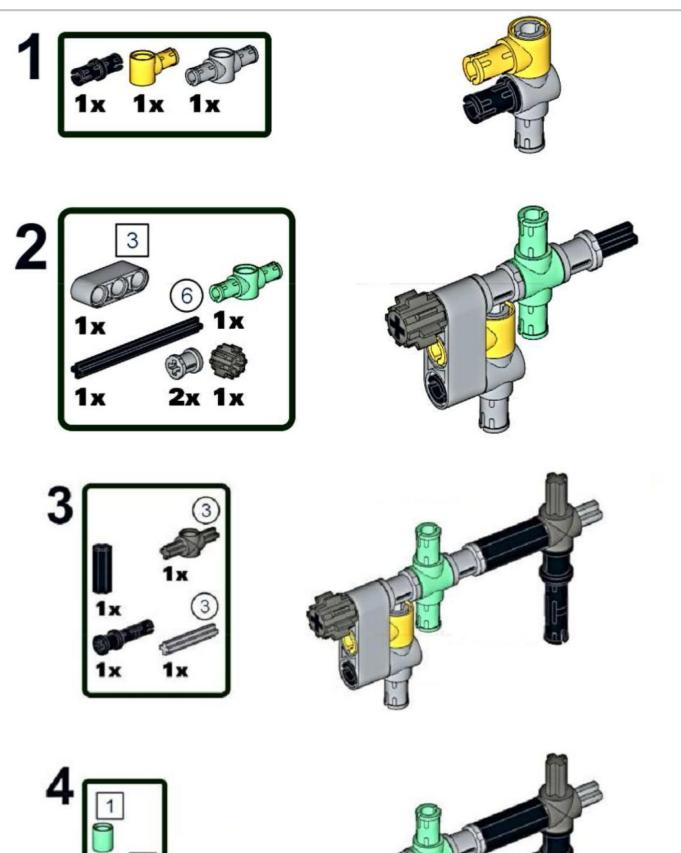

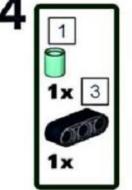


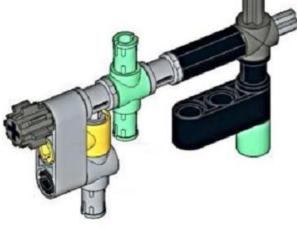


### 删除标识 | 🔪 福昕编辑器

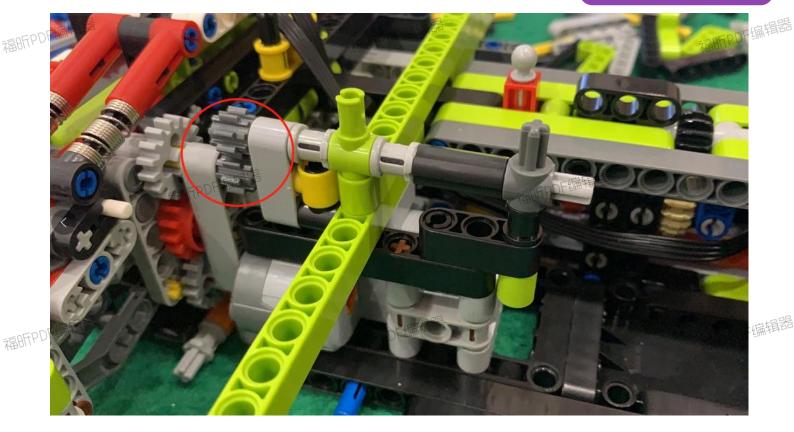


Refer to step 344 of the manual to complete the joint action of the steering wheel

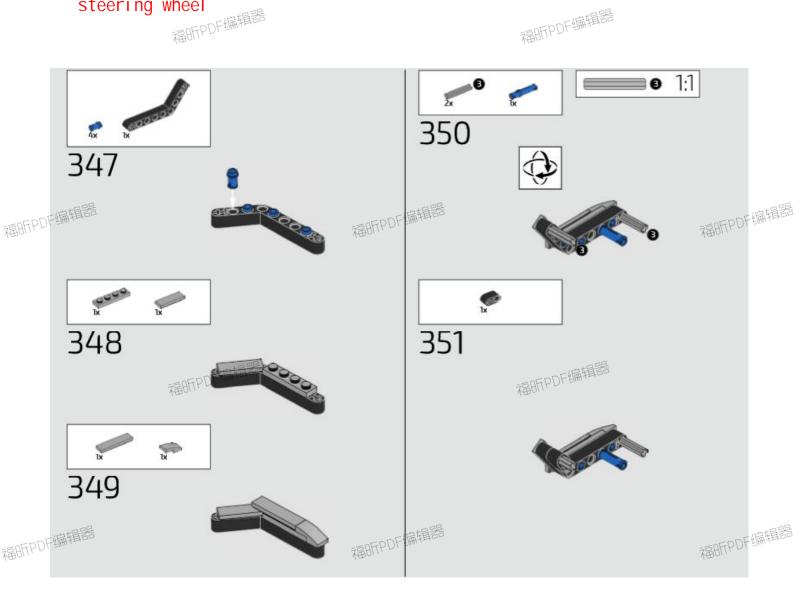

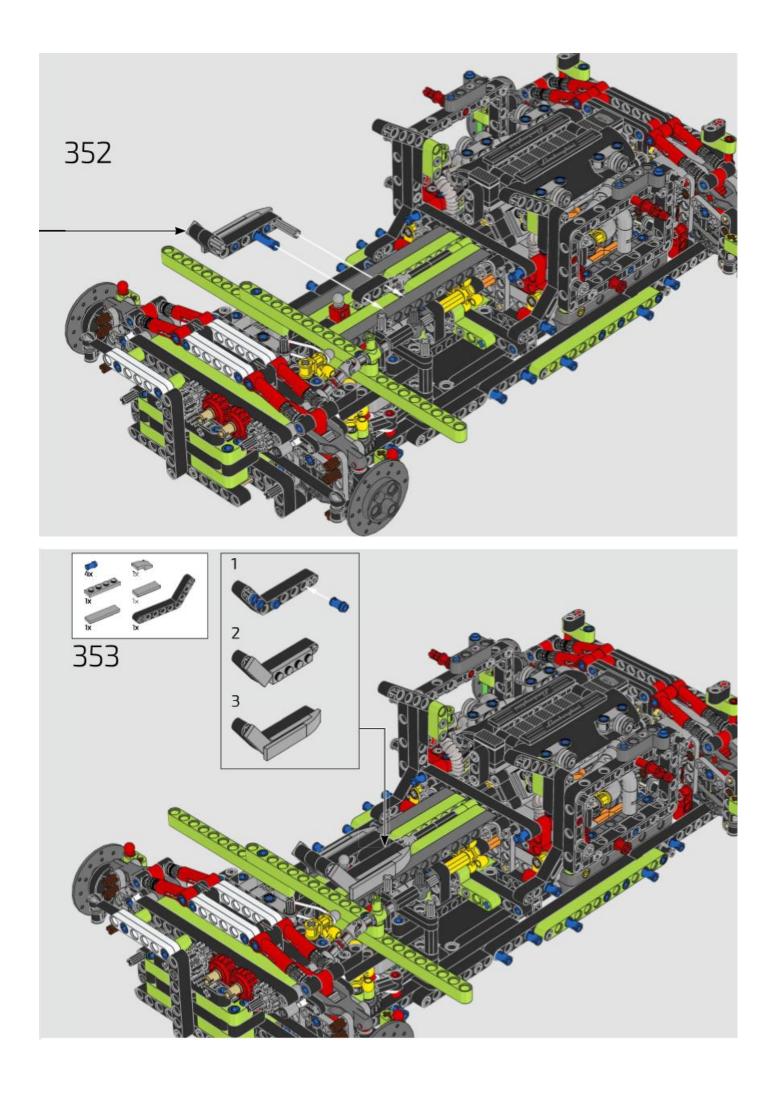

### 删除标识丨丶福昕编辑器

Continue to assemble the whole vehicle according to step 356 of the manual. After that, put the lithium battery in the trunk of the vehicle. Connect the motor connector and **Win** 

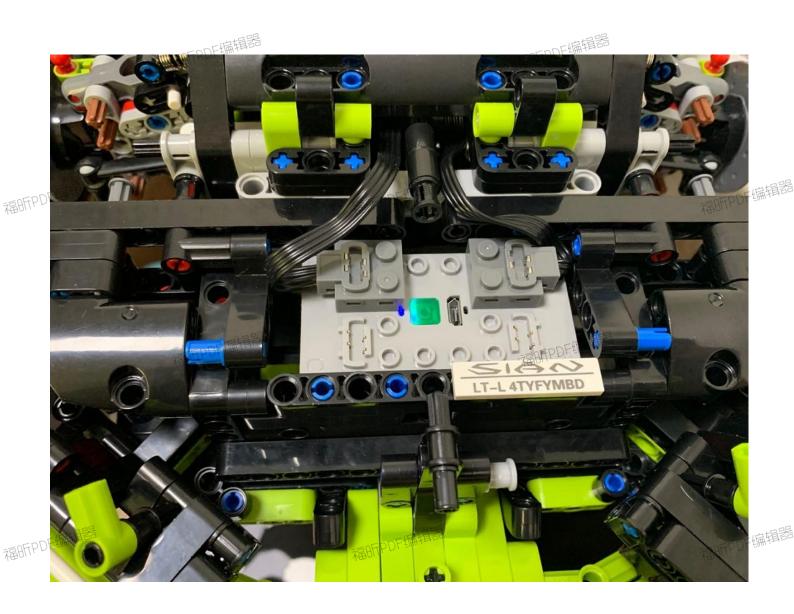

The whole power chassis has been refitted here. It's great. Inject the soul into you car and put it together.

福昕PDF编辑器







