



RECYCLABLE PACKAGING


Waterproof FM transceiver Keyboard Operation User Manual



CONTENTS

Keyboard Explanation	01
Menu (Function) Setting	02
Frequency copy mode	02
Menu Parts	03~07

Keyboard Explanation

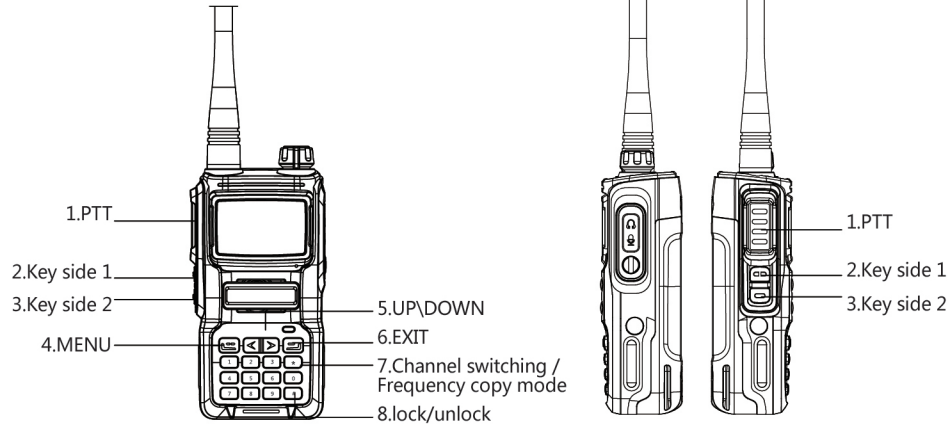

- 1.[PTT] : Push to Talk Button.
- 2.[Key side 1]:Short Press :Turn on/off FM radio。 Long Press :Alarm Function.
- 3.[Key Side 2]: Squelch Function.
- 4.[MENU]:Menu Selecting and Setting, And Confirm Function.
- 5.[UP\DOWN]: Select Item Function Key.
- 6.[EXIT]: Exit Key. In the standby , Long Press to Switch over the VFO /CH Mode.
- 7.[*]:In the Standby, Short Press to Switch A/B ChannelAnd Long Press to Frequency copy mode.
- 8.[#]:In the standby ,Long press to keyboard Lock and Unlock .

Menu (Function) Setting

1. Short Press "MENU" into Level 1 Menu Interface.
2. "UP/DOWN" to Select "Level 1 Menu" ,then Short press "MENU" again into Level 2 Menu Interface.
3. "UP/DOWN" to select "Level 2 Menu" ,then Short press "MENU" again into Level 3 Menu Interface.
4. "UP/DOWN" to Modify parameter ,Finally Short Press "MENU" to Confirm and keep , Short Press "EXIT" to Cancel and back(not keep).

For Example:

CTCSS/DCS Setting :

1. Short press "MENU" into Level 1 Menu Interface.
2. "UP/DOWN" to Select "CTCSS/DCS" , Short Press "MENU" into Level 2 Menu Interface.
3. Short Press "UP/DOWN" to Select "CTCSS/DCS" or "R-CTCSS/DCS" or "T-CTCSS/DCS" , Then Short Press "MENU" into Level 3 Menu Interface.
4. Short Press "*" key to Switch between CTCSS /DCS MODE (OFF/QT/DQT) . Short press " UP/DOWN" to Select the Code of CTCSS/DCS. Short Press "#" Key to Switch to Positive and negative code of CTCSS/DCS .
5. Short Press "MENU" To Confirm and Keep , Press "EXIT" To Cancel and Not Keep.

Frequency copy mode

1. In the Standby , Short Press "*" Key , Enter into Frequency copy mode.
2. Press UP OR DOWN KEY TO SELECT Channels which captured to keep.
3. Make the other radio to transmit , The Display show "Finished" when captured the frequency , Press PTT to go ahead Communication.
4. When finished , Then press "MENU" to Save , Press "EXIT" to Reset for test.

MENU PARTS

1.Receiving and Transmitting Function

ITEM	MENU	LCD DISPLAY	SETTING SELECTION
1	WORKING MODE	WORKING MODE	VFO/MEMORY/CH
2	STEP FREQUENCY	STEP	5K/6.25K/10K/12.5K/25K 50K/100K
3	RX OUTPUT POWER	POWER	HIGH/LOW
4	SQUELCH LEVEL	SQL	0-9
5	BANDWIDTH	BANDWIDTH	WIDE/NARROW
6	TIME-OUT TIMER	TOT	OFF/30S/60S/90S/120S/150S 180S/210S/240S/270S
7	BUSY CHANNEL LOCKOUT	BCLO	OFF/ON
8	SCRAMBLER	SCRAMBLER	OFF/ON

2.CTCSS/DCS Function

ITEM	MENU	LCD DISPLAY	SETTING SELECTION
1	CTCSS/DCS	C-CTC/DCS	OFF/CTCSS/DCS
2	CTCSS/DCS RECEIVING	R-CTC/DCS	OFF/CTCSS/DCS
3	CTCSS/DCS TRANSMITTING	T-CTC/DCS	OFF/CTCSS/DCS

3.Channels Function

ITEM	MENU	LCD DISPLAY	SETTING SELECTION
1	CHANNEL STORAGE	STOR CHANNEL	1-199
2	CHANNELS DELETE	DEL CHANNEL	1-199

4.Menu setting

ITEM	MENU	LCD DISPLAY	SETTING SELECTION
1	BACKLIGHT SELECT	BACK LIGHT	OFF/ON/5S/10S/15S
2	VOICE PROMPT	VOICE	OFF/ON
3	BEEP	KEY BEEP	OFF/ON
4	LANGUAGE SELECT	LANGUAGE	ENGLISH/CHINESE
5	KEYBOARD LOCK	KEY LOCK	OFF/ON
6	SAVING MODEL	BATT. SAVER	OFF/ON
7	OFFSET	OFFSET	0-70M
8	OFFSET DIRECTION	SFT_D	OFF/+/-

ITEM	MENU	LCD DISPLAY	SETTING SELECTION
9	DOUBLE STANDBY	DOUBLE RX	OFF/ON
10	PRIORITY TRANSMITTING	TX.SL	EDIT/BUSY
11	SQUELCH TAIL ELIMINATION	STE	OFF/ON
12	ROGER	ROGER	OFF/ON
13	WARN MODE	WARN MODE	TONE/TX TONE
14	AUTO SHUT OFF	APWR-OFF	OFF/4H/8H/16H/24H
15	TURN-ON DISPLAY	OPEN MSG	LOGO/VOLTAGE
16	CHANNEL NAME	CHANNEL NAME	OFF/ON

5.VOX Function

ITEM	MENU	LCD DISPLAY	SETTING SELECTION
1	VOX GAIN	VOX GAIN	OFF/1/2/3/4/5
2	VOX DELAY	VOX DELAY	0-3S

6.FM radio Function

ITEM	MENU	LCD DISPLAY	SETTING SELECTION
1	WORK MODE	WORK MODE	VFO/CH
2	FM MONITOR	FM-R	OFF/ON
3	CHANNELS STORAGE	STOR CHANNEL	1-25
4	CHANNELS DELETE	DEL CHANNEL	1-25