






1 Release the Velcro straps.

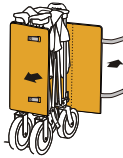


2 Remove the carry plates.

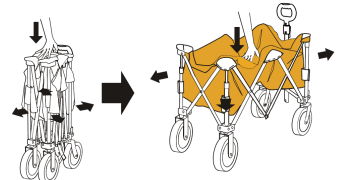

3 Push down on the middle of the wagon, until fully open. Be careful as wagon expands in all directions.

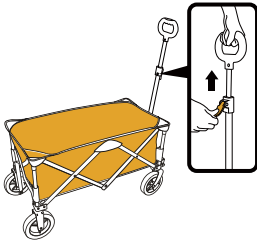


4 Place the carry plates flat on the bottom of the wagon.

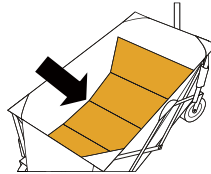

5 Place the carry plates flat on the bottom of the wagon.

#### Fold the wagon

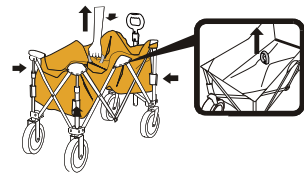

To fold, take out the plates and pull on the middle handle and push in all frames for compactness. Use plates to wrap around and secure the folded wagon.

**DESIGNED, BUILT AND TESTED  
IN THE WILD,  
FOR THE WILD.**

## Warranty

Your Portal wagon is covered by a 12-month quality warranty.

## Questions? Talk to Us

Email : [Info@portaloutdoors.com](mailto:Info@portaloutdoors.com)  
[www.portaloutdoors.com](http://www.portaloutdoors.com)

@PortalOutdoorsGear  
 @portaloutdoorsusa

## Safety Tips

- Do not put the wagon near fire or high temperature environment, which may cause damage of plastic parts.
- Do not use it on uneven surfaces as it may shorten the products life.
- This product has been designed for storing and transporting only.
- This product is not a toy for children. Do not sit in it.
- This wagon holds a maximum of 225LBS. Exceeding maximum capacity limit may cause damage to product.
- Please secure all goods in it to avoid anything dropping. Do not run or rush when moving.
- Exert care when assembling/disassembling so that fingers are not pinched.
- Do not store the product outside, which may cause damage to frame or plastic parts.
- Please remove dirt and contents after use.
- If the fabric becomes dirty, please clean with a light, cleaning agent.