snede

SNODE RECUMBENT BIKE R16 SNODE R16卧式健身车



INSTRUCTION MANUAL /使用说明书



IMPORTANT: Read all instructions carefully before using this product. Retain this owner's manual for future reference. The specifications of this product may vary from his photo, subject to change without notice.

重要信息:使用本产品前请仔细阅读所有说明。请保留此用户手册以备将来参考。图片仅供参考,产品以实际实物为准。

ATTENTION



🚇 Assembly Instruction Video

You can scan this QR code to enter into our Youtube page to follow the product assembly videos.

Hope it will be helpful for you.

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

STOP. Contact customer service if you have any questions regarding assembly or proper operation of the machine.

如果您有任何跟这台设备相关的问题,请联系售后客服服务。

Email us at:

snodefitness@outlook.com

Or call us at:

1-323-510-1818

Hours:

8:00 am to 5:00 pm (PST) Daily



CATALOG/目录


IMPORTANT SAFETY INFORMATION	01
EXPLODED-VIEW & PARTS LIST	02
PARTS LIST	04
ASSEMBLY INSTRUCTIONS	06
QUICK START GUIDE	16
INSTRUCTION MANUAL	17
安全使用须知	·18
爆炸图	19
零部件清单	21
安装步骤	23
健身器材使用前活动入门指南	33
仪表说明书	34

IMPORTANT SAFETY INFORMATION


Please keep the instruction manual properly to facilitate future inquiries.

- 1. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained and used properly.
- 2. Before starting any exercise program you should consult your doctor to determine if you have any medical or physical conditions that could put your health and safety at risk, or prevent you from using the equipment properly. Your doctor's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
- 3. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, extreme shortness of breath, lightheadedness, dizziness or feelings of nausea. If you do experience any of these conditions you should consult your doctor before continuing with your exercise program.
- 4. Keep children and pets away from the equipment. The equipment is designed for adult use only.
- 5. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 0.6 meters of free space all around it.
- 6. Before using the equipment, check that the nuts and bolts are securely tightened. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during use, stop immediately. Do not use the equipment until the problem has been rectified.
- 7. There are many functions of the computer, which value will show when using the equipment according the amount of exercise, here warmly remind you that the value of heart pulse just give you some reference.
- 8. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may get caught in the equipment or that may restrict or prevent movement.
- 9. This equipment is designed for indoor and family use only. Maximum weight of user: 120 KG.
- 10. Care must be taken when lifting or moving the equipment so as not to injure your back.
- 11. The equipment is not suitable for therapeutic use.
- 12. Please save this manual and assembling tools well.

EXPLODED-VIEW & PARTS LIST

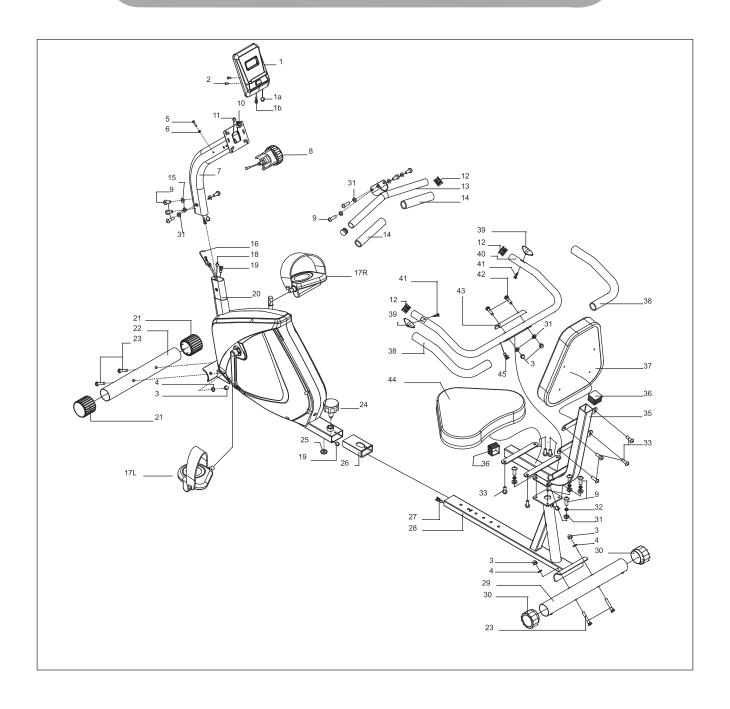

EXPLODED-VIEW & PARTS LIST

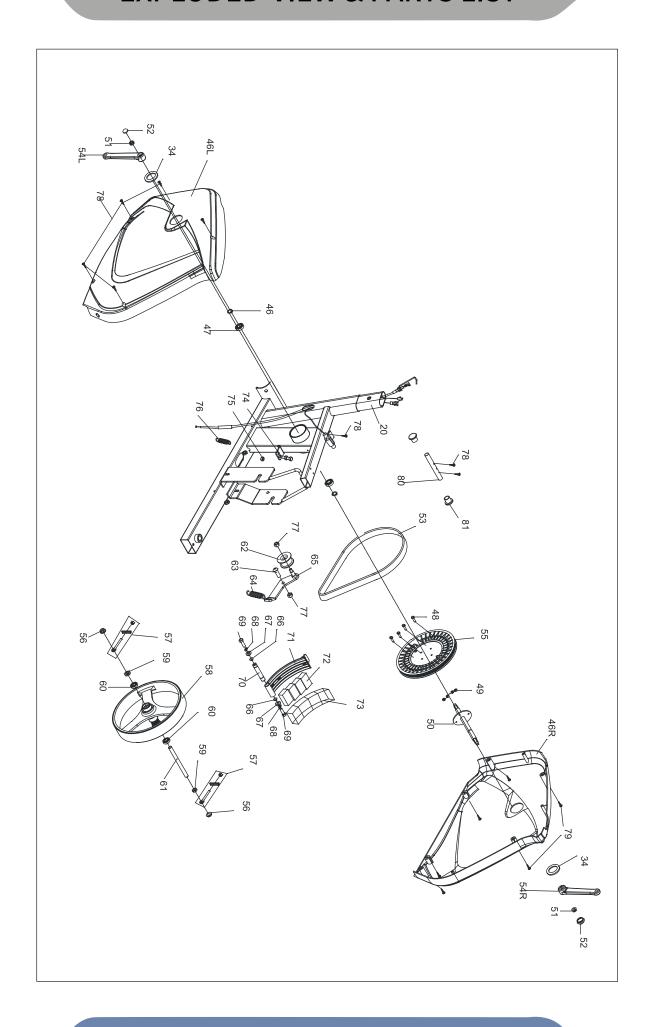

PARTS LIST

No.	Description	Qty.
1	Computer	1
2	ScrewM5*10	2
3	Domed Nut M8	6
4	Arc Washer D8xΦ20x1.5XR30	4
5	Bolt M5*25	1
6	Arc Washer D8xΦ20x1XR25	1
7	Upping Post	1
8	Tension Control Wire 1	1
9	Screw M8*16	12
10	Handle Wire 1	1
11	Sensor Wire	1
12	End Cap	4
13	Handlebar	1
14	Foam Grip	2
15	Arc Washer D8xΦ16x1.5XR16	2
16	Tension Control Line 2	1
17L/R	Pedal (L/R)	2
18	Sensor Line	1
19	Middle Wire	1
20	Main Frame	1
21	End Cap	2
22	Front Stabilizer	1
23	Carriage Bolt M8*62	4
24	Spring Knobs M16x1.5	1
25	Foot Pad	1
26	Square Bushing	1
27	Handle Wire2	1
28	Back Bracket	1
29	Rear Stabilizer	1
30	End Cap	2
31	Washer D8xΦ16x1.5	12


No.	Description	Qty.
32	Spring Washer D8	4
33	Screw M6*16	8
34	Plastic Cover	2
35	Cushion Post	1
36	End Cap F38	2
37	Back Cushion	1
38	Foam Grip	2
39	Pulse Φ22	2
40	Handlebar	1
41	Screw	2
42	Carriage bolt M8*45	2
43	Cover Plate	1
44	Seat	1
45	Sensor Line	1
46	Washer	2
46L/R	Cover	2
47	Bearing	2
48	Bolt M6*15	4
49	Nut M6	4
50	Axle	1
51	Nut 1	1
52	Washer	1
53	Belt	1
54	Crank	1
55	Belt Pulley	1
56	Hexagon Flange Nut M10*1.0	2
57	Bolt	1
58	Flywheel	1
59	Hexagon thin nut M10*1.0	2
60	Bearing	2
61	Axle	1

PARTS LIST

No.	Description	
62	Pinch Roller	1
63	Screw M8*19	1
64	Tension Spring	1
65	Steel Bracket	1
66	Snap Spring	2
67	Washer D6xΦ16x1.5*	2
68	Spring Washer D6	2
69	Bolt M6*20	2
70	Axle	1
71	Magnetic Board	1
72	Magnet	4


No.	Description	
73	Plastic Lattice	1
74	Bolt M6*30	1
75	Nut M6	2
76	Tension Spring	1
77	Nylon Nut M8	2
78	Screw	5
79	Screw	7
80	Short tube	1
81	End Cap	2
	Solid Wrench S13-14-15	1
	Hexagon wrench S6	1

STEP 1

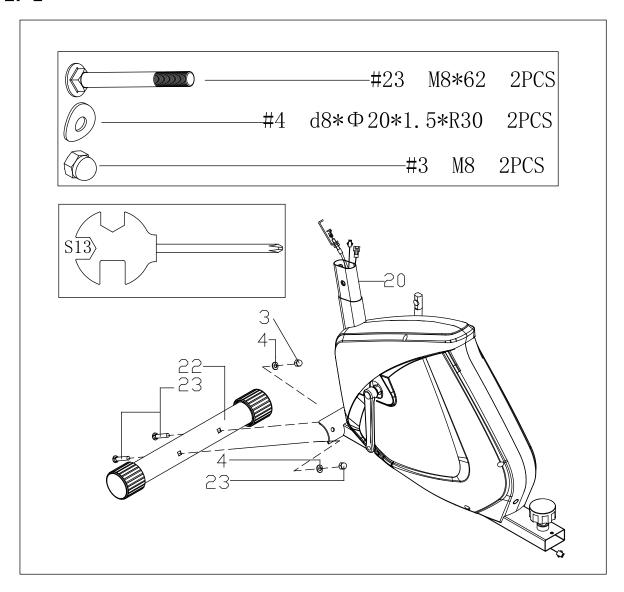


A. Attach the front stabilizer (22) to the main frame (20) with carriage bolt (23), domed nut (3) and arc washer (4).

STEP 2

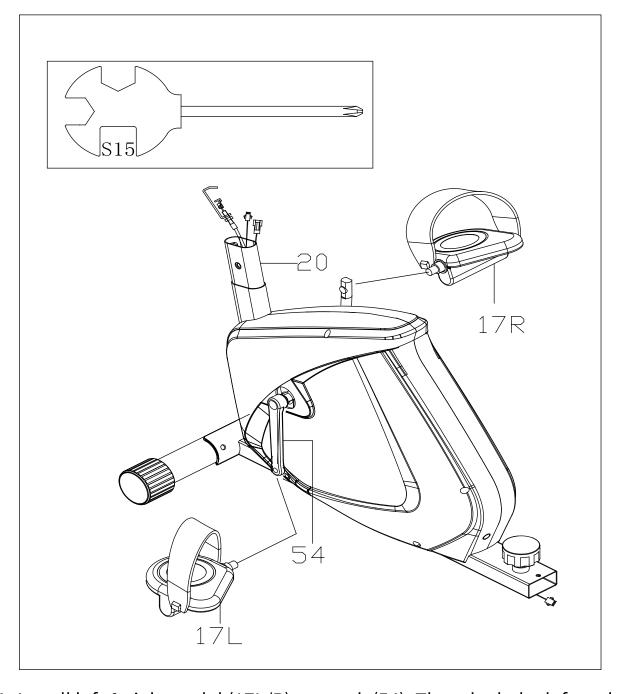


A. Install left & right pedal (17L/R) to crank (54). Then, lock the left pedal (17L) tightly in counterclockwise direction. In addition, lock the right pedal (17R) tightly in clockwise direction.

STEP 3

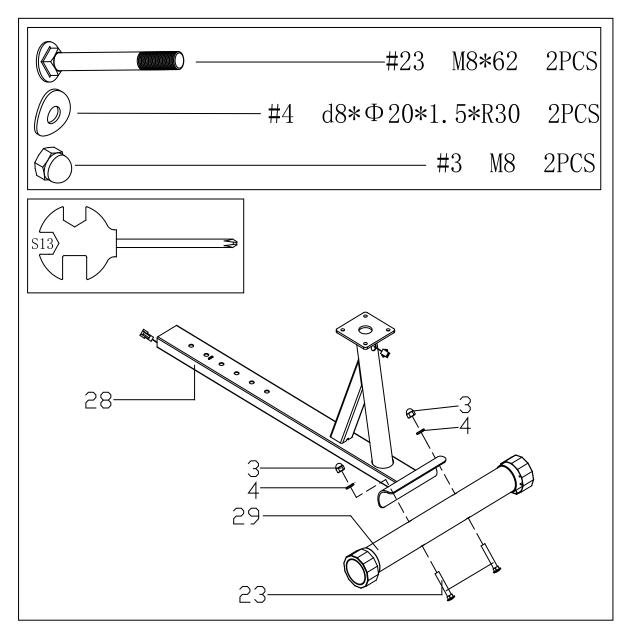


A. Attach the rear stabilizer (29) to the back bracket (28) with carriage bolt (23), domed nut (3) and arc washer (4).

STEP 4

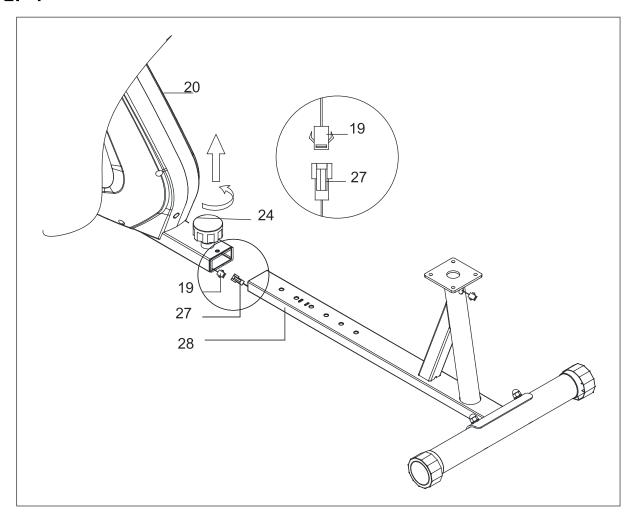


A. Connect the sensor 19 & 27, and slide the back bracket (28) to the main frame (20). You will have to fixing the Adjustment Knob (24). You can adjust the distance based on your height.

STEP 5

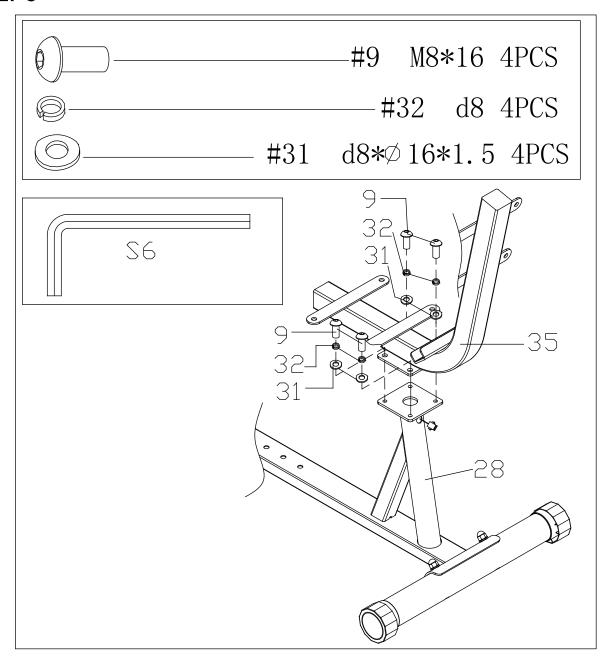


A. Attach the cushion post (35) to the back bracket (28) with the washer (31), spring washer (32) and bolt (9).

STEP 6

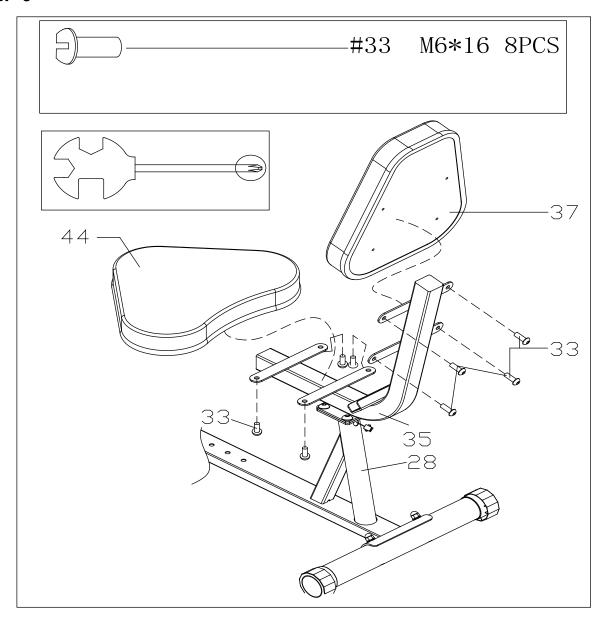


A. Attach the back cushion (37) and the cushion (44) to the cushion post (35) with the bolt (33) and washer (34).

STEP 7

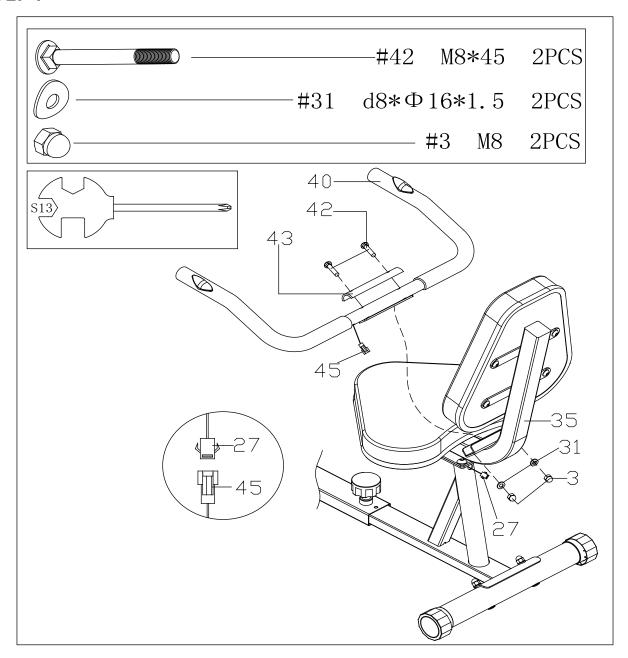


A. Connect handle wire (45) with pulse wire (27). Then, fix cover plate (43) and handlebar (40) onto seat tube (35) with carriage bolt (42), flat washer (31) and domed nut (3).

STEP 8

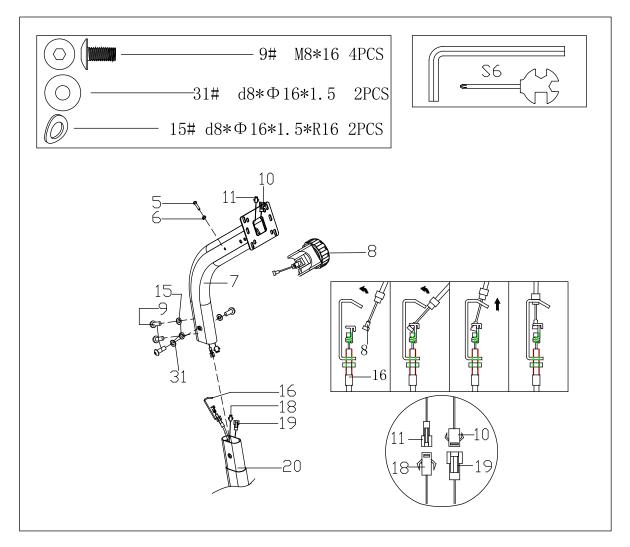


A. Connect the sensor line 11&18, handle wire 10&19, and tension control wire 8&16, attach the tension control (8) to the upping post with nut (5) and arc washer (6). Install the support tube (7) on the main frame (20) with arc washer (15) and bolt (9) and washer (31).

STEP 9

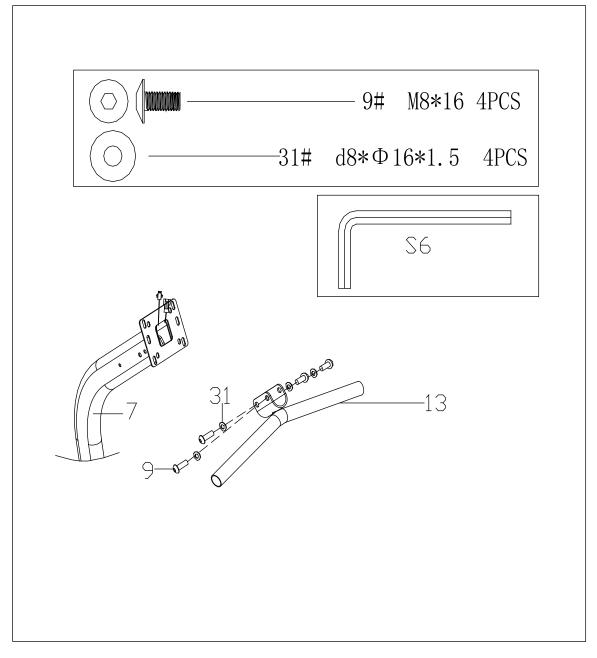

A. Attach handlebar (13) onto support tube (7) with bolt (9), flat washer (31).

STEP 10

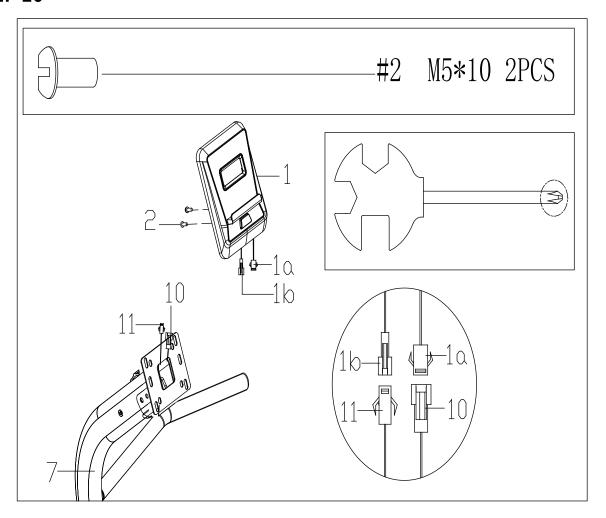

A. Connect the sensor line (11), handle wire (10) with computer line (1b, 1a) separately. Fix computer (1) onto support tube (7) with Screw (2).

QUICK START GUIDE

STRETCH EXERCISE

No matter how you do sports, please do some stretch at first, The warm muscle will extend easily, so warm up yourself with 5-10minutes, Then We suggest the following stretch exercise, five times. 10counts for each time or longer do these exercise again after sports.

1. TOE TOUCH

Slow bend forward from your waist, letting your back and shoulders relax as you stretch toward your toes, Reach down as far as you can and hold for 15 counts. And then relax, repeat 3 times. (Picture 1).

2. HAMSTRING STRETCH

Slow bend forward from your waist, letting your back and shoulders relax as you stretch toward your toes, Reach down as far as you can and hold for 15 counts. And then relax, repeat 3 times. (Picture 2).

3. CALF-ACHILLES STRETCH


Lean against a wall with your left leg in front of the right and your arms forward, Keep your right leg straight and the left foot on the floor, then bend the left leg and lean forward by moving your hips toward the wall, Hold, then repeat on the other side for 15 counts. Then relax and repeat 3 times for each leg (Picture 3).

4. QUADRICEPS STRETCH

With one hand against a wall for balance, reach behind you and pull your right foot up. Bring your heel as close to your buttocks. hold for 10-15counts, relax. Repeat three times for each foot. (Picture 4).

5. INNER THIGH STRETCH

Sit with the soles of your feet together with your knees pointing outward. Pull your feet as close into your groin as possible. Gently push your knees towards the floor. Hold for 15 counts. Then relax and repeat 3 times. (Picture 5).

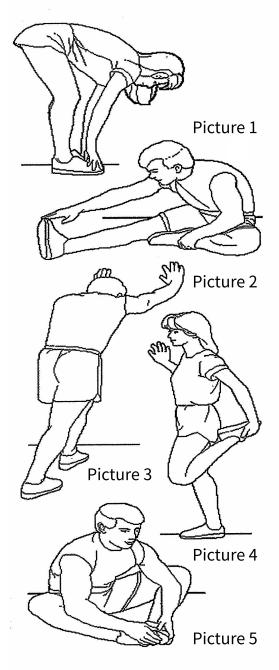

INSTRUCTION MANUAL

SPECIFICATIONS:

TIME	
SPEED(SPD)	0.0-99.9KM/H (ML/H)
DISTANCE(DIST)	0.00-999.9KM (ML)
CALORIE(CAL)	0.00-9999KCAL
ODOMETER(ODO)	0.0-9999KM (ML)
PULSE (PUL)	0,40~240BPM

KEY FUNCTIONS:

MODE(SELECT/RESET): This key lets you to select and lock on to a particular function you want

OPERATION PROCEDURES:

1. AUTO ON/OFF

- (1) The system turns on when any key is pressed or when it sensor an input from the speed sensor.
- (2) The system turns off automatically when the speed has no signal input or no key are pressed for approximately 4 minutes.

2. RESET

(1) The unit can be reset by either changing battery or pressing the MODE key for 3 seconds.

2. MODE

(1) To choose the SCAN or LOCK if you do not want the scan mode, press the MODE key when the pointer on the function you want which begins blinking.

FUNCTIONS:

- **1. TIME:** Press the MODE key until pointer lock on to TIME. The total working time will be shown when starting exercise.
- **2. SPEED:** Press the MODE key until the pointer advance to SPEED. The current speed will be shown.
- **3. DISTANCE:** Press the MODE key until the pointer advance to DISTANCE. The distance of each workout will be displayed.
- **4. CALORIE:** Press the MODE key until pointer lock on to CALORIE. The calorie burned will be displayed when starting exercise.
- **5. ODOMETER (IF HAVE):** Press the MODE key until the pointer advance to ODEMETER. The total accumulated distance will be shown.
- **6. PULSE (IF HAVE):** Press the MODE key until the pointer advance to PULSE. User' scurrent heart rate will be displayed in beats per minute. Place the palms of your hands on both of the contact pads(or put ear-clip to ear), and wait for 30 seconds for the most accurate reading.

SCAN:

Automatically display changes every 4 seconds.

BATTERY: If improper display on monitor, please reinstall the batteries to have a good result.

PARTS REQUEST FORM

SNODE GROUP, Inc.

EMAIL THIS FORM WITH YOUR RECEIPT OF PURCHASE TO snodefitness@outlook.com *

NAME:			
ADDRESS:			
CITY:		STATE:	ZIP:
TELEPHONE:	(Day)		
	(Night)_		
MODEL#:			
PURCHASE DA	ATE:		
PLACE OF PUR	RCHASE: _		
PART	#	DESCRIPTION	QTY

"YOUR ORDER WILL BE PROCESSED WITHIN 3 BUSINESS DAYS"