 **LaserPecker**  
**LaserPecker Versatile Electric Roller**  
 User Manual




Product Name: LaserPecker  
 Model: Versatile Electric Roller  
 Version Number: 2022-10A

# 01 /Accessories List

Versatile electric roller      USB-C cable



Silicone bands





## After-sales service

- We offer global online technical support services for this product. If you encounter any problems during your use, please feel free to contact us and we will respond to you as soon as possible.
- Facebook : LaserPecker
- Email : support@laserpecker.com
- Tel.: +86 0755-28913864

# 02 /Indicator and Interface Instructions

- **Interface and indicator**
- **Connection diagram**

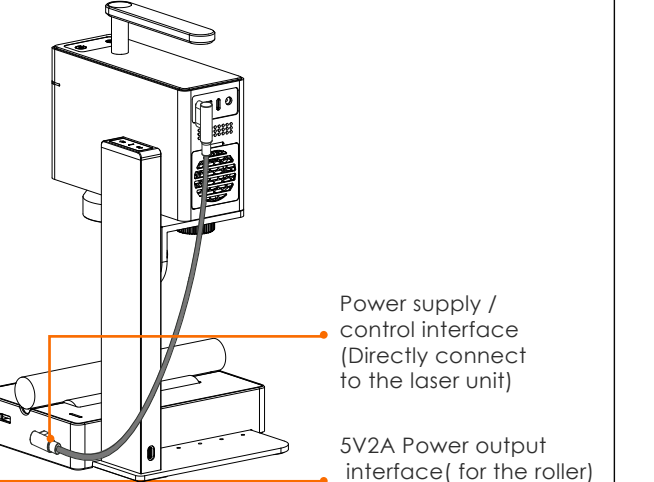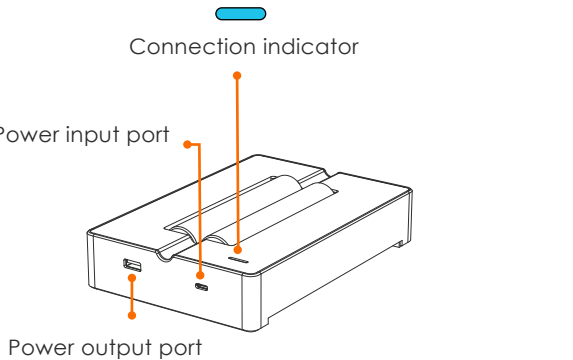



Power supply / control interface (Directly connect to the laser unit)

5V2A Power output interface( for the roller)

# 03 /Ranging Method

- **Ruler ranging**
- **Ranging by focusing dots**



Place an object on the roller, adjust the height of stand, and measure the distance with a ruler to make sure the bottom of the machine is 130mm away from the object's surface.

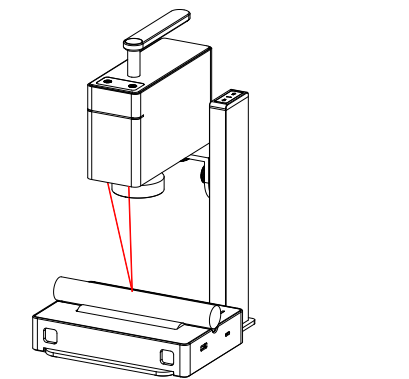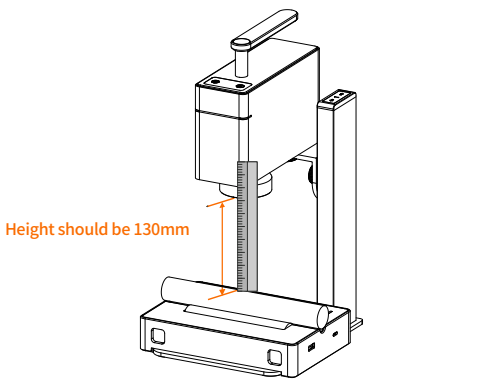

# 04 /Engraving Mode-**Cylinder Mode**

This mode is used to versatile electric roller objects. Select [cylinder] mode in APP, set the correct distance 130mm, preview engraving position, set a proper power/depth settings and engraving size, then start engraving.

- 1 Mode selection
- 2 Open the Versatile Electric Roller
- 3 Select the cylinder mode

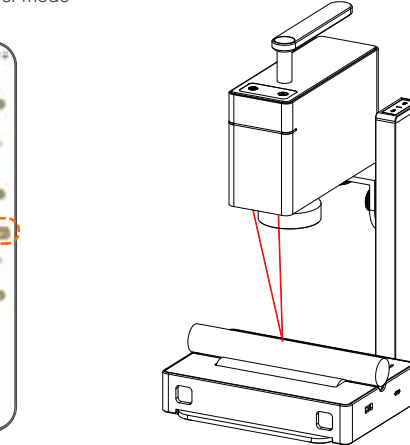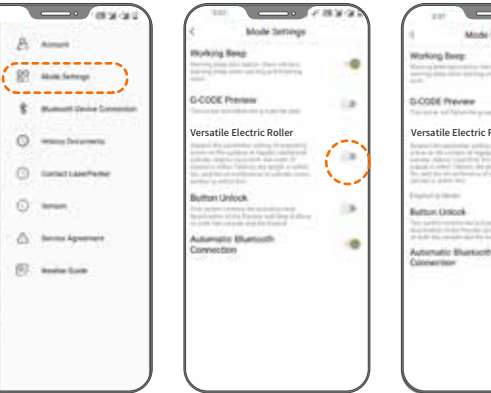

## Engraving Frictionless Objects

In [cylinder] mode, if the cylindrical object is frictionless, please wrap silicone bands on it.

- 1 Wrap two silicone bands on both ends of the object.
- 2 They'll prevent the object from skidding from the roller.

