

Exploiter ApplePie Lite Manual

AI-666


➤ Description

Wireless CarPlay Wireless/wired Android auto USB adapter ,Fit for car OEM Wired CarPlay ,Control by OEM touch screen,Buttons and Knobs which is as same as OEM CarPlay operation

➤ Specification:

1. CPU: Cotex A7 Dual Core
2. RAM: DDR3 256MB FLASH: 128MB nand flash
3. Bluetooth & WiFi: BT/WIFI 2.4G/5.8G

➤ Unit menu:

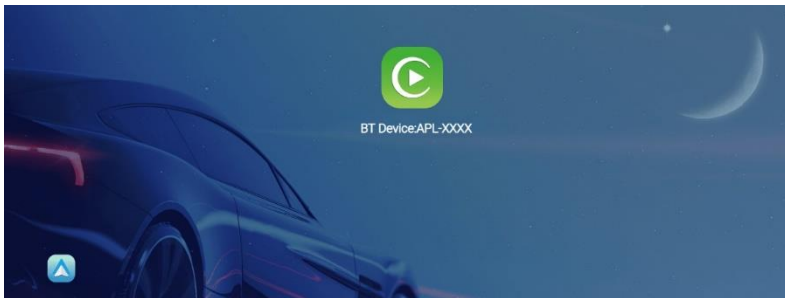


➤ Connection:

1. Connect the ApplePie Lite to car OTG port by USB/Type C cable
2. Search APL-XXXX by Bluetooth of iPhone or Android Phone,It will setup the WiFi between smartphone and ApplePie Lite after pairing the BT .And run CarPlay or Android auto accordingly .
3. ApplePie Lite default Apple CarPlay, Click the Android auto icon on the foot of left It will restart to enter Android auto mode.

➤ Upgrading and uploading working log:

1. If it doesn't works well with your car, Please keep the smartphone and ApplePie lite connection to update online by IP :192.168.1.101 in browser of smartphone

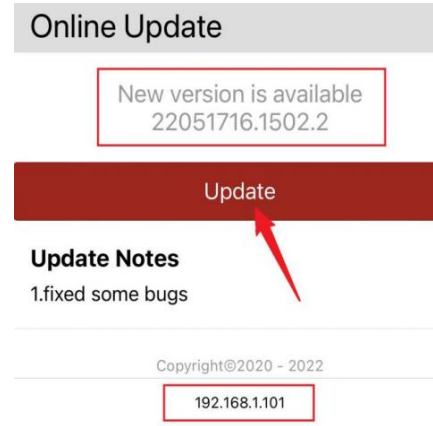

2.Simply submit car brand,model ,year and problems it's facing in the same link and submit the working log to us for fixing it

Model Name E.g. Camry XLE

Year E.g. 2020

Detailed description of the problem:

Please enter text here

AA 192.168.1.101

Problem Description

Car Make E.g. Toyota

Model Name E.g. Camry XLE

Year E.g. 2020

Detailed description of the problem:

Please enter text here

Submit

➤ Please contact our sales if you meet any issue or enquiry