

USER MANUAL



DASHCAM

C326

Thank you for purchasing the SPEDAL C326 2K Dashcam. Please read this user manual carefully and keep it for future reference. If you need any assistance, please contact our support team and send your product model number and order number to us: support@spedaltech.com


CONTENT

SAFETY INSTRUCTIONS	01
Warnings	01
Caution	01
INSTALLATION GUIDE	02
Installation Position	02
TF Card Installation	02
Installation Method	02
PRODUCT INTRODUCTION	03
Package Contents	03
Product Diagram	03
System LED Indicators	03
Control Buttons	03
GENERAL SETTINGS	04
FUNCTION INTRODUCTION	05
Video Recording	05
Emergency Recording	05
Audio Recording	05
Snapshot	06
Viewing Photos and Videos	06
Deleting and Locking / Unlocking Photos and Videos	06
FILE TRANSFER	06
USB File Transfer	06
TF Card File Transfer	06
SPECIFICATIONS	07

SAFETY INSTRUCTIONS

Warnings

- Do not install or operate the dashcam with wet hands.
- Do not install the dashcam in places with high humidity, flammable gases, liquids, and positions blocking the sight of the driver or the safety area.
- Do not expose the dashcam in high temperature inside a sealed compartment for a long time.
- Do not use the dashcam in excess of the rated voltage.
- The cigarette lighter socket of your car continues to supply electricity after the engine is off, please disconnect the dashcam plug from the socket before leaving the car to prevent the automotive battery from depletion or other accidents.
- Keep the dashcam, accessories and package away from children!
- Use only the charging cable provided by the manufacturer. This company assumes no responsibility for any damage caused by the use of non-genuine charging cables.
- Do not disassemble the dashcam or the charging cable.
- Please recycle the battery in accordance with local laws and regulations.
- Please do not attempt to disassemble, modify or heat up the battery.
- Do not replace the battery by yourself. Improper battery replacement may result in explosion!
- Keep the battery away from water (e.g. seawater) and other liquids.
- Prevent short circuit on the battery.
- Keep the battery away from direct sunlight, fire, or an environment with excessive heat to prevent explosion.
- Do not throw the battery in a fire to prevent explosion.

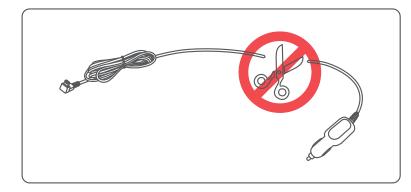

▲ Do not cut the charging cable!

■ Damage caused to the dashcam as a result is not covered by the warranty!


Caution

- Do not forcefully press the lens.
- Do not prick the dashcam or accessories with an awl or sharp object.
- Do not immediately remove the TF card from a shutting down dashcam to prevent the file from damage.
- Please use a Class 10 or above TF card of at least 8GB (maximum 128GB)
- Before using the TF card on the dashcam for the first time, please format the TF card in the dashcam to ensure read / write stability.
- Do not disconnect power during system upgrade! The dashcam may be unable to boot afterwards!
- Contents of this manual are subject to change without prior notice.

INSTALLATION GUIDE

Installation Position

- Do not install the dashcam in a position that will block the view of the driver or in an unsafe area.
- Install the dashcam near the rearview mirror but not in a place that will block the vision of the driver.
- Install the dashcam within the wiper blade area to ensure that the camera lens will capture clear video on a rainy day.

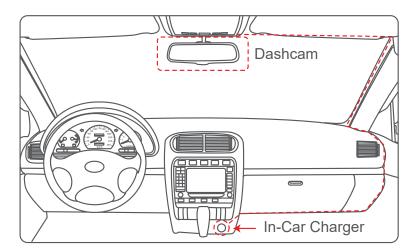

- Do not install the dashcam near the airbag operating range.
- Do not install the dashcam on the windscreen protection film to prevent damage to the protection film.
- Install the dashcam in a position that will not affect any other electronic devices you may have in your vehicle.


⚠ Do not install the dashcam on top of the airbag cover or the airbag operating range. This company assumes no responsibility for injury or death caused by car impact or airbag problems.


TF Card Installation

 Install the TF card in the TF socket with the pins facing downwards.

Installation Method

- Aim the magnetic transfer slide buckle at the mount buckle on the dashcam.
- 2. Hold the dashcam and chuck bracket with your hands, and aim the mount at the chuck bracket on the dashcam.
- Select a proper position (such as the center of the rearview mirror), attach the suction mound to the windshield and rotate the mount clockwise to lock.

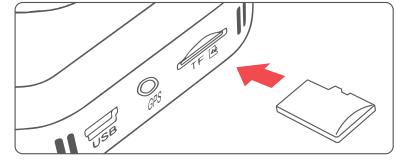

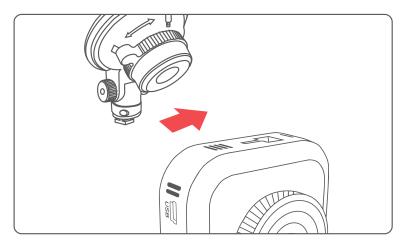

- 4. Adjust the recording angle (it is the best angle that the car front shows in the middle of the display).
- The suction mount can be replaced by sticker mount. Select a proper position, tear the protective paper and paste into the front windshield (do not move within 24 hours)


PRODUCT INTRODUCTION


Package Contents

- 2K Dashcam
- Car Charger
- Sticker Mount
- Suction Mount

- Cable Clips
- Quick Guide

Product Diagram

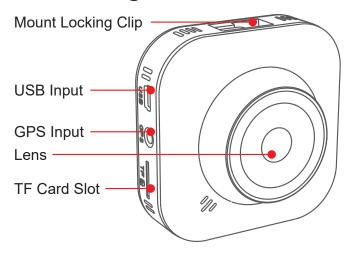

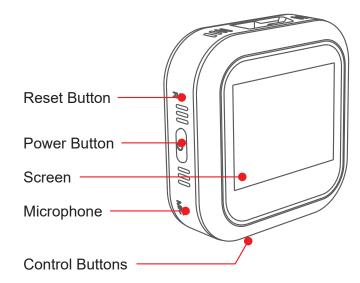

System LED Indicators

• Solid Green: On; not recording

• Flashing Green: On; recording

Control Buttons

Long press to turn off the dashcam when connected to car power.

Long press again to turn it back on.

Press and hold for 7 seconds to restart the dashcam (this will not affect the saved files)

Recording Mode

: Entering emergency recording mode

: View playlist (short press)

Recording (long press)

: Open "Setup" menu (short press)

Take a snapshot (long press)

Turn on / off Audio : Turn on / off the screen OK)

Playlist & Setup Menu

: Return to previous menu

: Move up

: Move down

: Enter / Confirm OK

Playback Mode

: Return to playlist / Stop : Lock & Unlock / Fast-forward

: Delete / Rewind : Play / Pause OK

GENERAL SETTINGS

Resolution	Choose recording resolutions from 1440P30 2560*1440 /
Trootiumon	1296P30 2304*1296 / 1080P60 1920*1080 / 1080P30 1920*1080
	1290F30 2304 12907 1000F00 1920 10007 1000F30 1920 1000
	/ 720P60 1280*720 / 720P30 1280*720.
Video Duration	Choose a time length from 3 / 5 / 10 minutes for each video
	recording.
Date / Time	Change the date and time in system.
Time Zone	Choose Greenwich Mean Time between GMT -12 and GMT +13).
Date Stamp	Turn on / off time display on your videos / photos.
Audio Recording	Trun on / off audio recording when in video recording mode.
Keyboard Clicks	Turn on / off the keyboard click sound.
EV	Choose exposure value from -1.0, -2/3, -1/3, +0.0, +1/3, +2/3,
	+1.0.
Light Source Frequency	Choose light source frequency from 50Hz and 60Hz.
Speed Unit	Choose speed unit display from km/h and mp/h.
Collision Sensitivity	Choose gravity sensor sensitivity from Low / Middle / High / Off.
Language	Choose system language from English, Français, Español,
	Deutsch, Italiano, 日本語, Português, Русский, 简体中文, 繁體中
	文.
Screen Saver	Choose automatic screen off time from 1 minute / 3 minutes / off.
Motion Detection	Turn on / off motion detection.
Time-lapse Recording	Turn on / off time-lapse recording.
Format	Delete all data and restore the device back to factory settings.
Format Warning	Choose format timer from 15 Days / 30 Days / 60 Days / Off.
Restore Factory Settings	Restore all settings without deleting any videos or photos.
Version	View the system version.

FUNCTION INTRODUCTION

Video Recording

Loop Recording

The dashcam will start video recording automatically after powering on. When the TF card storage is full, old footages will be replaced by new ones automatically if the old ones are not locked. You can choose 3 / 5 / 10 Minutes for the video length.

Motion Detection Recording

Turn on "Motion Detection" in "Setup" menu. This function is designed to monitor, when you have parked and left your vehicle but still requires a continuous power supply. It will record video each time motion is detected.

Time-Lapse Recording

Turn on "Time-Lapse Recording" in "Setup" menu. This function will capture ten photos per second to make a video played at a high-quality 10fps frame rate. The videos will be saved in the "Video File" folder.

▲ Time-Lapse Recording is not suitable for monitoring purposes while driving.

Emergency Recording

Manual File Backup

Press (to back up the current file so that it will not be overwritten. An the icon will appear in the top-left of the screen to indicate a protected emergency recording is in progress.

Auto File Backup

Once the G-sensor is activated by a sudden collision, the dashcam will automatically start recording and protect it from being overwritten. You can adjust the G-sensor sensitivity in the "Setup" menu.

You can enter the playlist or "Setup" menu (or disconnect power) to end emergency recording mode.

Audio Recording

Turn on / off audio recording by long-pressing when in video recording mode (or by turning on "Audio Recording" in the "Setup" menu). Details from the recorded sound may provide useful information, such as possible hazards that may develop, especially when off-camera.

Snapshot

- Hold down for 3 seconds to take a snapshot while in recording mode.
- The snapshot files are located in the \SPEDAL\Photo folder on the TF card.
- An icon will be shown after you take a snapshot. This will not interfere with the video recording.

Viewing Photos and Videos

- 1. Press to enter the playlist.
- 2. View photos or videos by choosing either "Photo File" or "Video File".
- 3. Select the file you want to view and press OK .
- 4. For videos, press OK again to begin playback.

Deleting and Locking / Unlocking Photos and Videos

- Press ▲ to delete or ▼ to lock / unlock a photo or video file after selecting it from the playlist.

 If a video is being played, press ⚠ to stop it and then press ▲ to delete or ▼ to lock / unlock.
- Once deleted, photos and videos can not be recovered.
- If you lock a photo or video, it will be protected and will not be overwritten.

FILE TRANSFER

USB File Transfer

- 1. Connect the dashcam (with TF card inserted) to your computer using your own USB mini-B data cable (the included cable is for power supply only). It should be recognized as a removable device.
- 2. Find the video recording files located in the \SPEDAL\Movie folder. Find the snapshots in \SPEDAL\Photo.
- 3. Copy the files to your computer.

TF Card File Transfer

- 1. Shut down the dashcam and eject the TF card.
- 2. Insert the TF card into a computer TF card slot or reader and your computer will automatically detect the TF card.
- 3. Find the video recording files located in the \SPEDAL\Movie folder or \SPEDAL\Photo for snapshots.
- 4. Copy the files to your computer.

SPECIFICATIONS

Display	2.0" LCD
Aperture	F#1.6
Resolution	1440p (30fps), 1296p (30fps), 1080p (30fps), 1080p (60fps),
	720p (60fps), 720p (30fps)
Field Angle	170°
Power Input	DC 5V 1.5A
Video Format	MP4
Photo Format	JPEG
Storage Device	TF card (Max support 128GB)
Operating Temp.	0°C~60°C / 32°F~140°F
Dimensions	63*64*33mm / 2.49"*2.51"*1.32"
Weight	70g

- EN Download manuals of other languages from our homepage.
- DE Laden Sie Handbücher in anderen Sprachen von unserer Homepage herunter.
- FR Téléchargez des manuels dans d'autres langues depuis notre page d'accueil.
- ES Descargue manuales en otros idiomas desde nuestra página de inicio.
- Scarica manuali in altre lingue dalla nostra homepage.
- PL Pobierz instrukcje obsługi w innych językach z naszej strony internetowej.
- SV Ladda ner manualer från andra språk från vår hemsida.

For any questions please contact support@spedaltech.com

Scan the QR Code



www.spedal.cc