



USER INSTRUCTION MANUAL

ATLI Cam App Dashboard Control

Model No. T-100, T-100 Lite

This instruction manual covers the in-app dashboard control for firmware version 4.1.0 or higher.


Please refer to INSTALLATION AND SETUP PROCEDURE for more information on how to install and connect the camera.

Content Index

Dashboard.....	3
Magnifier	4
EV	4
Auto/Manual/Preset.....	5
Preset.....	5
Add Presets.....	6
System Settings	7
WLAN.....	7
Memory Card.....	9
Advanced	10
Remote Support	10
Time Zone	10
Built-in FTP Server	11
FTP Auto Sync	12
About.....	12
Time Lapse Mode	13
Output	13
Orientation.....	14
Power Saving	14
Grid.....	15
Time Stamp.....	15
Schedule	16
Occurrence: Once	16
Occurrence: Daily	17
Occurrence: Weekly	18
Realtime Playback (Live Preview).....	19
Change settings on the fly.....	20
Time Slice.....	21
Photo Mode.....	22
Video Mode	23
Album	24

Dashboard

Once the camera is connected to the app, access the dashboard to manage and operate the camera.

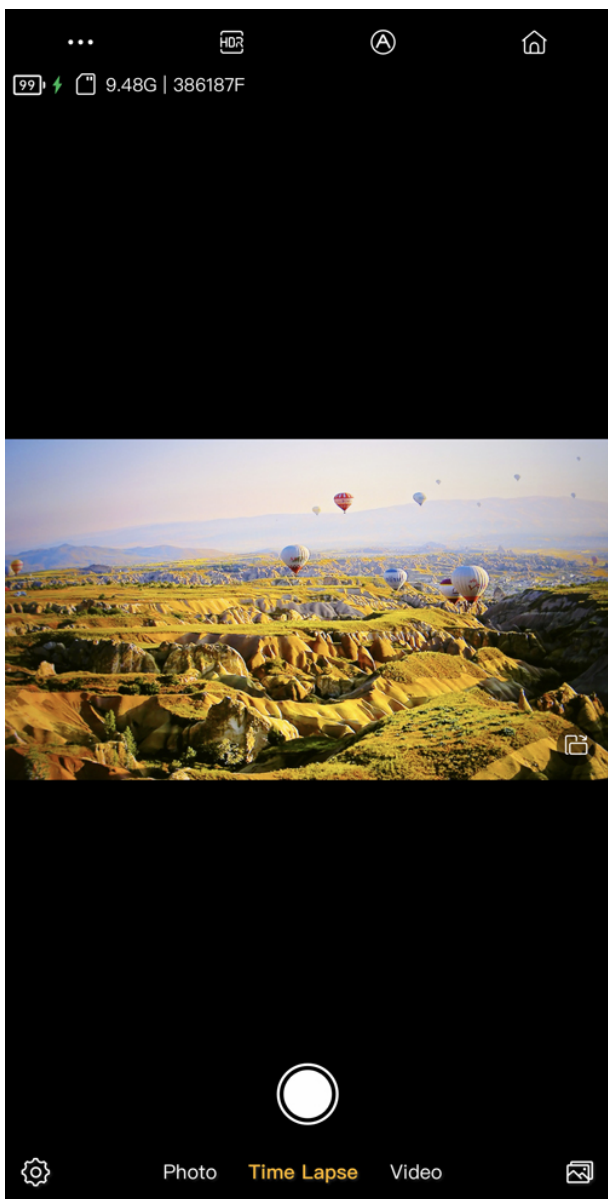

Icon	Description
...	More feature
HDR	HDR
(A)	Auto/Manual/Preset
Home	Home
100%	Battery Status
⚡	Charging
SD Card	Memory Card Status available storage available frame
Rotate	Rotate
Shutter	Record/Take photo
Settings	System Settings
Album	Album

Magnifier



Long-press on the screen to activate magnifier.

Drag the magnifier and move around.

EV




EV is disabled when both ISO and Shutter Speed are set to manual.

Tap on the lock button to lock the focus in place.

EV	-4~ 4
-----------	-------


Auto/Manual/Preset

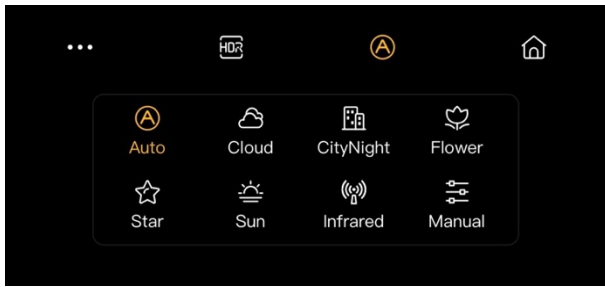

- **Auto [A]**: The camera will choose the optimized settings.
- **Manual [M]**: Customize the following settings.



	Shutter Speed	1/20K,1/10K,1/5K,1/2.5K, 1/1000,1/500,1/250,1/125,1/60, 1/30,1/25,1/15,1/8,1/4,1/2,1,1.4
	ISO	100~ 4000
	White Balance	2500~ 10000

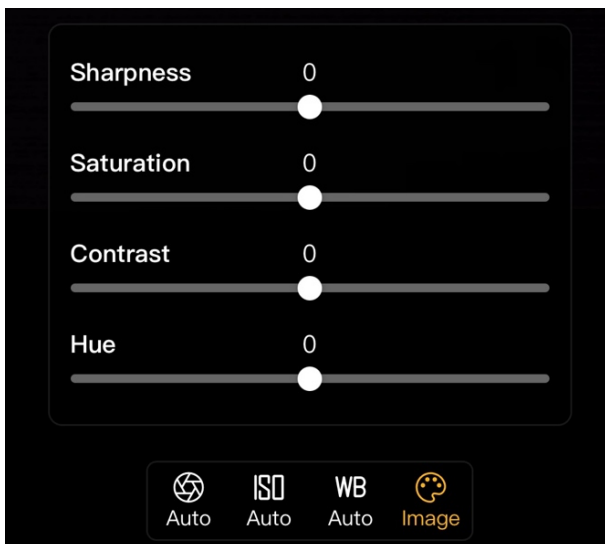

Sharpness	-10~10
Saturation	-30~ 30
Contrast	-5~ 5
Hue	-20~ 20

Preset

The presets come with a default interval that is recommended.

***T-100 Lite does not support Infrared mode.**


Preset	Interval (s)
Cloud	3
City Night	3
Flower	10
Star	10
Sun	2

**Manual settings are unavailable in the preset scenes.*


Preset	Mode
Infrared	Common/Fantasy1/Fantasy2/Fantasy3/Custom

Add Presets


Add custom presets with personalized settings.

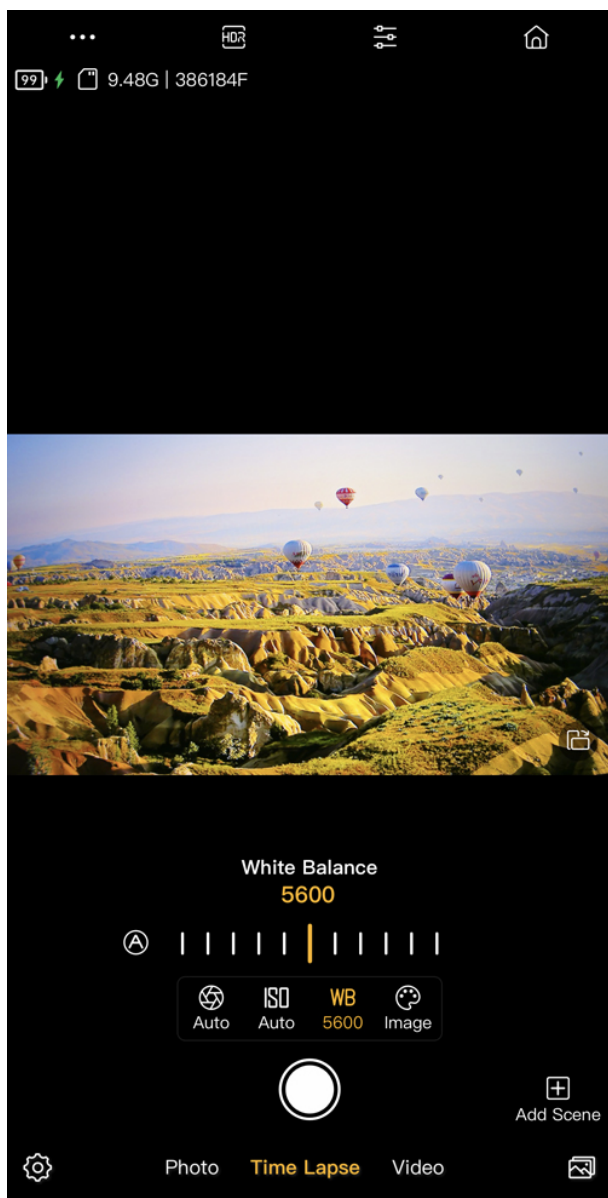

- To create a custom scene with personalized settings, click on Add Scene [⊕] to proceed.
- Enter a name and choose an icon for the new scene.

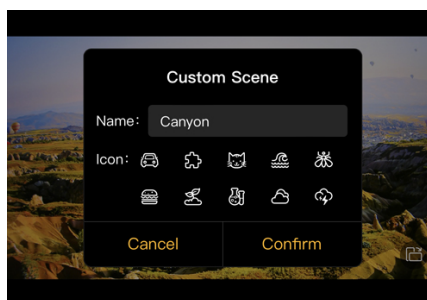


- Custom scene can be located under preset menu.

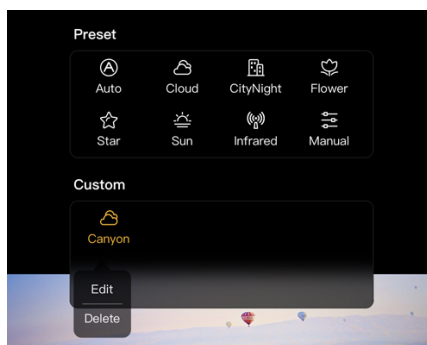

- Tap on the icon to edit or delete the custom scene.

System Settings

Manage the following settings of the camera.

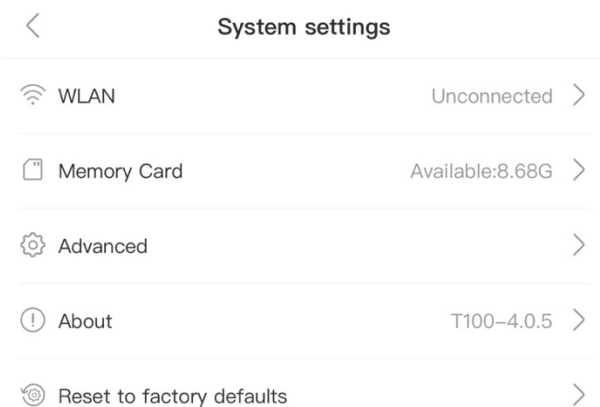



WLAN

To enable internet access for the camera, connect it to a local Wi-Fi network via WLAN.

Setup

System Settings > WLAN > Select a Wi-Fi SSID > Enter Wi-Fi Password > Wi-Fi name turns blue

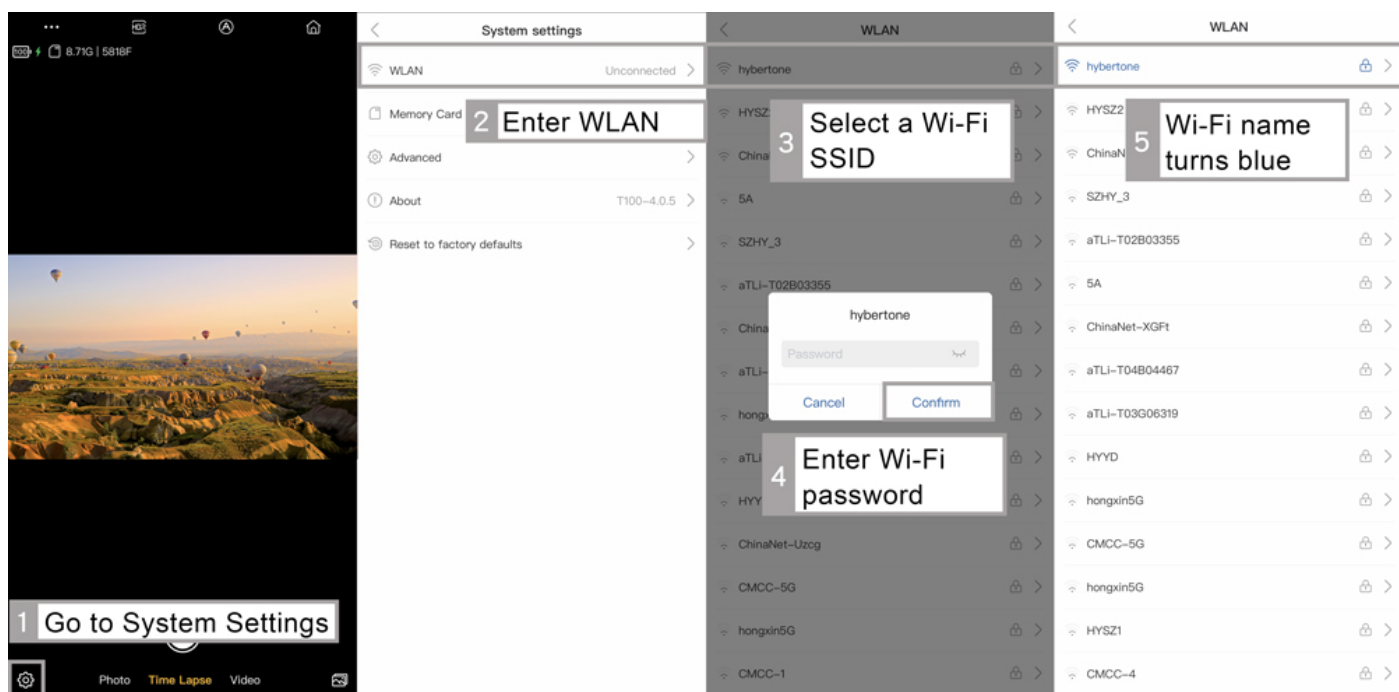


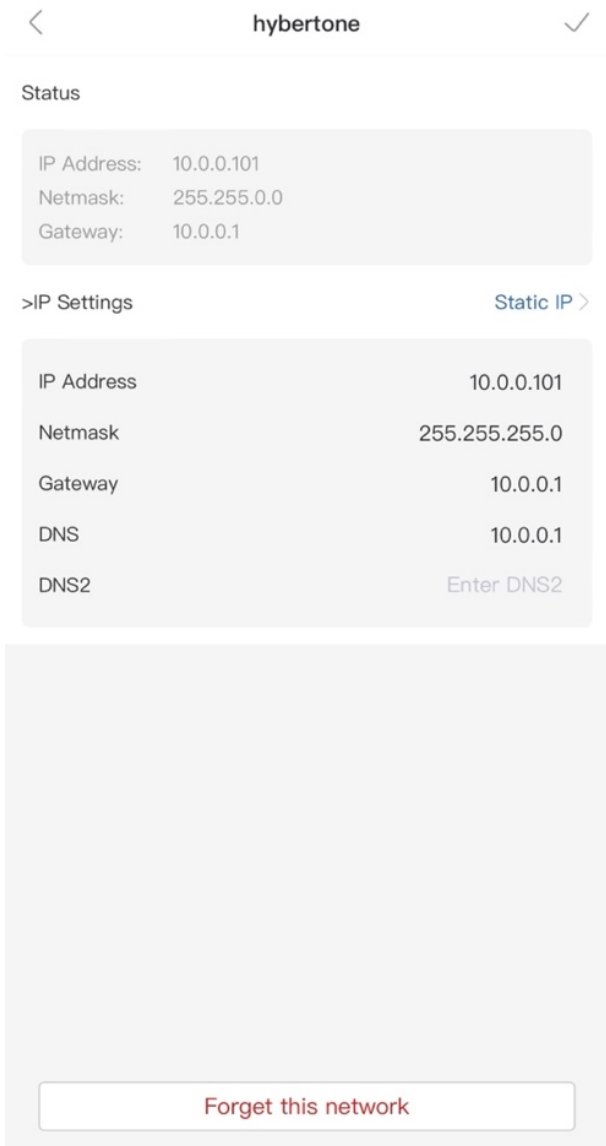

- The default IP Setting mode is DHCP.
- This enables the camera to obtain an IP and the corresponding network settings from the Wi-Fi router.
- However, the camera IP and other network settings can be assigned manually by changing the IP Setting mode to Static as shown in the Wi-Fi configuration.

Memory Card

Memory Card shows the status of the microSD card.

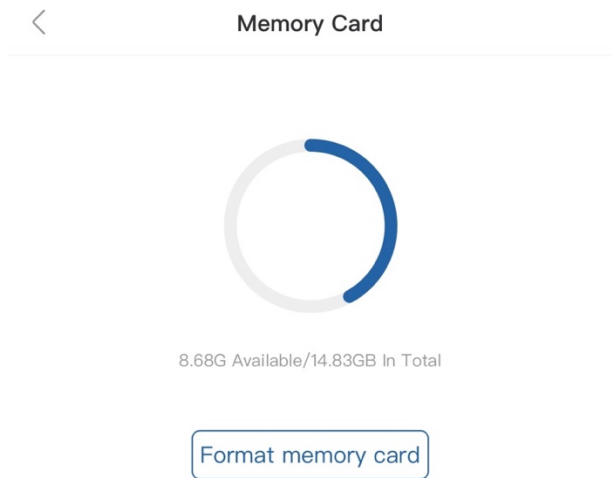

Formatting memory card

Back up all important data before formatting a microSD card.


** Formatting a microSD card can help to solve corrupted files issues, but it cannot fix a damaged SD card.*

If formatting does not resolve the SD card related problems, please retry with another SD card.

Once the memory card reaches its capacity, the camera will stop recording and save the files automatically.


Advanced

The Advanced section provides additional features or supports to the camera.

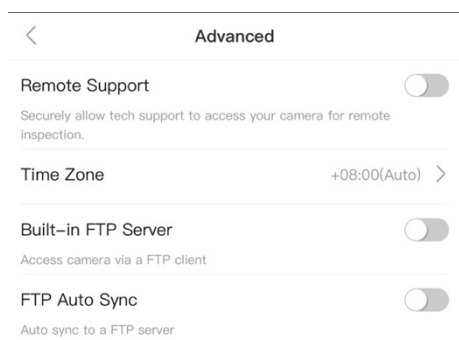

Remote Support

Enabling Remote Support will authorize the ATLI technical team to remotely access the camera and conduct a thorough inspection of the camera status, settings, and operation.

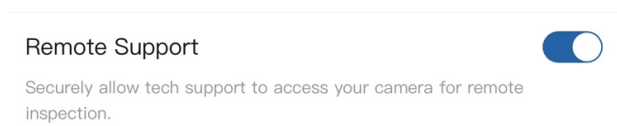

Setup

1. Turn on Remote Support in Advanced.
2. Connect the camera to a local Wi-Fi network which has internet connection.
3. Connect the camera to a power source to make sure the camera stays online.

 
In order to ensure a good connection, the camera should be placed near the Wi-Fi router.

**Remote Support will be disabled automatically by restarting/rebooting the camera.*

Time Zone

The time zone setting sets the camera internal clock to align with your local time zone.

It is important to set this correctly as the camera clock is used for all camera activities that involves time, such as timestamp, schedule, file storage time, etc.




The default Time Zone is set to "Auto" which assigns the time zone automatically based on the current location.

If the Time Zone is not assigned correctly, it can be set manually.

Setup

1. Tap on Time Zone > Auto [↔] to switch to Manual.
2. Select a preferred time zone for the display on the time stamp.

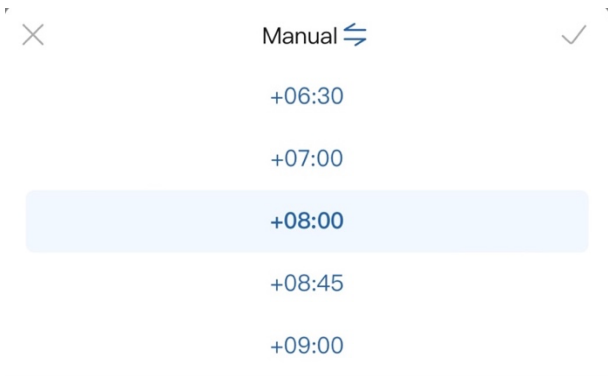

To reset the time zone to the default setting, tap on Manual [↔] to reset.




Built-in FTP Server

****T-100 Lite does not support Built-in FTP Server.***

The camera is equipped with a built-in FTP server for direct access by a FTP client. When this feature is enabled, the FTP login information is displayed.

When accessing via the camera Wi-Fi, enter the FTP server address in a FTP client as the Address via Hotspot.

When accessing via your local Wi-Fi, enter the FTP server address in a FTP client as the Address via WLAN.

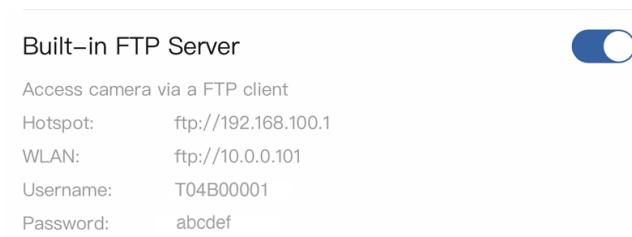

FTP Auto Sync

****T-100 Lite does not support FTP Auto Sync.***

The camera has a built-in FTP client that enables the camera to login your FTP server and the upload the video automatically when a shooting ends.

This function requires you to setup your own FTP server and configure your router for accessing from internet.

**Refer to AN008 for more detailed information.*

About


Find the following information under About.

<	About
Firmware Version	T100-4.0.5
Serial Number	T04B03942
MAC	ac:64:cf:45:3a:df
Up Time	10Day21Hr41Min25Sec
Camera Time	2023-06-13 16:47:34

- **Firmware Version**
Current camera firmware version
- **Serial Number**
Camera serial number
- **MAC**
MAC address
- **Up Time**
Time duration of the camera being used
- **Camera Time**
Time shows on the time stamp

Time Lapse Mode


The following settings apply only to the time lapse mode.

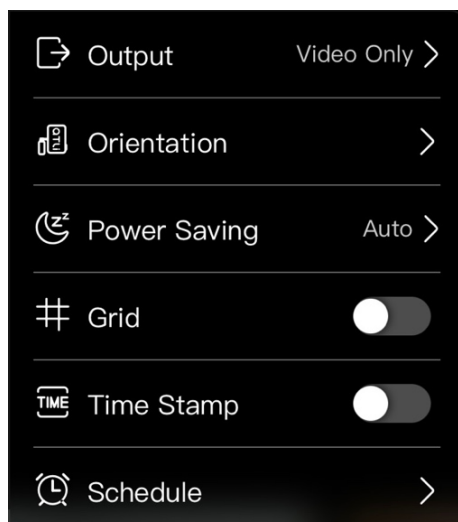

Output


Saving options of the output. Two output options for a time lapse recording are supported: video, or video+photo.

***T-100 Lite does not support Video+Photo output.**

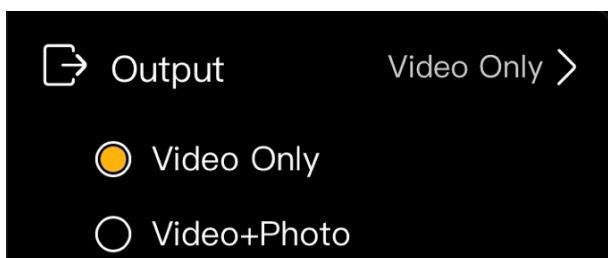


- **Video Only:**

Saving only video to the camera album after a shooting ends.

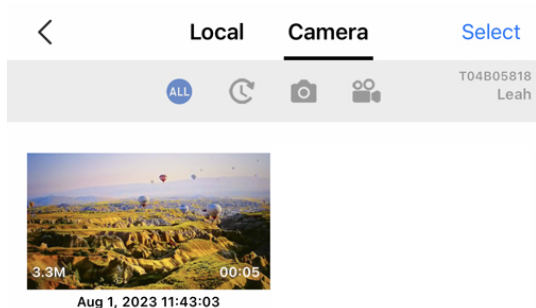

- **Video + Photo:**


Saving both video and photo sequence to the camera album after a shooting ends.

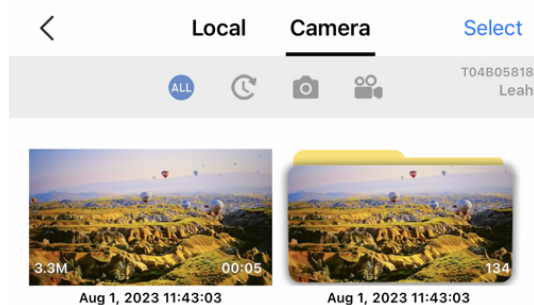

Orientation

The orientation setting automatically adjusts the on-screen image display for viewing and recording.

Select a rotation that matches the orientation of the camera.

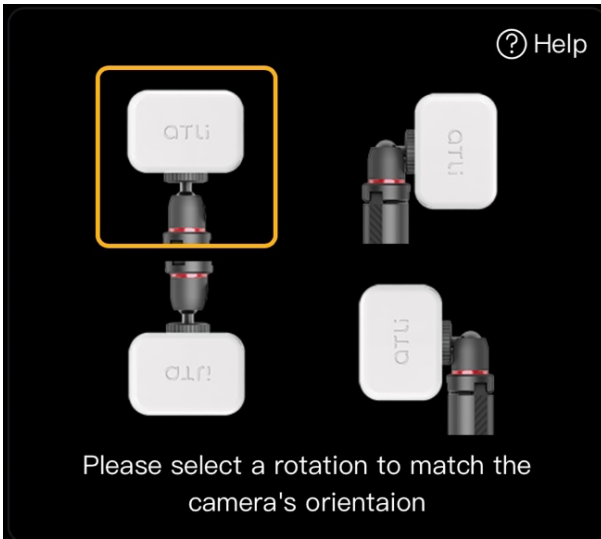


Power Saving

The Power Saving enables the camera to enter sleep mode in order to extend the battery life. This feature only takes effect in an active recording session or an active schedule for recording.

When the camera is in power saving, the camera can be waked up by pressing the power button momentarily 1 second. Users can then access the camera when the status LED turns green.


There are three available options: Auto, On, Off.

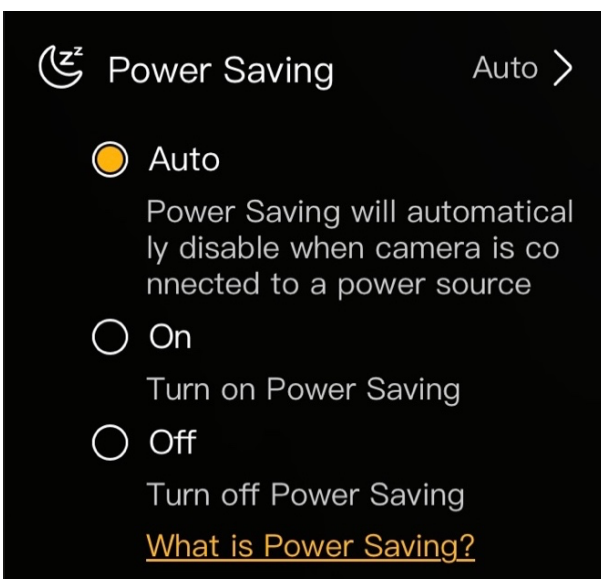

- **Auto (By default):**
Power Saving will be deactivated automatically when the camera is connected to an external power source.
- **On:**
Power Saving will be implemented mandatorily.
The camera will enter sleep mode even when it's connected to an external power source.
- **Off:**
Power Saving off. The camera will not enter sleep mode while it's running.


Grid

Gridlines are displayed on the screen.

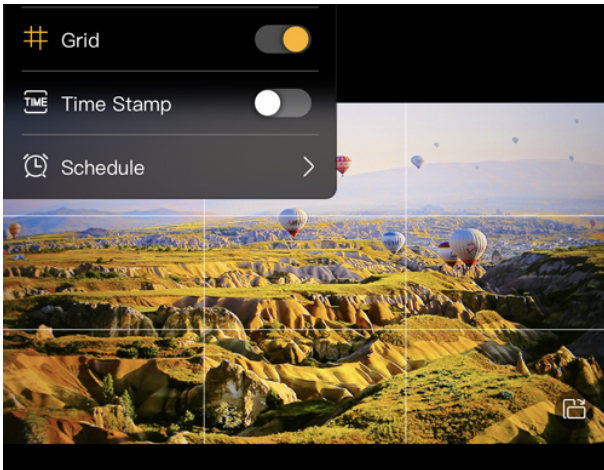

Time Stamp

A time stamp is displayed at the left corner of screen.

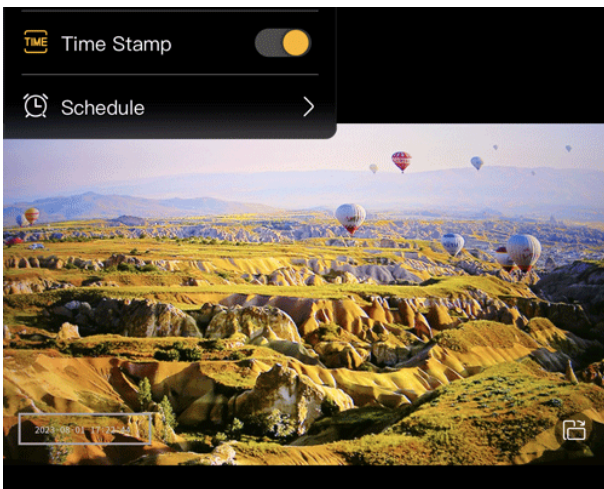

Schedule

Use Schedule for pre-arranged recordings.
The occurrence of the recordings can be set to once, daily, or weekly.

Occurrence: Once

The screenshot shows a mobile application interface for scheduling recordings. At the top, there is a back arrow and the title 'Schedule'. Below this, there are several settings sections: 'Occurrence' set to 'Once', 'Start time' and 'End time' both set to 'Please set', 'Interval' set to '4Sec', and 'Scene' with a right-pointing arrow. At the bottom of the screen, there is a large grey button labeled 'Start'.

Occurrence-Once:

The camera is programmed to record continuously starting from the start time to the end time.

- **Start time:**
Designated start time of the schedule.
- **End time:**
Designated end time of the schedule.
- **Interval:**
Designated time lapse interval.
- **Scene:**
Choose a scene for the schedule.

The screenshot shows a 'Scene' selection dialog box. It has a close button (X) on the top left and a checkmark on the top right. The title is 'Scene'. There are three options listed: 'Do not specify' (highlighted in blue), 'Auto', and 'Cloud'.

**Do not specify (by default): The camera will start recording according to the current settings.*

Note

The schedule will end automatically once it reaches the end time.

Occurrence: Daily

The screenshot shows a 'Schedule' configuration interface. At the top, there is a back arrow and the title 'Schedule'. Below this, there are several settings sections: 'Occurrence' set to 'Daily', 'Saving Options' set to 'Merge', 'Time Range' with two 'Please set' fields, 'Interval' set to '4Sec', and 'Scene'. A blue button labeled 'Add a timeslot' is located at the bottom right of the settings area. At the very bottom of the screen is a large grey button labeled 'Start'.

Occurrence-Daily:

The camera is programmed to record on a daily basis.

Saving Options:

The screenshot shows a 'Saving Options' dialog box with a close button (X) on the left and a checkmark on the right. The title is 'Saving Options'. There are three radio button options: 'Merge' (which is selected and highlighted in blue), 'Every timeslot', and 'Every day'.

- **Merge:**
The recorded video from each time slot will be consolidated into one video clip after the schedule ends.
- **Every timeslot:**
The recorded video will be generated after each time slot ends.
- **Every day:**
The recorded video will be consolidated into one video clip after each day ends.
- **Time Range:**
Start time and end time for each time slot.

Note

To end the schedule, access the camera and terminate the schedule manually.

It is possible to configure up to 6 timeslots.

Occurrence: Weekly

The screenshot shows a mobile application interface for scheduling a weekly occurrence. At the top, there is a back arrow and the title 'Schedule'. Below this, there are two main sections. The first section is titled 'Occurrence' and shows 'Weekly' with a chevron. Below it are seven buttons for the days of the week: Mon, Tue, Wed, Thu, Fri, Sat, and Sun. The second section is titled 'Saving Options' and shows 'Merge' with a chevron. Below these sections is a 'Time Range' field with 'Please set' on either side of a tilde symbol, a close button (X), and an 'Interval' field set to '4Sec' with a chevron. There is also a 'Scene' field with a chevron. At the bottom right of the main content area is a button labeled 'Add a timeslot'. At the very bottom of the screen is a large grey button labeled 'Start'.

Occurrence-Weekly:

The camera is programmed to record on a weekly basis. It is possible to customize the specific days within a week.

This inset screenshot shows the 'Occurrence' section of the interface. It displays 'Weekly' with a chevron and seven day buttons: Mon, Tue, Wed, Thu, Fri, Sat, and Sun. In this view, the buttons for Mon, Tue, Wed, and Thu are highlighted in blue, while the buttons for Fri, Sat, and Sun are grey.


**The days selected are displayed in blue, otherwise they are displayed in grey.*

**All days are pre-selected by default.*


For description of the unmentioned features in this section, please refer to the previous contents (Occurrence-Once & Occurrence-Daily).


Realtime Playback (Live Preview)

Preview and track the progress of the time lapse recording.

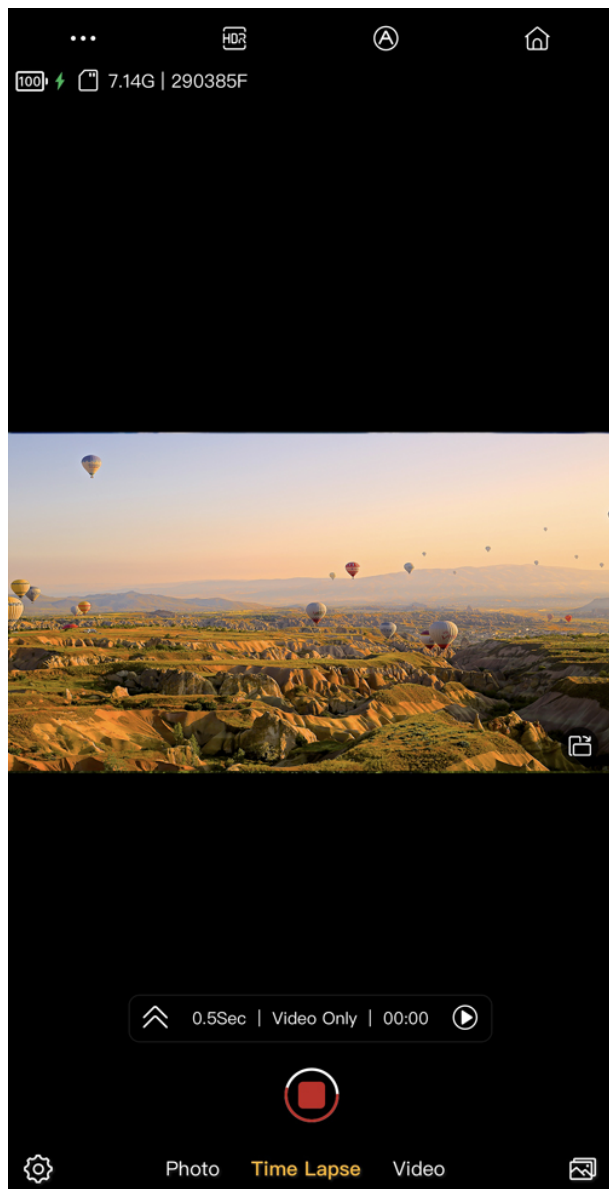

The activation of this feature will occur once a time lapse recording has started.

Tap on  to expand the widget for detailed information.

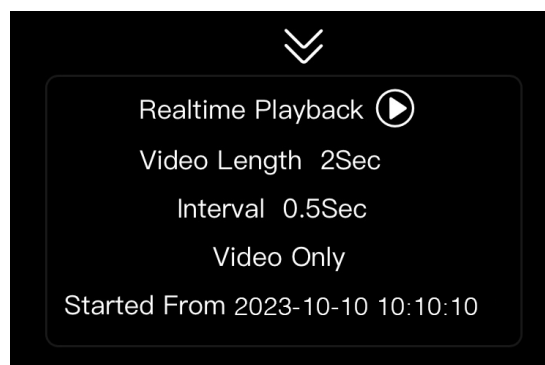

Click on  to preview the recorded video.

View, share, or download the video content in the preview.




Note

****Realtime Playback is only supported in time lapse mode.***

Change settings on the fly

Upon previewing the video, it is possible to pause the video and make necessary changes to the settings without ending the recording.

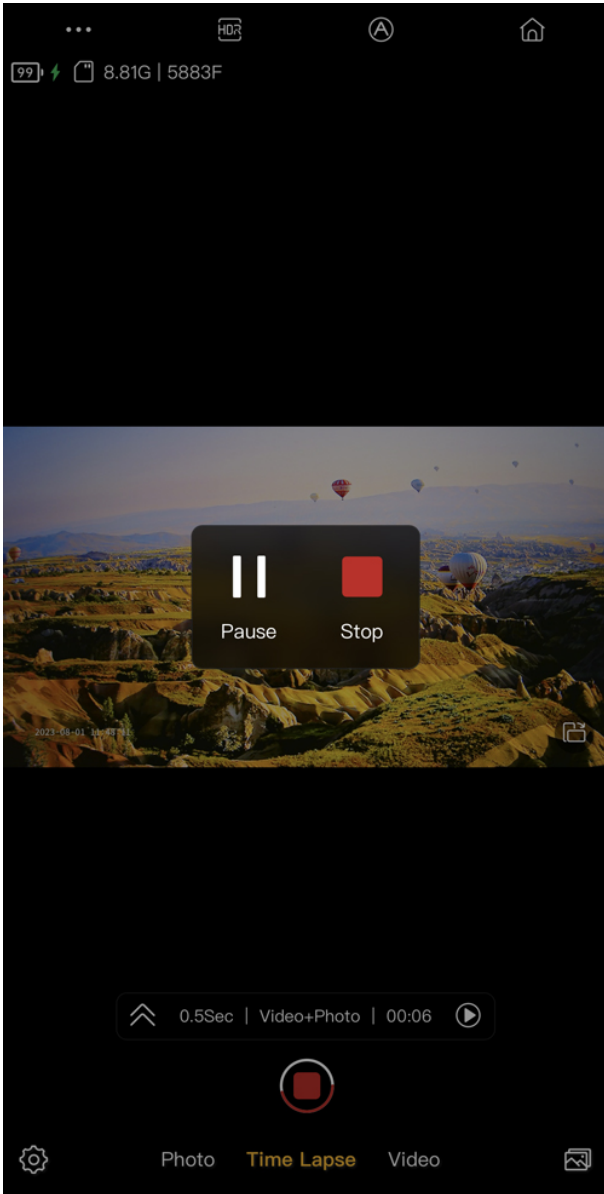

Note


Changes of the following settings are allowed:



- Output
- Power Saving
- Grid
- Time Stamp
- EV, Shutter Speed, ISO, White Balance

Time Slice

Use photo sequences to compose a Time Slice photo.

***T-100 Lite does not support Time Slice.**

Go to the Camera Album > Select a photo sequence folder > Tap on Time Slice at the bottom left > Customize the settings below to your preference in order to select the photos to be used to create a Time Slice photo

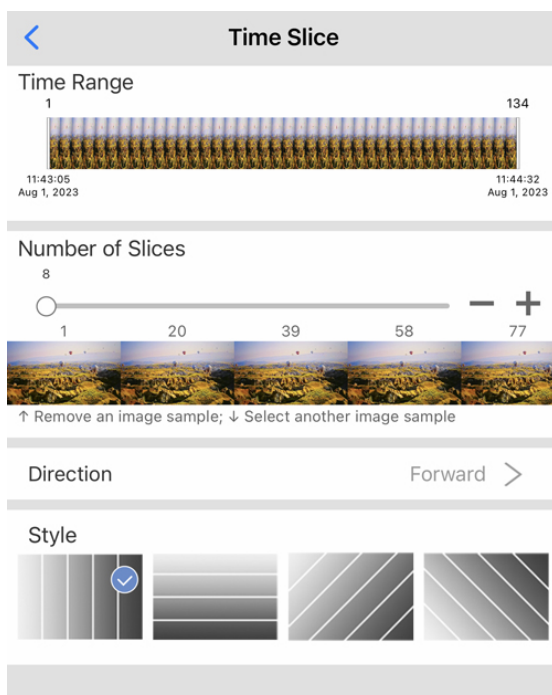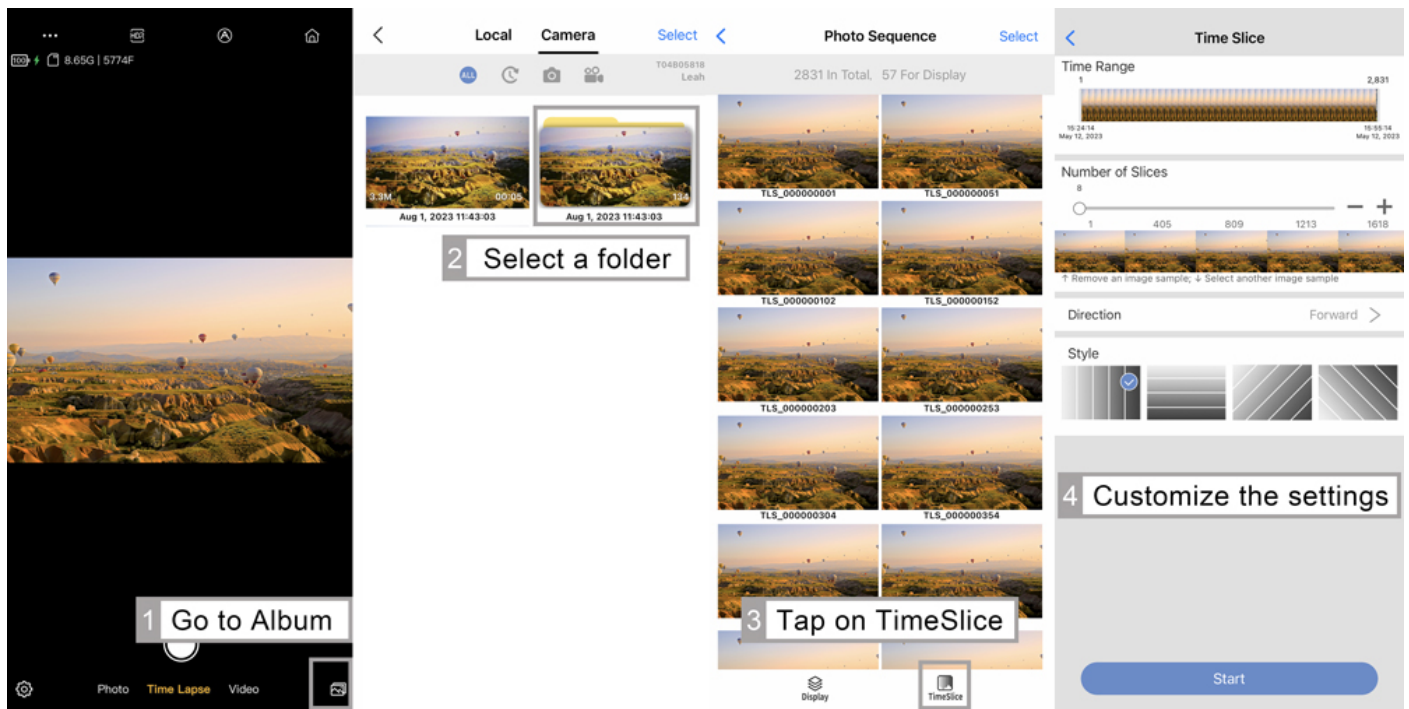

Time Range:

Time range of the photo sequences.

Number of Slices:

The quantity of the slices. * A minimum of 8 slices are required.

- Tap on thumbnail and drag it up to remove the image.
- Tap on thumbnail and drag it down to replace the image.

Direction:


- Forward- Slices display in forward direction.
- Reverse- Slices display in reverse direction.

Style:

Style of time slice.

Photo Mode

The following settings apply to the photo mode.

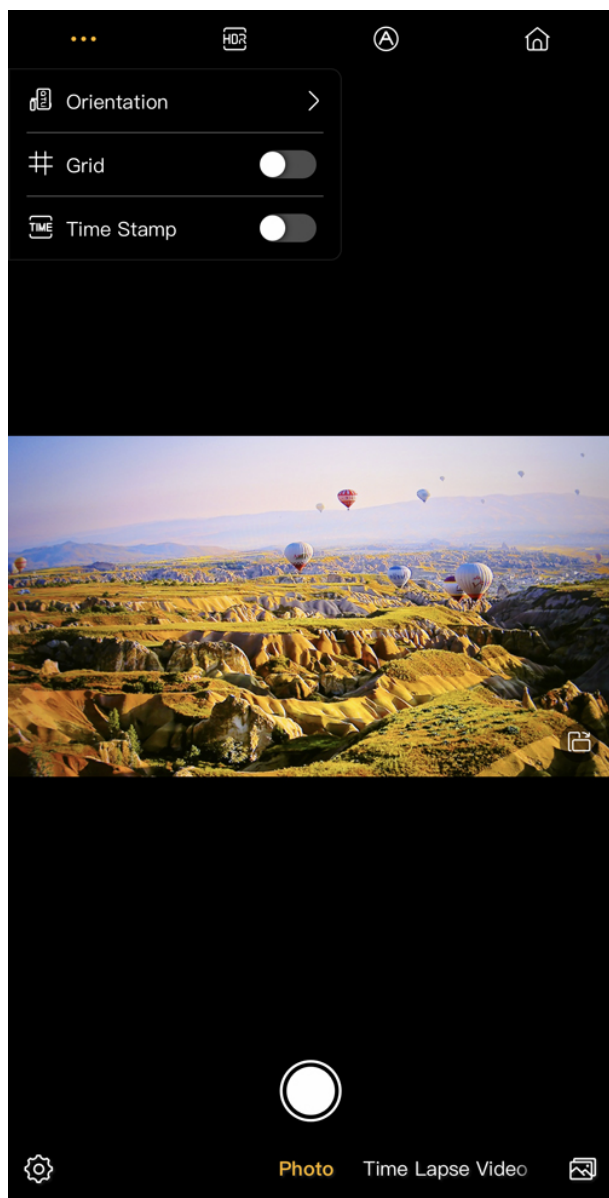

- **Orientation [📷]:**
The orientation setting automatically adjusts the on-screen image display for viewing and recording.

Select a rotation that matches the orientation of the camera.
- **Grid [##]:**
Displaying gridlines on the screen.
- **Time Stamp [TIME]:**
Adding a time stamp at the left corner of the screen.

Video Mode

The following settings apply to the video mode.

***T-100 Lite does not support Video mode.**



- **Orientation** [🔄]:
The orientation setting automatically adjusts the on-screen image display for viewing and recording.


Select a rotation that matches the orientation of the camera.
- **Grid** [📏]:
Displaying gridlines on the screen.
- **Time Stamp** [⌚]:
Adding a time stamp at the left corner of the screen.
- **Split** [↔️]:
Split the recordings by length automatically.

5min: Split the recording and save a video every 5 mins.

10min: Split the recording and save a video every 10 mins.
- **Mic** [🎤]:
Turning the mic on/off.

Album

Use albums to view and organize your videos and photos. There are two different types of albums in the Album: Local and Camera.

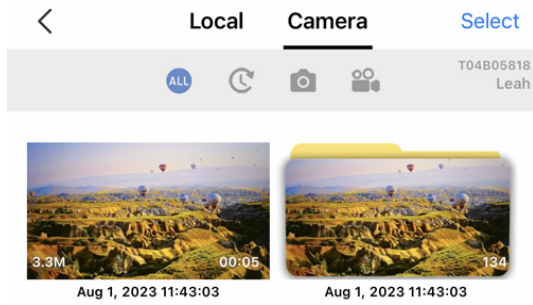

Camera album: This album refers to the storage on microSD card. All videos and photos captured will automatically be saved in the camera album once you're done shooting.

**The camera album is accessible only when the camera is connected to the app.*

Local album: This album refers to the collection of videos and photos downloaded on your mobile device.

**Contents in the local album is accessible on the app at any time without having your camera connected to the app.*



Playing video

Open Camera album > Tap the video you want to display > The video starts playing automatically.

Tap [⏸] at the bottom to pause the video. Tap [▶] at the bottom to play video.

Tap [🔗] at the bottom to share the video. The video will first be downloaded to the phone and then a pop-up screen asking for selecting the sharing method/channel.

Managing Footages

Open Camera album > Tap [Select] at the top right corner to select the footages

Tap [📄] at the bottom to download the footages selected, tap [🗑] at the bottom to delete the footages.

This above method is not recommended to manage footages with a large memory size due to the limited Wi-Fi bandwidth. It is recommended to read the data directly from the microSD card (a SD Card reader required) via a computer.