



WHITE NOISE MACHINE

USER MANUAL

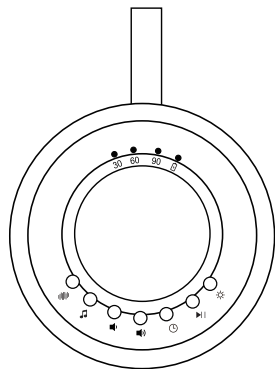

BUTTON INDICATION

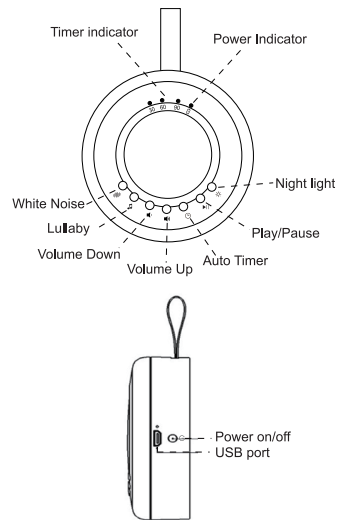

QUICK TIPS

- Connect the power cable to the power port and a USB adapter(not included) ,the power indicator lights up red when charging, and turns green to indicate that product is fully charged.
- Press the power button to turn the unit ON. A green light will illuminate when ON. Press the power button a second time to turn the unit OFF. The green light will be OFF,when the unit is OFF.
- Press to Pause/Play music
- Press to play white noise sounds.
Press repeatedly to cycle through the different sounds.
NOTE: When the sound machine is turned on, it will always default to the last sound used.
- Press to increase or decrease the volume
- Using the Auto-Timer: When you are listening to a sound you may set a timer 30,60,90 minutes as your desire.
So the machine will automatically turn off as the time you set.
Press the timer button once for 30 minutes, a second time for 60 minutes, a third time for 90 minutes and a fourth time to turn the timer OFF. An indicator light will show the timer setting.
If the timer indicator is OFF, the timer is OFF.
The timer can only be set when sound is playing.
- Light button. First press for lighting up, second press making the light brighter, third press turning the light off.

Features:

Night Light
16 sound :4 white noises, 4 fan sounds, 8 natural sounds (ocean, lullaby, running water, bonfire, bird calls, thunderstorm, train, heartbeat)
Timer : 30, 60, 90 minutes
Memory Function

Product Specifications:

Model: GM -02
Speaker :28mm,4Ω3W
Input Power :DC5V=1A
Battery Model/Capacity :103048-1500mAh
Use time :7h-20h
Product size : 3.15X3.15X 1.14inch (LXWXH)

Package Included:

1x White Noise Machine
1x USB cable
1x Instruction
1x Hook

ATTENTION:

Please don't disassemble or repair the product by yourself to avoid damaging the product;
Keep it away from the water source to avoid product damage caused by the influent;
Keep it away from the high temperature and fire source
Don't use corrosive washing aid for cleaning;
Please use a soft wet cloth towel to wipe the surface
Unplug the power adapter from the outlet when the unit is unused for long periods