 


easy@Home®

2-in-1 Baby Nail Trimmer

Model No.: ENT019

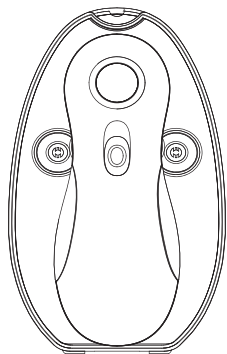

• WARNING:

CHOKING HAZARD - Small parts. Not for children under 3 years.

CAUTION - ELECTRICALLY OPERATED PRODUCT: Not recommended for children under 3 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

CONTENTS

Overview	01
What's in the box	02
Product description	02
Using on baby's nails	03
Using on adult's nails	04
Polishing nail surface (for adults only)	05
Using the night light	05
Replacing the trimming disc	06
Charging the battery	06
Daily maintenance and storage	07
Warning	07
Specification parameters	08
Warranty	08
FCC information	09
Explanation of symbols	09

 
OVERVIEW

Easy@Home Electric Nail Trimmer is a 2-in-1 baby nail clipper with night light mode. This product is used to smooth out the sharp nail edges of the baby after being clipped by the nail clipper. The electronic nail trimmer comes with four different trimming disc attachments. These trimming disc attachments come with different levels of abrasion to make sure baby's nail are trimmed smooth without hurting him or her. 360° all-round exquisite polishing and steady speed makes toenails and fingernails softer and smoother (only for adult).

WHAT'S IN THE BOX

- 2 in 1 Baby Nail Trimmer x 1
- Storage case x 1
- Trimming disc attachments x 4
- Polishing disc attachment x 1
- Shaving disc attachment x1
- User manual x 1
- Type-C USB Cable x 1 (adaptor not included)
- Nail clipper x 1

PRODUCT DESCRIPTION

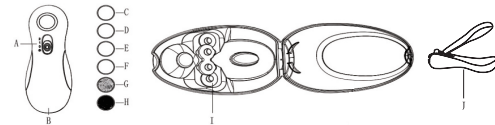

- A: Power button/Speed switch: 0-Off; 1-Low speed; 2-High speed;
 ✨ -Night light;
 B: Nail trimmer handheld body
 C: Pink: Soft attachment (trimming disc)
 D: Green: Medium attachment (trimming disc)
 E: Blue: Medium attachment (trimming disc)
 F: Purple: Hard attachment (trimming disc)
 G: Silvery: Shaving disc attachment
 H: White: Polishing disc attachment
 I: Storage case
 J: Nail Clipper

Note: C, D, E, and F are classified by the strength of grinding for each disc.

About the trimming disc attachments

- The product can be used to shape baby and children's nails.
- Please be sure to carefully choose the trimming discs based on the child's age, nail condition and thickness.
- It can also be used for adults.

<For kids>



C: Trimming disc (pink)
0-3 months



D&E: Trimming disc (green & blue)
4-11 months



F: Trimming disc (purple)
12 months and older

<For Adults only>



G: Shaving disc
For shaping and shortening nails



H: Polishing disc
For removing dirt and making nail surface smooth

USING ON BABY'S NAILS

1. Use the nail clipper to shorten baby's nail before using electric nail trimmer.
2. Choose a trimming disc that best suits your child's age.
3. Hold your child comfortably and securely. And hold their finger to preventing from wriggling.
4. Hold the trimmer away from your baby and



turn on the power switch.

5. Starting at the slowest speed, place the rotating trimmer pad on the end of your baby's nail and begin filing.
6. When trimming the edges, keep a 50 to 60 degree angle of inclination between the nail and the trimmer to avoid damaging the skin.
7. After trimming your child's nails, remove all nail dust from the trimmer pad and wash your child's hands.
8. Remove the trimmer attachment and store all parts in the storage container.

Note:

- Please use it carefully, and do not trim the nails too short to avoid hurting the baby's fingers or skin.
- Keep 50 to 60 degree angle tilt between nail when trimming edge to avoid hurting baby's nail bed.
- Gently place the cushioned filing pad to the tip of baby's nail. Make sure to always file a small section of the nail to avoid overheating due to friction.

USING ON ADULT'S NAILS

- Choose a trimming disc (designated for adult) based on your purpose.
- Insert the trimming disc pole into the slot, found on the top of the nail trimmer.
- Slide the switch button to setting 1 or 2 based on your personal needs.
- Apply the disc gently to where you would like to shape. Place the disc at a 50 to 60 degree angle.
- After shaping nails, turn the power off and clean the dust around the nail trimmer.
- Remove the trimming disc from the machine, and place it into the storage case.

Note:

- Pressing the nail trimming disc onto the nail too hard may cause injury or undesired shaping.
- The product cannot be used to remove gel nails.

POLISHING NAIL SURFACE (For Adults only)


- Choose the medium trimming disc attachment (green) to remove the bumps from your nails.
- Use the soft type trimming disc attachment (pink) to smooth out the edge of your nails.
- Apply the whole surface of the polishing disc (white) to your nail to remove any dirt and smooth out the surface. Move slowly as you polish. Avoid pressing too hard while moving it around.

Note: Adjust the order of using trimming disc attachments based on the condition of your nails or your needs.

USING THE NIGHT LIGHT

There is an added night light feature for children's room or other dark environments. The soft light helps babies sleep at ease, and while still being able to trim their tiny nails. It is also a great assistance when breastfeeding at night or when changing baby's diapers.

- Slide the switch button to choose the setting of night light.
- Place the electric nail trimmer into the storage case.
- Keep the whole storage unit on the table vertically (refer to picture below)

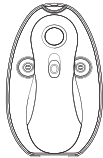

REPLACING THE TRIMMING DISC


All the trimming disc attachments are wearing parts. The surface will eventually wear off and lose its function. Please be sure to get a replacement when the surface is wear off.

CHARGING THE BATTERY

The battery case is on the back of the nail trimmer.

- Open the battery cover of the device. (refer to pic 1)
- Plug in the Type-C USB Cable and connect it with a power adapter (not included in the package) or other power source that can deliver DC 5V-1.0A power. The red light is on indicates charging. (refer to pic 2)
- Green light on indicates fully charged. Unplug the charging cable and put the battery cover back. (refer to pic 3)

Note: Do not use the device while it is on charging.

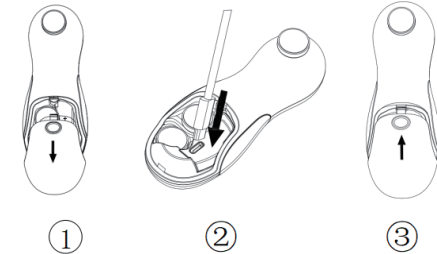

DAILY MAINTENANCE AND STORAGE

- After using the device for long time, be sure to turn the power off and let it cool down before cleaning it.
- When cleaning the product, wipe it with a dry clean cloth. Do not wash it with water, detergent, alcohol or any other liquid. This will cause damage.
- If the attachment slot has dust inside, it will affect the speed of the spin. Please clean or wipe that slot with a dry cloth or cotton swabs.
- Once the cleaning is done, be sure to put the trimmer back inside the storage case. Keep it in a cool dry area and avoid dust, humidity and fire.
- Keep out from reach of children.

WARNING

- Please be sure to keep the product, storage box and the accessories in a safe place where children will have no access. Children mishandling the product or accidentally swallowing the parts could lead to a serious accident.
- Children should not use this device without adult supervision.
- Please read the instruction manual before using the product.
- Select the appropriate spinning speed of the trimming disc for use, for young children please select the low speed.
- Do not use the device while it is charging.
- Keep the product away from fire.
- Always be sure to turn the power off after every use.
- Do not charge for a long time. Unplug immediately when the device is fully charged.
- Do not step on the device and do not slam strongly on the device.
- Dispose of the built-in lithium battery of the device responsibly following the local law and regulations.
- Keep the product away from water. It is not waterproof.

- When the mainframe is dirty, it must not be dismantled or rinsed with water. Please use a dry towel to clean if needed.
- Do not wipe the product with alcohol, acetone, petrol or any other corrosive material.
- This product is for nail care and night light use only. Please be sure not to use it for any other purpose.
- Do not use the nail trimmer near broken skin.
- Do not use this product for anything other than its intended use.
- Do not hold the rotating attachment to any part of the body for extended periods of time as this may cause friction burns.
- Do not place directly onto the skin.
- We do not recommend using this product on nails that are weak, damaged, diseased or brittle.
- Meets CPSC safety requirements

SPECIFICATION PARAMETERS

- Rated input :5V 1.0A max (USB powered)
- Product size:120 mm x 45 mm x 44 mm
- Single device weight: 75g
- Working temperature: 32~104°F (0~40°C)
- Storage temperature: -4~131°F (-20~55°C)
- Li-ion battery capacity: 180mAh
- The service life of the device is 300 times use.

WARRANTY

This product is warranted by the dealer for one year from the date of retail purchase. It does not cover damages or wear resulting from an accident, misuse or abuse, commercial use, or an unauthorized adjustment or repair of the product.

FCC INFORMATION

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- The limits for a Class B digital device are designed to provide reasonable protection against harmful interference in residential settings. This product generates, uses and can radiate radio frequency energy, and, if not operated in accordance with the instructions, may cause harmful interference to radio communications. The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

EXPLANATION OF SYMBOLS

	Recyclable		Manufacturing date		Temperature limit of -4~131°F(-20~55°C)
	Refer to instruction manual		Batch code		Keep dry

Healthcare-Manager.com

Questions or Comments?
Please call toll-free:
1-855-822-6999 M-F 9 a.m.-5 p.m. CST
E-mail: service@healthcare-manager.com
Easy Healthcare Corporation
360 Shore Dr. Burr Ridge, IL US 60527
Made in China