



Brick Amour Car Coin Bank



USER INSTRUCTION Function Instruction

1. Language

This product is available in Chinese and English.

2. When the door is closed:

(1) The cash truck can play music. Press button * to switch.

Mode 1: Playing kids songs, each number represent one song, press the number keys to switch songs.

Mode 2: Pure music, each number represent one song, press the number keys to switch songs.

Mode 3: No special function, enter password to open the cash truck.

(2) Press button # for 2 seconds to turn on the lights on front of the truck head. Press another 2 seconds to turn off the light.

3. When the door is open:

(1) Switch English / Chinese. Inside the truck, on top floor, there is a red switch to change language between English & Chinese.

(2) Press button * to change password and press button # to confirm.

Note, when the battery runs out, the cash truck will be reset to default setting and initial password 0000.

Operation Guide

1. Initial password is 0000. After initial password is entered, fingerprint confirmation is required to open the door. Sound guide to enter fingerprint will play and light will flash as well for 10 seconds.

2. Insert the note money into the note money entrance. The cash truck will take in the money automatically and play sound effect and lights will flash.

3. When the wrong password is entered, the cash truck will play notification and ask to enter the right password. When the wrong password is entered 3 times, the cash truck will play alarm for 5 seconds and stop.

4. How to assemble the building blocks

Special Notification

1. Don't clean the cash truck with chemical cleanser
2. Do not put the cash truck in damp area or expose under the sunlight. DO NOT drop the cash truck violently.
3. Don't mix the new and used batteries together.
4. Take the battery out if the cash truck is not be used for a long time in case of leakage of
5. There are important information and instructions on the packaging, please read and keep it carefully.