



12v24v36v48 DC motor controller speed Multifunctional programmable motor governor LCD display

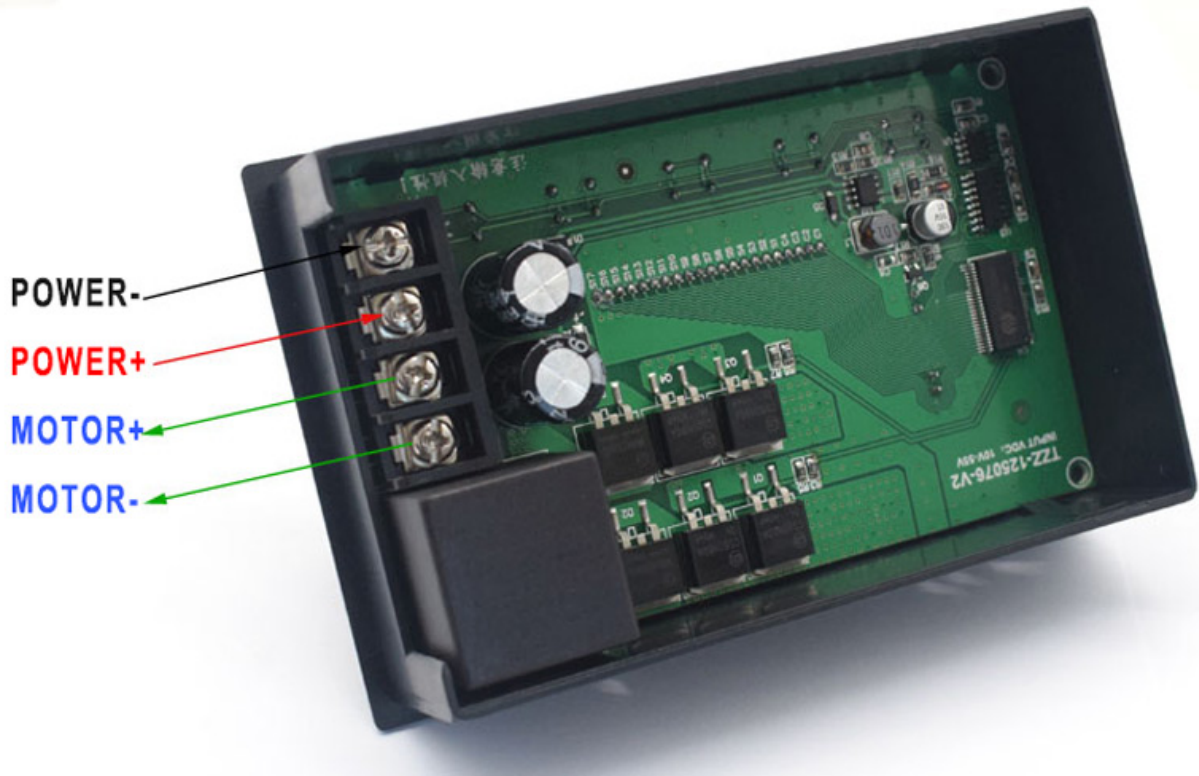

Product Parameters

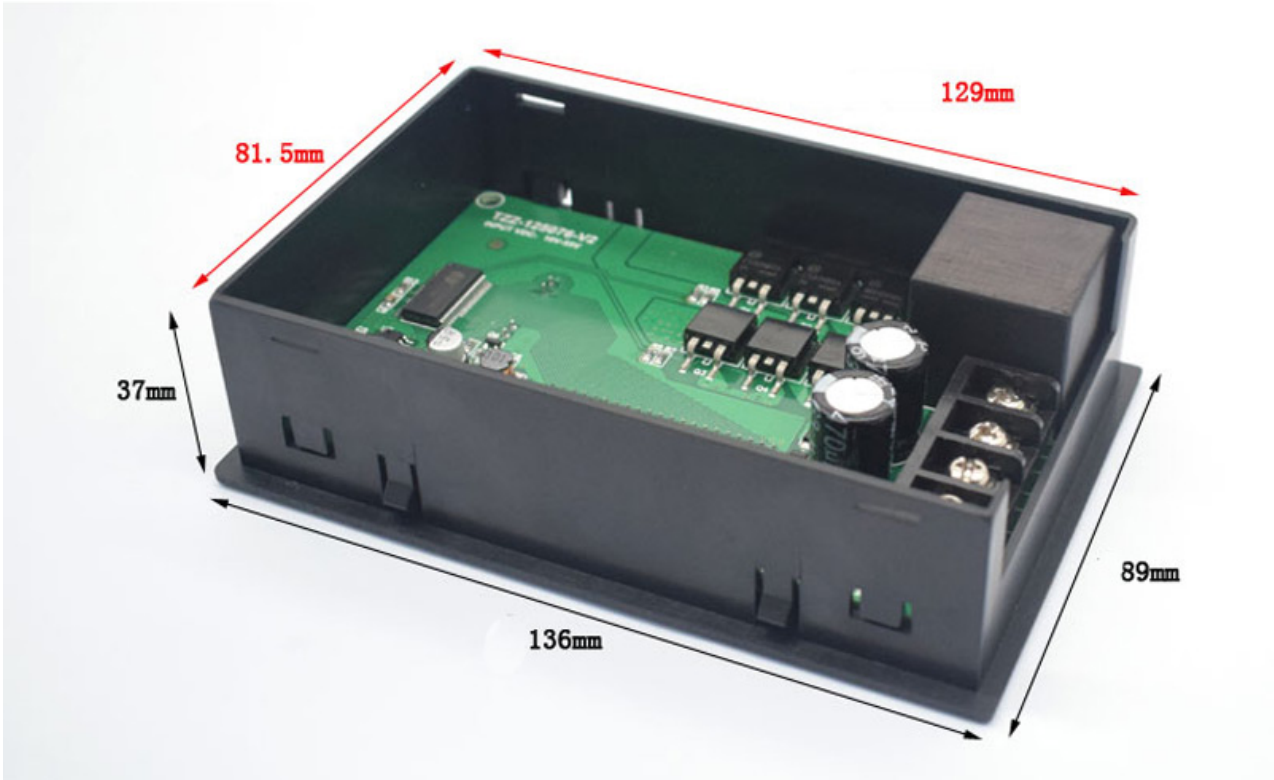

Product Details

1. Manual / Automatic Mode Selection

Press MENU key 1 times enter the function 0 setting interface.
press Δ and ∇ keys to set. 1 is Manual mode, 2 is Automatic mode
Press RUN/STOP save and exit.



1. Slow Start Time Setting

Press MENU key 2 times enter the function 1 setting interface.
press Δ and ∇ keys to set the time.
Press RUN/STOP save and exit.



3. Slow stop time setting

Press MENU key 3 times enter the function 2 setting interface.
press Δ and ∇ keys to set the time.
Press RUN/STOP save and exit.



4. Lower Speed Limit Setting

Press MENU key 4 times enter the function 3 setting interface.
press Δ and ∇ keys to setting.
Press RUN/STOP save and exit.



5.Upper Speed Limit Setting

Press MENU key 5 times enter the function 4 setting interface.
press Δ and ∇ keys to setting.
Press RUN/STOP save and exit.



6.Acceleration/Deceleration Value Setting

Press MENU key 6 times enter the function 5 setting interface.
press Δ and ∇ keys to setting.
Press RUN/STOP save and exit.



7.Total Running Time Setting

Press MENU key 7 times enter the function 6 setting interface.
The default time is 99 hours 59 minutes 59 seconds.
Press FWD/REV key to switch Hou/minute/second.
Press Δ and ∇ keys adjust the Hou/minute/second.
Press RUN/STOP save and exit.



8.Forward Running Time Setting In Automatic Mode

Press MENU key 8 times enter the function 7 setting interface.
The default time is 0 hours 0 minutes 10 seconds.
Press FWD/REV key to switch Hou/minute/second.
Press Δ and ∇ keys adjust the Hou/minute/second.
Press RUN/STOP save and exit.



9. Stop Running Time Setting in Automatic Mode

Press MENU key 9 times enter the function 8 setting interface.

The default time is 0 hours 0 minutes 0 seconds.

Press FWD/REV key to switch Hou/minute/second.

Press Δ and ∇ keys adjust the Hou/minute/second.

Press RUN/STOP save and exit.



10. Reverse Time Setting in Automatic Mode

Press MENU key 10 times enter the function 9 setting interface.

The default time is 0 hours 0 minutes 10 seconds.

Press FWD/REV key to switch Hou/minute/second.

Press Δ and ∇ keys adjust the Hou/minute/second.

Press RUN/STOP save and exit.

