

Fluke T6-1000 PRO Clamp Ammeters 1000V AC/DC Non-Contact Voltage Clamp Meter Continuous Current Electrical Tester True RMS



Fluke T6-1000 PRO Electrical Tester

Voltage and current on one screen :

The T6-1000 PRO Electrical Tester measures voltage up to 1000 V ac and current up to 200 A ac, all through the open fork and without test lead contact to live voltage. Connect the black lead to ground with the included heavy-duty alligator clip, slide the wire into the open fork and see both voltage and current at the same time. On wires up to AWG 4/0 (120 mm²), carrying as much as 200 A and 1000 V ac. Even with gloves on. It will change how you do your job.

Able to reliably measure voltage and current at the same time

Using FieldSense technology to achieve safer and more efficient fault diagnosis, engineers can measure voltage and current at the same time without the need for test leads

T6-1000 PRO

- Safer: No test leads or bare wires are required, and AC voltages up to 1000 V can be measured through the jaws
- Faster: no need to open the panel or remove the wiring nut, which can effectively speed up the fault diagnosis
- More efficient: Measure and display voltage and current at the same time. T6-1000 pro can also measure up to 100.0 k Ω resistance
- Omnipotent: The T6 tester has a very wide jaw and can measure 4/0 cables with currents up to 200 A





Fluke T6-1000 Pro NCV Clamp meter

Adopts with fieldsense technology, this ncv clamp meter is professional in measuring voltage and current



Precision



Durable



Safety



Easy to use

Other capabilities :

- ⊗ 1 to 1000 V ac or dc
- ⊗ 0.1 to 200 A ac
- ⊗ Resistance 1 Ω to 100 k Ω
- ⊗ Frequency measurement 45 Hz to 66 Hz through open fork
- ⊗ Works with most wire up to AWG 4/0 (17.8 mm/0.7" jaw opening)
- ⊗ HOLD button temporarily freezes the screen for easy viewing
- ⊗ Easy to read display with backlight
- ⊗ Accepts optional Fluke TPAK Magnetic Meter Hanger for convenient operation

FLUKE T6-1000 PRO

Features	Need test leads	Range	Resolution	Precision
FieldSense AC voltage	Black wire	1000V	1V	$\pm (3\%+3)$ 45 Hz - 66 Hz
AC Current	NO	200A	0.1A	$\pm (3\%+3)$ 45 Hz - 66 Hz
FieldSense frequency	NO	45Hz-66Hz	1Hz	$\pm (1\%+2)$
AC voltage	YES	1000V	1V	$\pm (1.5\%+2)$ 45 Hz - 66 Hz
DC voltage	YES	1000V	1V	$\pm (1\%+2)$
Resistance	YES	2000 Ω	1 Ω	$\pm (1\%+2)$
	YES	20K Ω	0.01K Ω	$\pm (1\%+2)$
	YES	100K Ω	0.1K Ω	$\pm (1\%+2)$

General technical indicators

Size	61.1*259.3*43.8mm
Weight	0.35KG
Jaw opening	17.8mm
Temperature	Working: -10~50°C (13~122° F) Storage: -30~60°C (-22~140° F)
Altitude	Working: 2,000 m (6,562 feet) Storage: 10,000 m (32,808 feet)
Safety	IEC/EN 61010-1、 IEC/EN 61010-2-033
Battery	Two AA alkaline batteries





Display voltage and current on the same screen

T6-1000 PRO Electrical Tester

With Fieldsense Technology

- Simultaneous display of voltage and current-when troubleshooting motors, pumps or other equipment,View voltage and current measurements at the same time to save time
- Visual Continuity™-For continuity check, the screen will also be activated when the buzzer sounds Turns green automatically.
- FieldSense™ technology can measure AC voltage, current and frequency without touching live objects
- The HOLD button freezes the screen reading for easy viewing
- With backlight, easy to read
- Optional Fluke TPAK magnetic instrument hook for easy operation







Package Includes:

What's in the box:

- Fluke t6-1000 pro Clamp Meter
- Detachable 4 mm probe cap comes with test leads
- Black AC285 SureGrip™ Alligator Clip
- H-T6 carry case
- User documentation



FLUKE

Go to www.fluke.com/products to download or order manuals and software.

Register your product at www.fluke.com/register

网址: <https://www.fluke.com.cn/支持/用户手册> 或 访问名称二维码 (通过微信等APP) ; 输入产品型号 (例如: 15B+, T6, ...) 或电子邮件索取: china-support@fluke.com

产品注册: <http://fluke.fluke.com/registration>

No internet access? Give us a call. 不方便访问互联网? 直接打电话!

USA, 800 1-800-451-7887 Canada, 888 1-833-451-7887 24 hr toll free	China, 800 400-818-8888 +86 400 818 8888 +86 21 5292 9999	Japan, 800 0120-33-2323 Singapore, 8000 +65 6753 3333 Malaysia, 800000000 +60 3 2093 8888
--	--	--

FLUKE

T6-600/T6-1000/
T6-1000 PRO
Electrical Tester
with TrueSense Technology

Safety Information

Read this Safety Information before you use the Product. Fully read all instructions.

Use the Product and use only as specified, or the safety information supplied by the Product can be compromised.

Use the Product around explosive gas, vapor, or fire, or wet environments.

Use with local and national safety codes, use your protective equipment (safety glasses, gloves, protection, and flame-resistant clothing) to protect yourself and others from injury when hazardous conditions are present.

Use the Product before you use the Product. Look for the safety information. Carefully read all the instructions of the Product.

Do not touch the battery cover at the time of use. Do not touch the battery cover at the time of use. Do not touch the battery cover at the time of use. Do not touch the battery cover at the time of use.

© 2017 Fluke Corporation. All rights reserved. Fluke and TrueSense are trademarks of Fluke Corporation. Fluke Corporation is a registered trademark of Fluke Corporation. Fluke Corporation is a registered trademark of Fluke Corporation. Fluke Corporation is a registered trademark of Fluke Corporation.

QR

FLUKE

T6-1000 PRO
Electrical Tester
with TrueSense Technology

安全警告

在操作前，请务必仔细阅读并理解本产品的安全警告。请务必遵守所有安全警告。请务必遵守所有安全警告。请务必遵守所有安全警告。

12.8 mm (0.51)

© 2017 Fluke Corporation. All rights reserved. Fluke and TrueSense are trademarks of Fluke Corporation. Fluke Corporation is a registered trademark of Fluke Corporation. Fluke Corporation is a registered trademark of Fluke Corporation.