

SUPRENT
Haircare, We Care


This manual tries to keep the accuracy and rigor of the information, please in kind prevail if there is any error on images or texts, welcome to point it out for improving.

In addition: If the technical of the beard trimmer has improved, it will be edited in new specification without notice. The appearance and color of the beard trimmer take the material objects.



Brand Owner: Shenzhen Eukey E-Business Co., Ltd
Email: support@suprent.com

SUPRENT
Haircare, We Care

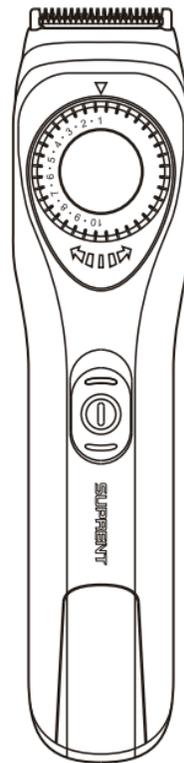

BT355B | SUPRENT Bread Trimmer

CONTENTS

Safety Instructions	1
Part Identification	4
Charging	5
Using	6
Care and Cleaning	8
Disposal	9
Guarantee	10
Technic Parameter	11
Warranty Certificate	12

SAFETY INSTRUCTIONS

Before using the appliance for the first time, you must read and understand the user manual completely. Consider the user manual as part of the product and store it in a safe and accessible place. Include this user manual if passing the appliance on to a third party. In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

Danger

1. Keep power adapter away from water.
2. Do not operate the appliance with a broken cord, plug or charger, or if the appliance malfunctions, or is dropped or damaged in anyway.

Warning

- To reduce the risk of burns, fire, electric shock or injury to persons:
1. The appliance should never be left unattended when plugged into a power outlet, except when charging the shaver.
 2. The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.

SAFETY INSTRUCTIONS

3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
4. Children should be supervised to ensure that they do not play with the appliance.
5. Use this appliance only for its intended use as described in this manual. The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.
6. Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of this appliance is damaged it must be replaced. It cannot be repaired.
7. Do not use this appliance with a damaged or broken tracks or cutters, as injury may occur.


SAFETY INSTRUCTIONS

8. Do not immerse the unit or let it come into contact with water or any other liquids.
9. Switch off the appliance and unplug from outlet when not in use, before putting on and also before cleaning the appliance.
10. Do not plug or unplug the shaver with wet hands.

Caution

1. Use, charge and store the appliance at a temperature between 5°C and 35°C.
2. Never insert any object into any opening.
3. Do not use outdoors or in damp areas.
4. Only for household use.
5. Never use your appliance without paying attention! Always unplug this appliance from the electricity outlet immediately after use.

PART IDENTIFICATION

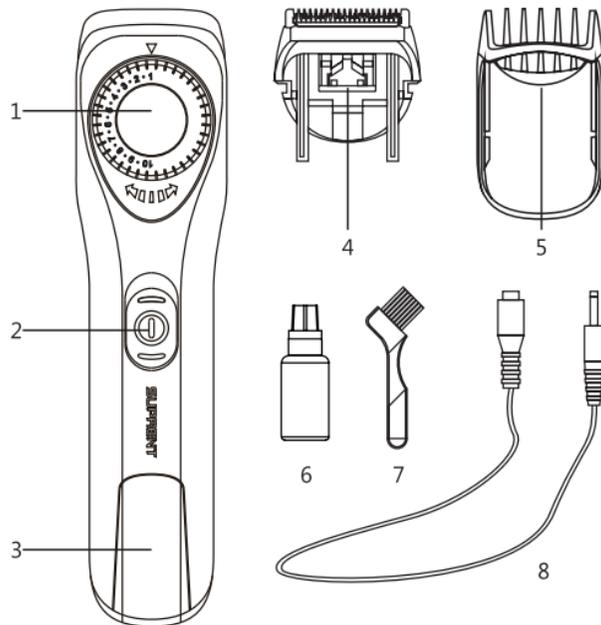

1. Adjusting ring
2. Switch
3. Indicator lamp
4. Blade

5. Guide comb
6. Oil
7. Little clean brush
8. USB cable

CHARGING

Note

1. Before using as the first time, please charge 1.5 hours fully.
2. Charge the appliance fully before you use it for the first time or after a long period of disuse. It takes approximately 1.5 hours to fully charge the appliance. When it is fully charged, the appliance has a cordless operating time of up to 90 minutes.
3. When you have charged the appliance for the first time, we advise you to use it until the battery is completely empty. Continue to use the appliance until the motor almost stops running during a session. Then recharge the battery. Follow this procedure at least twice a year.

Charging

1. Make sure the appliance is switched off.
2. Insert the USB cable plug into the appliance.
3. Put the adapter in the wall socket. (The charging light on the adapter shows red continuously to indicate that the appliance is charging. For the full charge, the PCB display show green.)

Caution

1. Make sure the trimmer and your hands are dry when charging it.
2. Always charge it in a cool, dry place.

USING

This trimmer body is not waterproof, please don't use it in bathroom or any wet area.

How to use


1. Put the small end of the USB cable connected with the jack of the battery pack which lies at the bottom of the machine, then put the other end of USB cable connected with the power (5V/1A). When charging, the indicator light shows red, the full charging time is 1.5 hours, when fully charged it can work more than 90 minutes.
2. Push the switch button to ON, then it can be used, push to OFF to turn off the device.

How to use the comb attachment

Please make sure the device is turned off before you use the comb attachment when switch on the comb will self-lock.


1. In the condition of shutdown, adjust the adjusting ring to the number 10, take off the comb as figure 1.
2. In the condition of shutdown, adjust the adjusting ring to the number 10, install the comb as figure 2.

USING

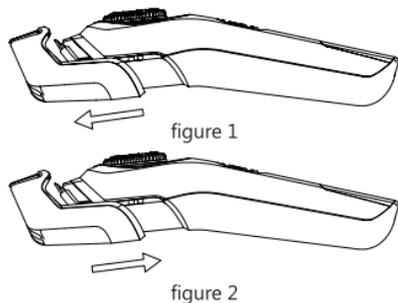


How to use adjusting ring

1. In the condition of shutdown, adjust the adjusting ring to adjust the cutting length with comb from 1mm to 10mm;
2. Don't adjust the adjusting ring when working.

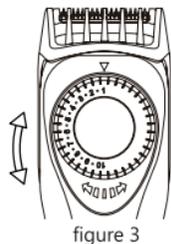


CARE AND CLEANING

1. Unload the blade : In the condition of shutdown, and without comb, push the blade as the figure 4.;

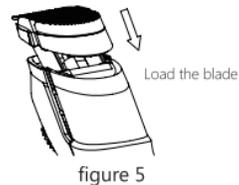

2. Load the blade: In the condition of shutdown, and without comb, push the blade as the figure 5;
3. Using the little brush, clean the blade in order to remove hair which may be caught between the blades, Lubricate the space between the fixed blade and moving blade with 2 or 3 drops of oil after every few uses (as the figure 6.).

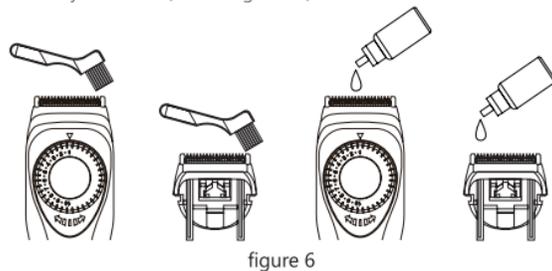

DISPOSAL

Environment

1. Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.
2. The built-in rechargeable battery contains substances that may pollute the environment. Always remove the battery before you discard and hand in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries.

Removing the rechargeable battery

Only remove the rechargeable battery if it is completely empty.

1. Disconnect the appliance from the mains and let the appliance run until the motor stops.
2. Insert a screwdriver in the hair chamber to separate the housing part.
3. Cut the wires close to the battery with a pair of household scissors.
4. Remove the rechargeable battery.

Do not connect the appliance to the mains again after you have opened it.

GUARANTEE

1. This product is guaranteed against defects in material and workmanship for a period of one year from the date of original purchase or receipt as a gift.
2. The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.
3. This guarantee does not include blades, cables, shaver heads, foils and cutters etc. which are consumable parts.
4. If you need service or information or if you have a problem, please visit the SUPRENT website at www.suprent.com or contact the SUPRENT Consumer Support, Email: support@suprent.com. We are willing to help you.

Note

The following situations will not be free maintenance:

1. No warranty card.
2. Fail to explain the reason of breakdown.

GUARANTEE

3. The following circumstance are not covered by the warranty:

Damage caused by improper use, maintenance and repair.

Damage caused by non-appointed maintenance department.

Damage caused by self-assembly and disassembly.

Damage caused by force majeure.

If you are not satisfied with the quality of service, you can complain directly to our customer service center.

TECHNIC PARAMETER

Motor's voltage	DC 3.6V
Charging time	1.5 hours
Working time	≥ 90 minutes
Rating watt	2 W

Warranty Certificate

Product Name	Bread Trimmer
Product Number	BT355B
Date of Purchase	
Buy Store	
Dealer Stamp	
Customer Name	
Customer Phone	
Customer Address	
Zip Code	

Maintenance Records

Maintenance Date	Fault Conditions	Service Location	Maintenance Results