

SUPRENT
Haircare, We Care

This user manual tries to ensure the accuracy of the information, please kindly point it out for our improvement in the future, if there is any errors on the images or the texts. We'd be very appreciated for your support and effort.

In addition: If the technique of the trimmer has been improved, it will be upgraded and updated in the new version as well as the specification without announcement.



Brand Owner: Shenzhen Eukey E-Business Co., Ltd

Email: support@suprent.com

SUPRENT
Haircare, We Care



HC415SA | SUPRENT Hair Clipper

CONTENTS

 
Parts Name	1
Safety Instructions	3
Steps for Hair Cutting	5
Disposal	10
Warranty Certificate	11

PARTS NAME



Blade Alignment

Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory. Blades must be realigned if they have been removed for cleaning or replacement. To realign the blades, simply match the upper and bottom blades teeth up, point for point. (End of top blade teeth should be approximately 1.2mm back from the bottom blade. Compare your clipper blades with the sketch.)




PARTS NAME

Oil

To maintain your clipper in peak condition, the blades should be oiled every few haircuts.

Do not use hair oil, grease, oil mixed with kerosene or any solvent. As the solvent will evaporate and leave the thick oil which may slow down the motion of the blades.

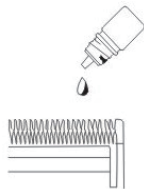


Blade Adjustable Knob

The knob is conveniently located near your thumb (if you're right-handed) so it can easily be adjusted while the clipper is in your hand. The Knob adds versatility to the clipper by allowing a gradual change to the closeness of a cut without an attachment comb.

When the Lever is in the uppermost position, the Blades will give the closest cut leaving the hair very short. Pushing the Lever gradually downward increases the cutting length

- There're 3 settings of the length: 0.9/1.2/1.5mm The Lever will also extend the use of the blades since a different cutting edge is used in each setting.
- In addition, if extremely heavy hair cutting has jammed the blades, it will help to remove hair that has become wedged between the two blades without removing the blades.
- While the clipper is running, move the knob from "close cut" to "long cut" a couple of times. Doing this each time after use will help to keep the blades clear of cut hair.

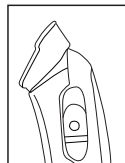

SAFETY INSTRUCTIONS

Cleaning

Never clean the appliance under running water! Use the included brush to remove hair. Wipe the enclosure with a dry, soft cloth. Do not use abrasive cleaning agents.

Important Safeguards

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

To reduce the risk of death or injury by electric shock:

- Unplug this appliance before cleaning.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not use while bathing or in a shower.
- Do not place in, or drop into, water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.

To reduce the risk of burn, electrocution, fire or injury to persons:

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- This appliance should never be left unattended when plugged in.

SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Keep the cord away from heated surfaces.
- Do not pull, twist, or wrap line cord around appliance.
- Never drop or insert any object into any opening on this appliance.
- Before use, making certain blades are aligned properly.
- Do not place appliance on any surface while it is operating.
- Do not use this appliance with a damaged or broken comb nor with teeth missing from the blades as injury may occur.
- Do not use with wet hands.

STEPS FOR HAIR CUTTING

Before The Hair Cut

1. Inspect the clipper, making sure that it is free of oil between the cutting blade teeth and turn the unit on to distribute the oil and to make sure it is running smoothly. Wipe off any excess oil. This should be done after each use. While using the unit, untwist the cord from time to time to avoid tangling.
2. Seat the person so their head is approximately at your eye level. This allows ease of visibility while cutting and a relaxed control of the unit.
3. Before cutting always first comb the hair so it is tangle free and as it is naturally worn.

Reminders

- Cut the hair in a relaxed and slow manner. Use short strokes only to work gradually over the entire head.
- Always take off a little hair at a time; you can always trim off additional hair later.
- As you work, comb the hair frequently back into the style to which you are cutting.
- When cutting with this Clipper it is better to leave the hair dry, not wet. With the hair dry, it is much easier to control the amount of hair being cut. 4. Place a towel around the neck and shoulders of the person having the haircut.

STEPS FOR HAIR CUTTING

Begining The Hair Cut

Cutting hair requires practice so It is always better to leave the hair longer for the first few haircuts until you become used to the length to which each comb attachment cuts the hair.

Attachment Comb (see main diagram)

- Attachment Comb #1 leaves 3mm (1/8 inch) hair length.
- Attachment Comb #2 leaves 6mm (1/4 inch) hair length.
- Attachment Comb #3 leaves 9mm (3/8 inch) hair length.
- Attachment Comb #4 leaves 12mm (1/2 inch) hair length.

Each comb attachment is marked accordingly on its outside middle surface.

- To attach a comb, hold it with its teeth upward and slide it onto and along the clipper blade until the front of the comb firmly seats against the clipper blade.
- To remove the comb, simply pull the comb upward and away from the clipper blade.
- For even cutting, allow the comb attachment/cutter through quickly. Also remember to comb the hair frequently to remove trimmed hair and to check for uneven strands.

STEPS FOR HAIR CUTTING

Step 1-Nape of The Neck

1. Attach comb attachment 3mm or 6mm.
2. Hold the clipper cutting edge pointed up and begin the haircut, starting at the centre of the head at the base of the neck (see diagram 1).
3. Hold the clipper comfortably in your hand and hold lightly against the head with the comb teeth pointing upward. Gradually and slowly lift the clipper working upwards and outwards, through the hair, trimming just a little at a time.
4. As you cut, gradually lift the clipper head towards you. Continue to cut the back area from the bottom of the neck upwards to the top of the ears.

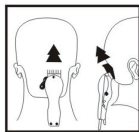


diagram 1

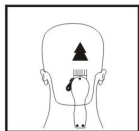


diagram 2

Step 2-Back of The Head

- Change to the next longest comb attachment 9mm or 12mm and cut the back of the head (see diagram 2)

Step 3-Side of The Head

- Change to one of the shorter combs 3mm or 6mm, trim sideburns, i.e. the hair directly in front of the ears. Change to one of the longer combs, 9mm or 12mm, and continue to cut to the top of the head (see diagram 3).



diagram 3

STEPS FOR HAIR CUTTING

Step 4-Top of The Head

- Using the comb attachment 9mm or 12mm, cut top of head from back to front against the direction in which the hair normally grows (see diagram 4). In some cases, this may require the reverse, or cutting from front to back.
- Comb attachments 3mm or 6mm are used to achieve a close crew cut or short cut.
- For longer hair on top, use the comb provided and lift hair on the top of the head. Cut over the comb, with the hair lifted or hold the hair between the fingers to lift it and cut it to desired length (see diagrams 5 and 6). Always work from the back of the head. Hair can be cut shorter gradually by reducing the space between the comb/fingers, and the head. Comb out trimmed hair and check for uneven strands.



diagram 4



diagram 5



diagram 6

Step 5-The Finishing Touch

- Finally, use the Taper Lever without an attachment comb for close trimming around the base of the neck, the sides of the neck and the ears.
- To produce a clean straight line at the sideburns, reverse the Clipper by turning the reverse side uppermost (see diagram 7).
- Press the Clipper at right angles to the head, tips of the blades lightly touching the skin and work downwards. This way will obtain, as a clean cut as would be given by a razor.



diagram 7

STEPS FOR HAIR CUTTING

Short Tapered Styles'Flat Tops'And Short Cuts

- Starting with the longest attachment comb (12mm), cut from the back of the neck to the crown. Hold the attachment comb flat against the head and slowly move the clipper through the hair, as shown (see diagram 8).
- Use the same procedure from the lower side to the upper side of the head, as illustrated. Cut the hair against the direction in which it grows from the front to the crown and then level the cut with the sides.
- To give a 'flat top' look, the hair on top of the head must be cut over the top of a flat comb instead of using the attachment comb.
- Use closer cutting attachment combs to taper the hair down to the neckline as desired. Comb hair and check for uneven areas and outlining sideboards and neckline as described previously.



diagram 6

DISPOSAL

1. This marking indicates that this product should not be disposed of with other household wastes throughout the EU.
2. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.
3. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased.
4. They can take this product for environmentally safe recycling.

Warranty Certificate

Product Name	Hair Clipper
Product Model	HC415SA
Date of Purchase	
Purchase Store	
Dealer Stamp	
Customer Name	
Customer Phone	
Customer Address	
Zip Code	

Maintenance Records

Maintenance Date	Fault Conditions	Service Location	Maintenance Results