

SUPRENT

Inspire the Next You

This user manual tries to ensure the accuracy of the information, please kindly point it out for our improvement in the future, if there is any errors on the images or the texts. We'd be very appreciated for your support and effort.

In addition: If the technique of the trimmer has been improved, it will be upgraded and updated in the new version as well as the specification without announcement.

Brand Owner: Shenzhen Eukey E-Business Co., Ltd
Address: Room 201, Building A, Qianwan No.1 Road,
Qianhai Shengang Hezuoqu, Shenzhen, China
Tel: +1 888 2821842
Email: support@suprent.com

SUPRENT

Inspire the Next You



BT415BX | SUPRENT Beard Trimmer

 
CONTENTS

Notes Before Using	1
Part Name	1
How to Use	2
Cleaning and Maintenance	3
When Charging	3
Cautions	4
Technic Parameter	4
Warranty Certificate	5
Maintenance Records	5

NOTES BEFORE USING

1. This is our latest rechargeable hair trimmer — BT415BX which is designed as a professional beard trimmer. It has the comb auto-lock function when turning on the device.
2. Please have the trimmer fully charged for 1.5 hours before using it at the first time.

PART NAME

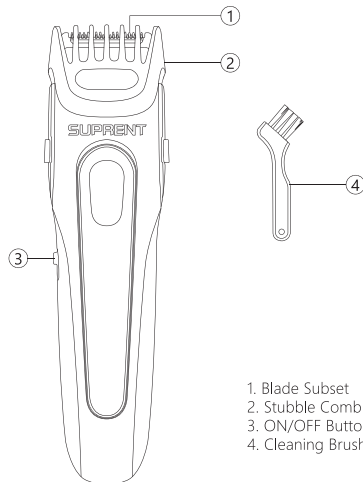

1. Blade Subset
2. Stubble Comb
3. ON/OFF Button
4. Cleaning Brush


HOW TO USE

1. Put the small end of the USB cable connected with the jack of the battery pack which lies at the bottom of the machine, then put the other end of USB cable connected with the power (5V/1A). When fully charged, The indicator light will change from red to green. After fully charged for 90 minutes, it can work more than 120 minutes.
2. Push the switch button to "OFF" position, it will start to run, push it to "ON" position to turn off the device.


How to use the comb attachment

Please make sure the device is turned off and the comb is at the unlock position before you use the comb attachment.

 1. Attach and push the adjustable comb to make it match with the device, take it off in the opposite direction. See the figure as below:

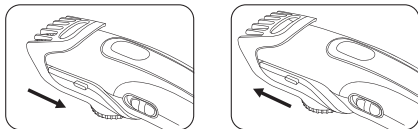


 2. Adjust the attachment up or down to the desired cutting length on the back of the trimmer. There are 19 built-in adjustable precise lengths with one comb attachment. See the figure as below:




CLEANING AND MAINTENANCE

 1. Peel off the blade unit with your thumb as the diagram below. The blade unit can be removed and cleaned using the supplied cleaning brush. Using the supplied oil container, add 2 to 3 drops of lubricating oil onto the movable parts and blades.

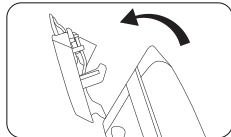

 2. The blades must be cleaned regularly. Insert the blade unit and push it back to the clipper as the arrow below. See the figure below:

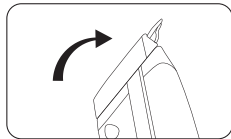

WHEN CHARGING

1. Please don't charge it if the temperature of the device is lower than 0°C or higher than 40°C.
2. Please keep it in a cool and dry place, and keep it out of the direct sunlight or sources of heat.
3. The standard charging time is 90 minutes. In order to protect the battery, please don't extend the charging time.

CAUTIONS

1. While cleaning the devices with a wet cloth, do not clean it with corrosive solution in any condition. Do not immerse the clipper in the water.
2. Please keep the beard trimmer away from the children.
3. Please note that this clipper may become warm during operating and/or charging, it is normal. When using, don't hold the power soft line, in order to prevent possible accidents.

TECHNIC PARAMETER

Motor's voltage: DC 3.6V

Charging time: 1.5 hours

Working time: ≥ 90 minutes

Rated power: 2 W

Warranty Certificate

Product Name	Beard Trimmer
Product Model	BT415BX
Date of Purchase	
Purchase Store	
Dealer Stamp	
Customer Name	
Customer Phone	
Customer Address	
Zip Code	

Maintenance Records

Maintenance Date	Fault Conditions	Service Location	Maintenance Results