 


SPECIFICATIONS

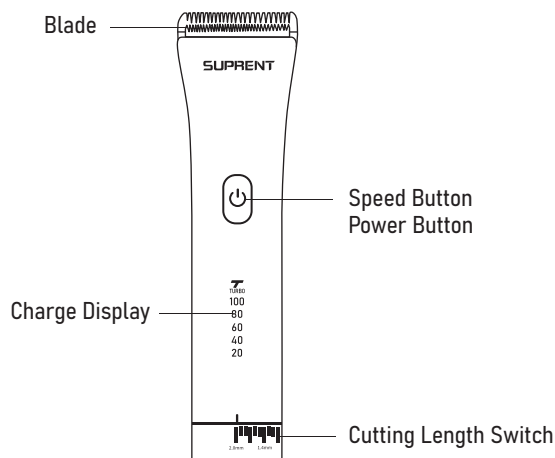

DIGITAL SCREEN FUNCTION DESCRIPTION

Speed Indication

2 speed modes are available: Standard Mode and Turbo Mode

Battery /Charging Reminder

When charging, the corresponding battery indicator flashes. When the battery power is lower than 20%, the corresponding indicator flashes.

*Note: When the power is too insufficient to be turned on, please charge it immediately. If it is not used for a long time, please fully charge it at least once every six months.

Power Button


Short press the power button to turn it on or off. Long press the switch to change the gear mode (TURBO).

Charging Methods

This product contains a lithium battery with a capacity of 1400mAh. The charging time is about 2 hours. After the product is fully charged, the running time is no less than 180 minutes.

Cutting Length Adjustment of Blade

Adjusting the ring to choose the hair length that you want to remain. The ranges are: 0.8/1.1/1.4/1.7/2.0 mm.

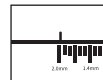

Different sizes of combs are available for you to remain different length of hair, the size includes: 3/6/9/12mm.



BASIC PARAMETERS



Motor : Voltage : 3.2V
Speed : 7000RPM



Decibel: $\leq 65\text{dB}$



Battery Type: Lithium Battery
Power Supply Input: DC 5V 1A
Battery Capacity: 1400mAh
Charging Time: 2H
Running Time: 3H



Charging Interface: Type-C

STEPS FOR HAIR CUTTING

Before the Hair Cut

1. Inspect the clipper, making sure that it is free of oil between the cutting blade teeth and turn the unit on to distribute the oil and to make sure it is running smoothly. Wipe off any excess oil.
2. Before cutting always first comb the hair so it is tangle free and as it is naturally worn.

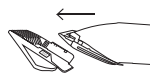


figure 1

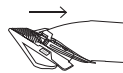


figure 2

Attachment Guide Combs

Cutting hair requires practice so it is always better to leave the hair longer for the first few haircuts until you become used to the length to which each comb attachment cuts the hair.

1. Guide combs should be installed by first hooking the blade teeth front side of guide comb. Then press the back of the guide comb down until it snaps into place. (See picture on the right)
2. Ensure comb is attached before beginning to cut hair.
3. To remove, pull the snap tab on back side of guide comb and pull the comb off.

Notes: The first time you cut hair, cut only a small amount of hair until you become accustomed to the length of hair each guide comb provides-Start by attaching the largest guide comb on the clipper.

- Then use shorter guide combs if a shorter length is desired.
- For uniform cutting, cut at a slow, even speed.

STEPS FOR HAIR CUTTING

Step 1-Nape of The Neck

- Attach comb attachment 3mm or 6mm.
- Hold the clipper cutting edge pointed up and begin the haircut, starting at the centre of the head at the base of the neck .
(See diagram 1)
- Hold the clipper comfortably in your hand and hold lightly against the head with the comb teeth pointing upward. Gradually and slowly lift the clipper working upwards and outwards, through the hair, trimming just a little at a time.
- As you cut, gradually lift the clipper head towards you. Continue to cut the back area from the bottom of the neck upwards to the top of the ears.

Step 2-Back of The Head

- Change to the next longest comb attachment 9mm or 12mm and cut the back of the head.(See diagram 2)

Step 3-Side of The Head

- Change to one of the shorter combs 3mm or 6mm, trim sideburns, i.e. the hair directly in front of the ears. Change to one of the longercombs, 9mm or 12mm, and continue to cut to the top of the head.
(See diagram 3)

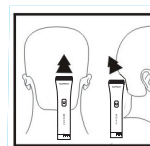


diagram 1

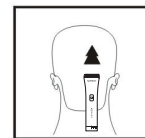


diagram 2



diagram 3

Step 4-Top of The Head

• Using the comb attachment 9mm or 12mm, cut top of head from back to front against the direction in which the hair normally grows. In some cases, this may require the reverse, or cutting from front to back.

(See diagram 4)

• Comb attachments 3mm or 6mm are used to achieve a close crew cut or short cut.

• For longer hair on top, use the comb provided and lifts hair on the top of the head. Cutover the comb, with the hair lifted or hold the hair between the fingers to lift it and cut it to desired length. Always work from the back of the head.

Hair can be cut shorter gradually by reducing the space between the comb/fingers, and the head.

Comb out trimmed hair and check for uneven strands.

(See diagram 5&6)



diagram 4



diagram 5



diagram 6

Step 5-The Finishing Touch

• Finally, use the Taper Lever without an attachment comb for close trimming around the base of the neck, the sides of the neck and the ears.

• To produce a clean straight line at the sideburns, reverse the clipper by turning the reverse side uppermost.

(See diagram 7)

• Press the clipper at right angles to the head, tips of the blades lightly touching the skin and work downwards. This way will obtain, as a clean cut as would be given by a razor.



diagram 7

Short Tapered, Flat Tops and Short Cuts Hairstyle

• Starting with the longest attachment comb (12mm), cut from the back of the neck to the crown. Hold the attachment comb flat against the head and slowly move the clipper through the hair.

(See diagram 8)



diagram 8

• Use the same procedure from the lower side to the upper side of the head. Cut the hair against the direction in which it grows from the front to the crown and then level the cut with the sides.

• To give a 'flat top' look, the hair on top of the head must be cutover the top of a flat comb instead of using the attachment comb.

• Use closer cutting attachment combs to taper the hair down to the neckline as desired. Comb hair and check for uneven areas and outlining sideboards and neckline as described previously.

BLADE REMOVAL AND CLEANING

1. Unit must be off. Hold unit securely in one hand Grip blade and push with your thumb the top of the blade away from the unit.


2. Adjust the scale at the bottom to 2.0 mm before moving the cutter head off the retaining snaps.

3. Pull blade away from unit.

Reverse order to reattach blade.

4. Use the brush included to remove the accumulated hair from the cutters.

5. Clean the cutter head of the hair clipper with a damp cloth or under running water.

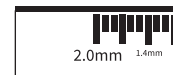

Blades Maintenance

Blades Maintenance is recommended to oil the blades after every use. Place 2 to 3 drops of lubricating oil on the moving blade and turn on the clipper.

WARM TIPS:

1. Fully charge the trimmer before you use it for the first time or after not using it for a long period (When charging, please use a power adapter with an input voltage not higher than 5V 1A).

2. Cleaning

It is not necessary to clean the cutter head frequently. It just needs a brush to clean the excess hair for daily care. Since the body is not waterproof, please remove the cutter head and clean it separately.

3. When the trimmer is used for 2 hours totally, some problems may occur, such as relatively loud noise, dullness, dropping in shear force or high temperature, then the cutter head needs dripping care. It is recommended to replace the cutter head once a year.

4. When the product works continuously for about 40 minutes, the temperature will generally rise. Please turn off the trimmer and restart after it cools down. If the body temperature is abnormally high, please stop using it immediately and cool it down for a while before restarting. If the heat persists, please contact customer service.

5. To maximize battery life trimmer should be shut off immediately after using.

6. Do not allow children to use this product or treat it as a toy.

7. Do not use attachments not recommended by the manufacturer. Be sure to check carefully before using the product. If there is any damage, please stop using it.

8. Please use, charge and store this product at a temperature between 15°C-30°C.

WARRANTY AND SERVICE

From the date of purchase, the main part of the product can enjoy a one-year warranty service (excluding accessories).

Product failures due to accidental damage, unauthorized repairs, improper storage and other man-made damage are not covered by the warranty.

After-sales Service: If you have any query about our products, please feel free to contact us. Issues Contact Info:

Contact Info	
SUPRENT After-sales Service	support@suprent.com
Official Website	www.suprent.com
Social Medias	Facebook: @suprentinfo Instagram: @suprent_official
Amazon Customer Service	Amazon's home page--At the bottom--Help--Need more help--Contact Us
Amazon Returns or Replace Item	Amazon's home page--Hamburger button--Menu--Your orders--Find our products--Order details--Need help with your item--Return or replace items



HAIR CLIPPER HC315

BRAND STORY

SUPRENT® has been specializing in haircare appliances since 2015, loved by more than 5 million users worldwide. We care haircare and what you care. Your 101% satisfaction will be our permanent motivation!

USER MANUAL