 


This user manual tries to ensure the accuracy of the information, please kindly point it out for our improvement in the future, if there is any errors on the images or the texts. We'd be very appreciated for your support and effort.

In addition: If the technique of the trimmer has been improved, it will be upgraded and updated in the new version as well as the specification without announcement.



Brand Owner: Shenzhen Eukey E-Business Co., Ltd.
Email: support@suprent.com


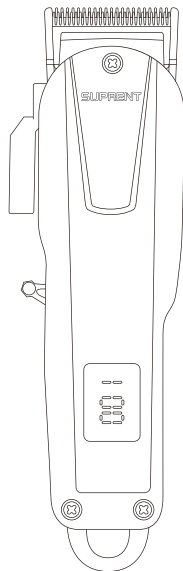


HC375SA | SUPRENT Hair Clippers

CONTENTS

Components	1
Fixed-Length Function	2
Cutter Assembly and Disassembly	3
Charging Precautions	5
Parameters	6
Guarantee	6
Warranty Certificate	8
Maintenance Records	8

  
COMPONENTS

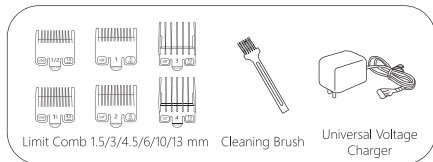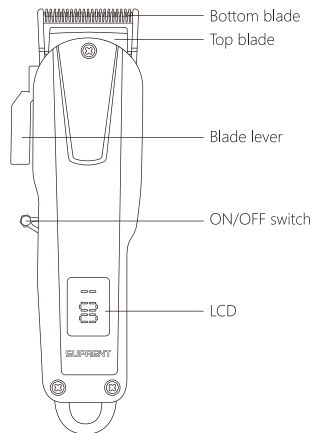


FIXED-LENGTH FUNCTION

A: Use of Limit Comb: Cropped hair and hairtrim
 Feature: (1.5, 3, 4.5, 6, 10, 13 mm) four lengths adjustment, control the hair length

 - 1.To determine the length of haircut
- 2.To select the appropriate limit comb

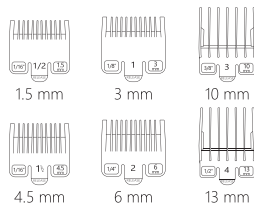

 - 3.To fine-tune the cutter

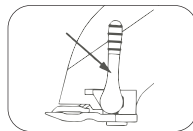


Adjust the cutter by rotating the adjusting ring from forward to downward

- Mount the limit comb:
- 1.Align the limit comb with the blade edge
 2. Slightly forward push to mount it.
- Disassemble the limit comb:
- Just pull hard the limit comb




CUTTER ASSEMBLY AND DISASSEMBLY

 Sketch shows how the bottom blade holes are larger than the shanks of the blades screws. When the blade screws are loosened the bottom blade can be aligned with tight after the blade is aligned.




 1. End of the top blade teeth should be $1/32$ " to $1/16$ ", 0.79mm to 1.59mm back from bottom blade. This is important so that the clipper doesn't cut too close or allow the moving cutter to touch the skin.
2. Extreme left hand tooth of top blade must be covering or be to the left of the first small tooth of bottom blade.
3. Extreme right hand tooth of top blade must be touching the big tooth on the bottom blade.



Taper Lever


 
Some clippers are equipped with an adjustable taper lever that changes the closeness of your cut. When the lever is in the uppermost position, the blades will give the closest cut. Pushing the lever downward gradually increases the cutting length.



CUTTER CLEANING AND MAINTENANCE


Blade Alignment

  - Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory.
- Blades must be realigned if they have been removed for cleaning or replacement.
- To realign the blades, simply match the upper and bottom blades teeth up, point for point. (End of top blade teeth should be approximately 0.5-1.0mm back from bottom blade. Compare your upper blades with the sketch.)
- If blade alignment is incorrect, add a few drops of oil to the blade, turn clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust. Tighten screws after blade is aligned.

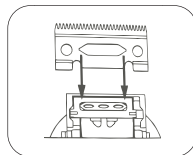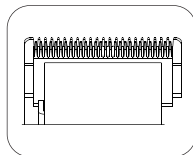

Cutter Maintenance

 - To maintain your clipper in peak condition, the blades should be oiled every few haircuts.
- To oil it properly, the unit should be held so the blades are in a downward position. With the clipper blade running, dispense 2-3 drops of oil across the top blade.



CHARGING PRECAUTIONS

Charging the Battery

Before the equipment is used for the first time, it should be charged 3-5 hours. Plug power cord directly into unit. Be sure clipper is switched OFF when charging. During charging, the charge indicator is illuminated. The charge indicator will begin to blink when almost fully charged and may shut off when fully charged.

Using Rechargeable Cord/Cordless Clippers

This unit may be used without a cord when fully charged. If battery power is low, a power cord can attach directly to the unit for continued use as a corded unit.

- Plug power cord into an outlet at the correct voltage.
- Plug power cord directly into unit. Be sure clipper is switched OFF when charging.
- For corded operation, connect to receptacle on the bottom of the unit. If your battery is completely run down, allow the unit to charge for 1 minute (switched OFF) before using as a corded unit.
- If the cord is left attached to the unit when not in use, the cord will automatically charge the unit when left in the OFF position.

Troubleshooting

If your cordless clipper does not seem to be operating or charging properly, please check the following:

- Check the outlet's current by plugging another appliance (one you know is in proper working condition) into the outlet.
- Make sure the unit is not connected to a power source that turns itself off when lights are turned off.
- Make sure the clipper and charging transformer contacts are clean and free of hair or other contaminants.
- Verify that the blade assembly moves freely and is mounted properly.

PARAMETERS

Professional Hair Clipper	Motor	Operating voltage: 3.7V
	Battery	2000 mA Li-ion battery
		Charging time: about 3 hours
		Operating time with full charge: about 4 hours

GUARANTEE

1. This product is guaranteed against defects in material and workman-ship for a period of one year from the date of original purchase or receipt as a gift.
2. The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorized persons.
3. This guarantee does not include blades, guide comb, brush and oil, etc. which are consumable parts.
4. If you need service or information or if you have a problem, please visit the SUPRENT website at www.suprent.com or contact the SUPRENT Consumer Support via support@suprent.com. We are willing to help you.

GUARANTEE

Note

The following situations will not be free maintenance:

1. No warranty card.
2. Fail to explain the reason for breakdown.
3. The following circumstance is not covered by the warranty:
 - Damage caused by improper use, maintenance, and repair.
 - Damage caused by the non-appointed maintenance department.
 - Damage caused by self-assembly and disassembly.
 - Damage caused by force majeure.
4. If you are not satisfied with the quality of service, you can complain directly to our customer service center.

Warranty Certificate

Product Name	Hair Clippers
Product Model	HC375SA
Date of Purchase	
Purchase Store	
Dealer Stamp	
Customer Name	
Customer Phone	
Customer Address	
Zip Code	

Maintenance Records

Maintenance Date	Fault Conditions	Service Location	Maintenance Results