

**SUPRENT**  
Haircare, We Care


This manual tries to keep the accuracy and rigor of the information, please in kind prevail if there is any error on images or texts, welcome to point it out for improving.

In addition: If the technical of the beard trimmer has improved, it will be edited in new specification without notice. The appearance and color of the beard trimmer take the material objects.



Brand Owner: Shenzhen Eukey E-Business Co., Ltd  
Email: support@suprent.com



**SUPRENT**  
Haircare, We Care

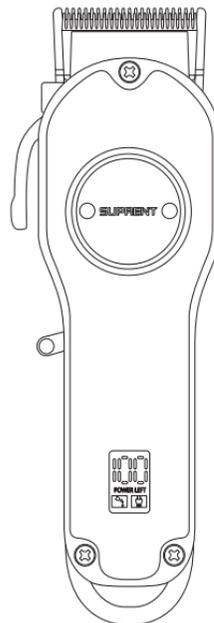

HC596 | SUPRENT Hair Clipper

## Components

1

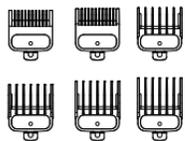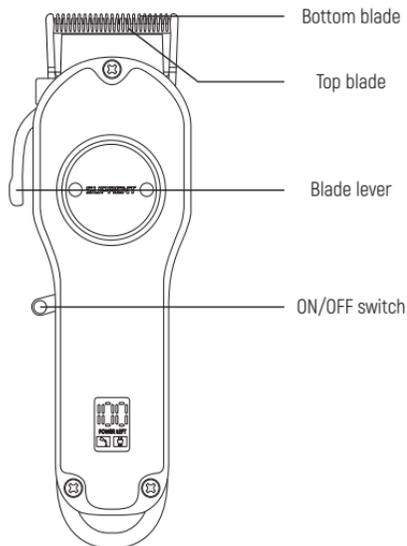

## Parameters

2

|                           |         |  |
|---------------------------|---------|--|
| Professional Hair Clipper | Motor   | Operating voltage: 3V                          |
|                           |         | High performance motor                         |
|                           | Battery | 2500mAh Li-ion battery                         |
|                           |         | Operating time with full charge: about 5 hours |

|                  |                         |
|------------------|-------------------------|
| Specific Adapter | Input: 100-240V-50/60Hz |
|                  | Output: 5V — 1000mA     |


## Use the Rechargeable Mode




1. Insert the charger into the tail of clipper, connect to the power to start charging.
2. When the charging indicator lights up, it starts charging; when the red light changes to the green (blue) light fully charged.
3. Cord and cordless are available

A: Use of Limit Comb: Cropped hair and hair trim  
 Feature: [1.5, 3, 4.5, 6, 10 & 13mm] six lengths adjustment to control the hair length.

1. To determine the length of haircut
2. To select the appropriate limit comb

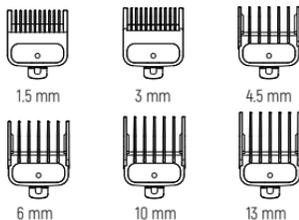

3. To fine-tune the cutter

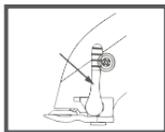



Adjust the cutter by rotating the adjusting ring from forward to downward.



ount the limit comb:

1. Align the limit comb with the blade edge
  2. Slightly forward push to mount it.
- Disassemble the limit comb: Just pull hard the limit comb.

  The sketch shows how the bottom blade holes are larger than the shanks of the blades screws. When the blade screws are loosened the bottom blade can be aligned with tight after the blade is aligned.




1. End of the top blade teeth should be  $1/32''$  to  $1/16, 0.79\text{mm}$  to  $1.59\text{mm}$  back from the bottom blade. This is important so that the clipper doesn't cut too close or allow the moving cutter to touch the skin.



2. Extreme left-hand tooth of the top blade must be covering or be to the left of the first small tooth of the bottom blade.
3. Extreme right-hand tooth of the top blade must be touching the big tooth on the bottom blade.

Taper Lever

 Some clippers are equipped with an adjustable taper lever that changes the closeness of your cut. When the lever is in the uppermost position, the blades will give the closest cut. Pushing the lever downward gradually increases the cutting length.



## Blade Alignment

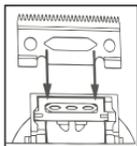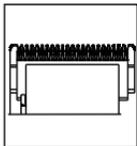

.Your clippers were carefully examined to ensure that the blades were oiled and aligned before leaving our factory.

.Blades must be realigned if they have been removed for cleaning or replacement


.To realign the blades, simply match the upper and bottom blades teeth up, point for point. (End of top blade teeth should be approximately 0.5-1.0mm back from the bottom blade. Compare your clipper blades with the sketch)

.If blade alignment is incorrect, add a few drops of oil to the blade, turn the clipper on for a few moments, turn off and unplug. Loosen screws slightly and adjust. Tighten screws after the blade is aligned

## Cutter Maintenance

To maintain your clipper in peak condition, the blades should be oiled every few haircuts.

To oil it properly, the unit should be held so the blades are in a downward position. With the clipper blade running, dispense 2-3 drops of oil across the top blade.

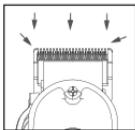

1. Please do not disassemble the product.
2. The hair clipper can not be washed. Please keep it away from wet conditions.



3. The product can only be cleaned by cloth with little water or mild soap solution.
4. Do not charge the product under environment above 40°C or below 0°C.

- ※ The product can produce little heat during using or charging, which is normal.
- ※ Please remove the battery safely and return it to the specified places when the battery runs out. Never discard it casually.

## Warranty Card

7

|                 |                           |                                   |
|-----------------|---------------------------|-----------------------------------|
| Product Name    | Professional Hair Clipper | Warranty Period                   |
| Product Model   |                           | One year from the purchasing date |
| Purchasing Date | Month Date Year           | To Month Date Year                |

|               |         |  |              |  |
|---------------|---------|--|--------------|--|
| Customer      | Address |  | Name         |  |
|               |         |  | Phone Number |  |
| Point of Sale | Address |  | Name         |  |
|               | Name    |  | Phone Number |  |

Following Guarantees Provided For the Product

- The product is produced through strict quality management and inspection.
- If malfunction occurred in fair use, the consumer can enjoy free warranty service according to the warranty card in the purchasing store or our repair center.  
(The battery and blade belong to consumables, not covered by warranty but provided with fee)
- No free services for the following situations:
  - Damages caused by repair or reformation not approved by our company.
  - Damages caused by false or neglectful use, or by accidents.
  - Damages caused by natural disasters or abnormal voltage.
  - Damages caused by ignoring attentions provided with in the product specification.
- The product is only guaranteed when provided the warranty card instead of the invoice.