

42" Fire Pit



Important!

Please read and follow ALL instructions before assembling or using this product, particularly the safety statements. Failure to follow instructions and warnings could result in damage to property, serious injury or death.

WARNING!

- Outdoor use only. Never use in enclosed area. Use in unventilated areas will endanger your life.
- Do not use this unit on or near combustible surfaces or structures such as wood decks, dry leaves or grass, vinyl or wood siding, etc.
- Use on level, non-combustible surface only.
- Keep away from all combustible materials including gasoline and other flammable liquids and vapors.
- Never use flammable accelerants, such as: gasoline, alcohol, paint thinners, kerosene, etc. to start a fire. Serious injury or property damage could result.
- Screen lifting tool may become hot when in use! Failure to wear protective gloves may lead to injury.
- Always wear fire-resistant gloves when handling hot metal screen and lifting tool.
- Keep away from house, garage, balconies, or overhangs.
- Avoid using during dry or windy conditions.
- Keep out of reach of children.
- Do not overfill or use to burn leaves or trash.
- Exercise the same care you would with an open fire.
- Never leave unit unattended while hot or in use.
- Completely extinguish fire before leaving.
- Ashes can remain hot for a long time after fire is extinguished.
- Dispose of cold ashes properly.
- Any modification of the unit will void product warranty.


Contact local authorities regarding possible burn restrictions before using product.

Parts Check List

Tools Required:

- Phillips Head Screwdriver
- Adjustable Wrench

Part #	Quantity	Part Description
A	1	Fire Bowl
B	1	Screen Lifting Tool
C	1	Spark Screen
D	4	Outer Ring Section
E	3	Stand Legs
F	1	Hardware Pack (M6x12mm with Nuts x 8pcs + M6x12mm with Nuts x 9pcs + M6x10mm x 4pcs)

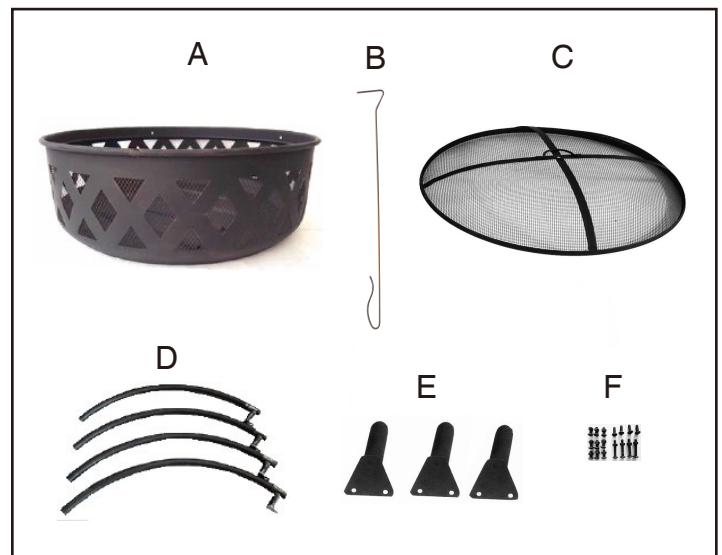

Assembly Instructions

Step 1:

Carefully unpack all parts. Inspect for missing parts or damage.

Continued on Reverse

Assembly Instructions (cont.)

Step 2:

Align holes of Fire Bowl (A) with holes of stand Legs (E). Insert short Bolts through holes of Fire Bowl and Legs and attach with Nuts (Fig 1). Attach all three (3) legs to Fire Bowl and securely fasten bolts with screwdriver and wrench.

Step 3:

Attach four (4) Outer Ring Sections together by inserting each end together forming ring as shown (Fig 2). Once assembled, place ring around Fire Bowl and align screw holes of fire bowl and ring. Insert the long bolts through screw holes and attach nuts (Fig 3). Hand tighten nuts only until all bolts are in place. Securely tighten with screwdriver wrench.

Step 4:

Insert screws through underside of ring at each joint in Outer Ring (Fig. 5). Securely fasten with screwdriver.

Step 5:

Place Screen on the Fire Bowl (Fig 6).

Step 6:

Your fireplace is now ready for outside use on a level non-combustible surface.

Please read and follow all Warnings and safety instructions before using.

General Care

- Fire bowl may be cleaned with water and mild detergent.
- Do not use abrasive detergents or pads to clean surround or fire bowl.
- As with any outdoor grill, periodic maintenance is required to return painted steel surfaces to original appearance. Remove any rust with sandpaper or steel brush and repaint with grill paint suitable for high-temperature surfaces. Follow manufacturer's instructions.
- The fire pit and mesh spark screen are painted with a durable high-temperature finish, but rusting will occur over time due to heat and moisture exposure. Rusting may occur more quickly in areas with a higher humidity. Regular maintenance is required to reduce the appearance of rust.

Figure 1



Figure 2



Figure 3



Figure 4




Figure 5



Figure 6



 **Warning:** This Product can expose you to chemicals including Benzene, which is known to the state of California to cause cancer and birth defects or other reproductive harm.
For more information go to www.P65warnings.ca.gov

This limited warranty is applicable to non-commercial residential use only in the United States. This warranty only applies to the functionality of the product, and does not cover cosmetic issues such as dents, scratches, corrosion, surface rust, or the discoloration of surfaces by heat, moisture, or exposure to sunlight. Regular maintenance of steel part is required to maintain appearance. Surface rust, corrosion, or powder paint chipping on steel parts is not considered a manufacturing defect and is not covered under this warranty.