

POWERED BY

PET MARVEL



Pet Smart Dryer

*Please read this manual carefully before use and keep it in a safe place

1 Information For Users

Important safety instructions

Before using the appliance, read the tips or warnings in this manual and on the appliance and the following should be observed when using it.

- To reduce the risk of fire, electric shock and injury, children under 8 years of age should not operate, clean or maintain this appliance.
- The appliance must be used by minors under parental supervision to prevent children from playing with it as a toy or sitting on it.
- Do not operate or maintain this equipment other than in accordance with the manual or the instructions on the equipment.
- If the equipment does not work properly, please refer to the troubleshooting table in this manual to check yourself, or contact customer service for feedback and action.
- The appliance is suitable for use in dry conditions only. Do not leave the appliance outdoors or on wet ground, and do not allow the appliance to be immersed in water.
- Do not install or use this appliance in a bathroom or within 5 metres of a sink.
- Do not touch the plug or switch with wet hands.
- If the power cord or plug is damaged, do not continue to use it, please contact customer service immediately.
- Make sure that the power cable is properly positioned so that it cannot be stepped on, tripped over or damaged by pressure.
- When unplugging the power supply, hold the plug and do not pull on the power cord.
- Do not bend, tangle or pull the power cable to prevent it from overheating.
- Unplug the appliance if it is not to be used for a long period of time or before servicing or maintenance.
- Do not use the ozone-cleaning function unattended to avoid the risk of pets getting inside the appliance.
- It is forbidden to stack objects on top of the equipment to keep the equipment clean and dry.
- It is strictly forbidden to use the equipment in an environment where flammable and explosive substances are present.
- It is strictly forbidden to place the equipment in a heat source, fire source or other high temperature environment to avoid dangerous situations such as fire.
- The appliance must not be used in a cabinet or in a space where the overall environment is too confined, affecting air intake, air output and moisture removal.
- After using, wash the tray and dry it to keep the machine in a clean and dry condition.
- Only use the matching power cord with this equipment, otherwise damage to the equipment or even fire may result.
- Please do not dismantle, modify or repair the equipment yourself as this will result in the loss of all warranty and service rights.

SPECIAL TIPS

- Always use all functions of the appliance in the presence of the owner.
- If your pet is stressed during drying, reduce the wind speed and observe, if it still reacts violently, you need to stop drying process immediately.
- If your pet is over 7 years old or has a special condition such as an illness, please consult customer service and use the equipment under their guidance.
- Do not move the appliance while your pet is inside .
- Do not place cushions, pillows, towels or other objects inside the appliance to prevent the air vents from blocking and causing abnormal temperatures.
- If you find abnormal heating or unusual noises in the appliance, please contact Customer Service as soon as possible.
- Only water-soluble liquids can be used in the care solution, oil-based liquids are prohibited (maximum capacity of the reservoir is 25ml).
- Recommended for: Cats and small dogs weighing less than 9kg.

2 Packing List



 
Pet Smart Dryer*1




Instruction manual*1

3 Product Information


Front

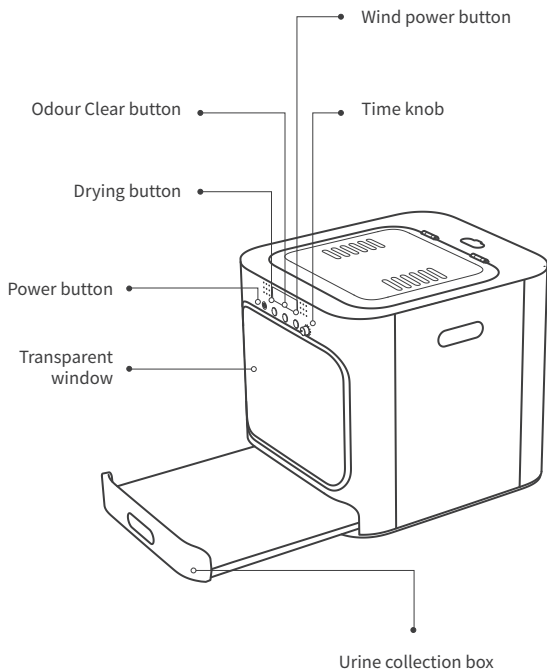

Top side

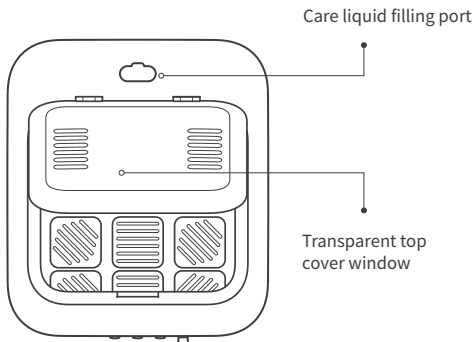 


Back

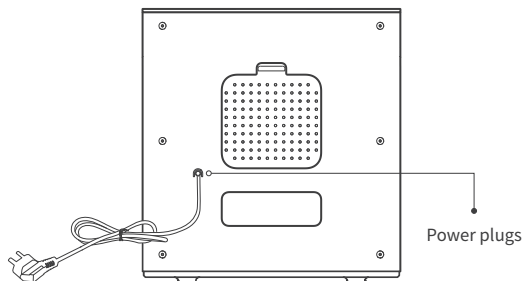 

4 Instructions


1. Power on

 click the power button,
the device enters standby mode

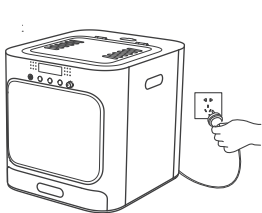


2. Care solution addition

 open the silica cover where you
can add care liquid. (Max filling
capacity is 25mL; ⚠ DON'T add
non-water-soluble liquid)

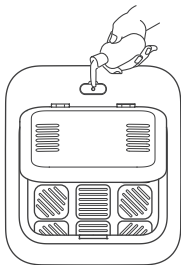



 
3. Open the top cover

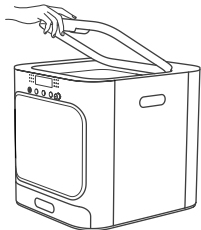after putting in your pet, close the top cover




4.Mode selection

 - a、Drying: Select the matching drying mode according to the length of your pet's hair. (Default short hair drying, click to switch to long hair drying)
- b、 Odour purification: press and hold for 5 seconds to turn on, click the power button  to exit. (Before running this mode, please ensure that there are no live animals in the cabin, wait for 2 minutes after the end of the clean odour for the live oxygen to completely dissipate, and then let your pet use it)
- c、 Wind power: 1.2.3 speeds, click to  cycle through.
- d、 Ambient light: Press and hold the time knob for 5s to turn on/off the ambient light.
- e、 Time knob: Click the time knob to unlock it first, then adjust the time. Turn the time knob to the left to subtract (a multiple of 5 minutes) from the current time. Turn the time knob to the right to add to the current time(a multiple of 5 minutes).



5.Shutdown

 Click the  power button




6.After drying

open the top cover and carry out the pet.



 7.Clean the furs at the disc in the cabin

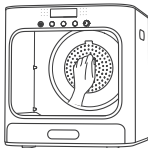

8.Pump out and clean the urine collection box



5 Product Specifications

Product name: Pet Smart Dryer
Product type: NFSDR11A
Product size: 500*440*470 (mm)

Rated power: 600W
Wind volume: 3 gears

6 Malfunction Elimination

Fault description	Handling measures
Unable to turn on	<ol style="list-style-type: none">1. Please check if the power cable is connected or broken2. Please check if the power button is on3. If the above method still does not solve the problem, please contact customer service
Internal temperature of the appliance does not rise	<ol style="list-style-type: none">1. Check the display for faults E22. Check if the temperature outside the cabin is too low (recommended indoor temperature 15°C~30°C)3. Turn off the power, wait 10 seconds and restart the device4. If the above method still does not solve the problem, please contact customer service
Rising internal temperature of the equipment	<ol style="list-style-type: none">1. Check if the temperature outside the cabin is too high (recommended indoor temperature 15°C~30°C)2. Turn off the power, wait 10 seconds and restart the device3. If the above method still does not solve the problem, please contact customer service
Poor drying effect	<ol style="list-style-type: none">1. Please check if the wind speed setting is too low2. Please check if the time setting is too short3. If the above method still does not solve the problem, please contact customer service
Error code E1	PTC over temperature, please turn off the device and contact customer service
Error code E2	PTC does not heat up, please turn off the device and contact customer service
Error code E3	Temperature probe abnormal, please turn off the device and contact customer service

7 Warranty Card

Before using this equipment, "Please read the tips or warnings in this manual and on the equipment." The following should be observed when using it:

1.The warranty period for this product is one year from the date of purchase (subject to valid proof of purchase). During the warranty period, the product itself will be repaired free of charge for quality problems.

2.The following cases are not covered by the warranty service.

a.any faults and defects caused by improper environment or conditions of use;

b.any failure or defect caused by improper installation, misuse, unauthorized maintenance, force majeure events or other external causes;

c. any failure or defect caused by the use of third party accessories;

d.Products beyond the warranty period;

e.other faults or damage not caused by the design, technology, manufacture, quality or other problems of the product itself;

3.If the returned product does not meet the terms of the limited warranty, we will charge the appropriate repair costs.

After-sales information feedback form

Client Name	Product type
Contact number	Date of purchase
Customer Email	Purchase channels
Customer Address	Issue log