


AÍRSEN

COFFEE MAKER

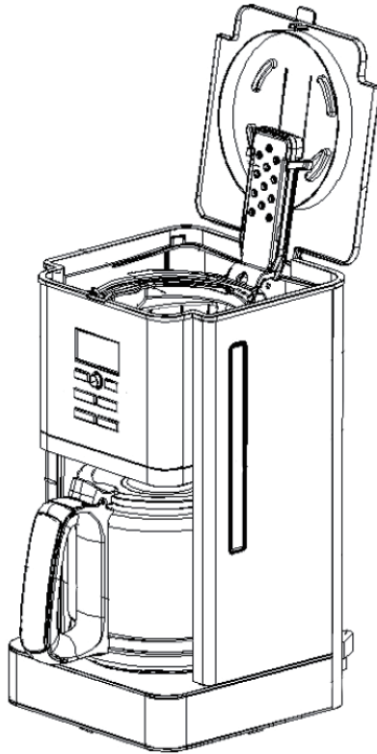

USER MANUAL

120V~ 60Hz 1000W

CM1705BATE

IMPORTANT SAFEGUARDS:

When using electrical appliances, please follow the basic safety precautions to reduce the risk of fire, electrical shock, and personal injury. Please read all the instructions as following.


1. Do not touch hot surfaces directly. Please use it by handles or knobs.
2. To protect against electric shock, please do not place cord, plugs, or appliance in water or other liquid.
3. Closing supervision is necessary when any appliance is used by or near children.
4. When stopping uses the machine or before clean it, please unplug from the outlet. It needs to be cooling before install parts or clean the appliance.
5. Please do not operate the machine if there are any appliance malfunctions. Please return the appliance to an authorized service facility for examination, repair or adjustment.
6. The use of an accessory not evaluated for use with this appliance may cause injuries.
7. Do not use outdoors.
8. Do not let cord hang over the edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other unintended use.
11. Appliances with Glass Containers.
 - A. The container is designed for use with this appliance. It must never be used on a range top.
 - B. Do not set a hot container on a wet cold surface.
 - C. Do not use a cracked container or a container with a loose or weakened handle.
 - D. Do not clean the container with cleansers, steel wool pads, or other abrasive material.

CAUTION

- The electrical voltage must correspond with the voltage stated on the label on the bottom of the appliance.

- Use only cold water!
 - Ensure the carafe is placed properly in its position when brewing coffee.
 - Between brewing processes switch off the appliance and let it cool down for about 5 minutes. Then refill with cold water.
 - After the brewing process, always switch off the appliance.
 - Disconnect the appliance before cleaning.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
 - Keep the appliance and its cord out of reach of children less than 8 years old
 - Cleaning and user maintenance shall not be made by children without supervision.
 - To turn off the device, press the “Brew” button.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Misuse may cause injury.
 - Heating element surface is subjected to residual heat after use.
 - The coffee-maker shall not be placed in a cabinet when in use.
 - This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children shall not play with the appliance.
 - The appliance must not be immersed.
 - This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

STRUCTURE DESCRIPTION:

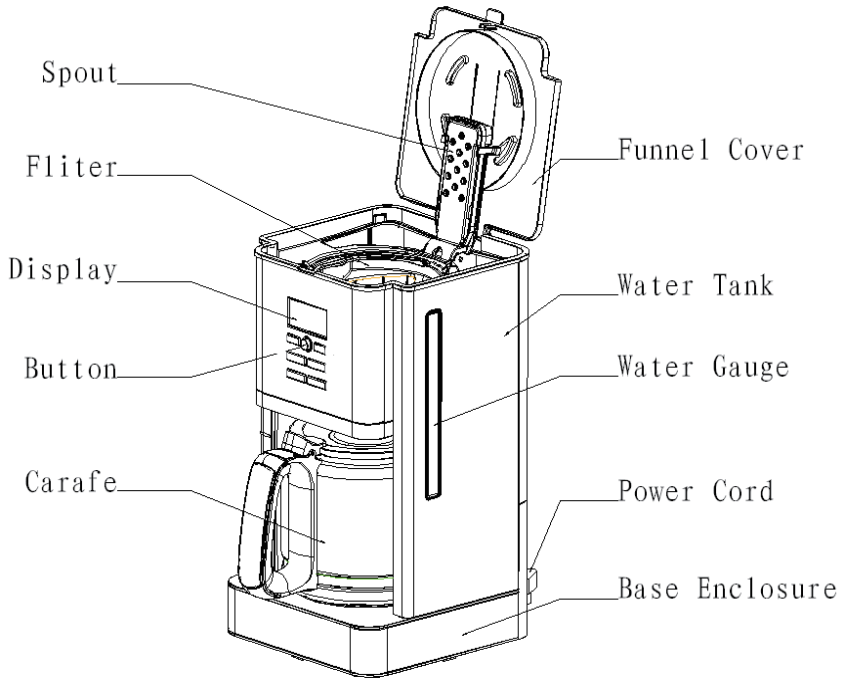

Household use only

YOUR COFFEE MAKER

Please study these operating instructions before using the coffee maker. Please follow them carefully and pay more attention to the safety instructions to ensure that this coffee maker will go on making the perfect coffee for years to come.

FEATURES OF THE AIRMSEN® COFFEE MAKER

Brew Strength Control – Classic or Rich, Brew strength control allows you to choose your favorite coffee flavor.

24-Hour Programmable Delay Brew – Set it to automatically brew at a desired time. The brewer will remain pre-heated and ready to brew at the time you programmed.

Mid-Brew Pause – Automatically stops the flow of coffee from the brew basket when the carafe is removed, allowing you to pour a cup mid-brew.

Clean Function – The clean function allows you to clean your unit whenever you would like. After 60 times of the coffee brewing cycle, The CLEAN indicator on the LED display will flash. It will remind you that you need to clean the coffee machine.

Adjustable Warming Plate – (low, medium, high) ensures that your coffee stays at the temperature you like best. Keep your brew at the ideal temperature for up to 4 hours. The Adjustable Warming Plate will activate during the brew and will automatically shut off after 0.5 hours by default. You can also program the warming plate to stay on for more or less time by pressing and holding "AUTO OFF" button.

Mute function – You can turn off all the sounds of the coffee machine, no longer be disturbed by annoying sounds.

BEFORE FIRST USE

1. Remove all packaging material and stickers from the coffee maker.
2. Wash the water reservoir, carafe, removable filter holder, and black-tone permanent filter in warm, soapy water with a soft cloth. Rinse parts and dry thoroughly.
3. Prime the system by running 2 full carafes on brew with water only. After each cycle is complete, discard the water.

SETTING THE CLOCK

1. Plug the power cord into an electrical outlet, the LCD display "AM 12:00" and flashes 5 times, then the machine sound "Beep", the clock starts to run, and enter the stand-by state.
2. Press either the "HOUR" button or "MINUTE" button and the display will flash. Enter the clock setting. Use the "HOUR" and "MINUTE" button to set the clock to the current time. The AM or PM indicator will illuminate on the right side of the display as you are setting the time.
3. When the desired time is reached, Press the "BREW/OFF" button or wait 5 seconds to complete the setting.

REMARK:

- If you unplug the brewer or experience a power loss, you will need to reset the clock the next time the brewer is powered on.
- If there is any operation within 15 seconds, the LCD backlight will be automatically turned off, press any key to let the backlight lit.

- In the standby mode, press "HOUR"+ "MINUTE" button 2S at the same time, the buzzer sounds three times, then the factory settings will be restored.
- When "PROGRAM" is displayed on the display, the time cannot be adjusted.

HOW TO BREW

1. Place the brewer on a dry, clean, and level surface. Plug your brewer in and power it on.

2. Fill the water reservoir to the desired level.

NOTE: DO NOT fill past the 12-Cup Line. If overfilled, pour out water until the level is no higher than the 12-Cup Line.

3. Place the filter holder in the brew basket. Then place the permanent filter or a #103fan-shaped paper filter in the filter holder.

NOTE: If using a paper filter, fold the paper filter along the seams, open it fully, and firmly press it into the filter holder, making sure it is fully seated.

4. Add your desired amount of coffee grounds to the brew basket.

5. Then place carafe under the brew basket.

6. Press the "CARAFE TEMP" button to select the desired coffee temperature, and press the "BOLD/CLEAN" button to enter the strong coffee mode.

7. Press "BREW/OFF" to start brewing. When the brewing is complete, the unit will "Beep".

COFFEE MEASUREMENT CHART

Small Batch	2cups	2 AIRMSEN Scoops or 2 tbsp	2 - cup line
	4cups	4 AIRMSEN Scoops or 4 tbsp	4 - cup line
Full Carafe	6cups	6 AIRMSEN Scoops or 6 tbsp	6 - cup line
	8cups	8 AIRMSEN Scoops or 8 tbsp	8 - cup line
	10cups	10 AIRMSEN Scoops or 10 tbsp	10 - cup line
	12cups	12 AIRMSEN Scoops or 12 tbsp	12 - cup line

Integrated AIRMSEN Scoop is equivalent to 1 tbsp. of coffee

HOW TO PROGRAMMING DELAY BREW

NOTE: The unit must remain on for the Delay Brew function to work. DO NOT power off after setting Delay Brew.

1. Place the brewer on a dry, clean, and level surface. Plug your brewer in and power it on.
2. Add water to the water reservoir and adding ground coffee to the brew basket, be sure brew basket are securely in place. Place the empty carafe under the brew basket.
3. Press "PROGRAM" button, the clock will flash. Use the "HOUR" and "MINUTE" button to set the time you would like the Delay Brew to begin. The AM or PM indicator will illuminate on the right side of the display as you are setting the time.

4. Press "BREW/OFF" to activate, or wait 5 seconds for Delay Brew to lock in. When activated, the unit will beep, and "PROGRAM" on the LED display will remain lit.

5. Press the "CARAFE TEMP" button to select the desired coffee temperature, and press the "BOLD/CLEAN" button to enter the strong coffee mode.

6. When the machine clock runs to the set time, the coffee maker will automatically initiate the brew cycle. The "BREW/OFF" button will illuminate, indicating that your coffee maker has begun the brewing. To cancel, press "BREW/OFF" button.

ADJUSTABLE WARMING PLATE

The warming plate will turn on once the brew has started. The initial automatic keep warm time of the coffee machine is 0.5 hours, At the end of the keep warm cycle, the warming plate will automatically shut off. You can change the time of your automatic keep warm cycle by following steps.

1. Press the "AUTO OFF" button, the display shows "AUTO OFF" and the clock "0:30" flash, displaying the time at which the warming plate is currently set to turn off.

2. Use the "HOUR" and "MINUTE" button to set the time you want the warming plate to automatically close. The maximum time is 4 hours, It can also be set to 0 hours, the heating plate will be turned off directly after brewing.

3. Directly press the "BREW/OFF" button to activate, or wait 5 seconds for it to lock in automatically. To lock in the new duration, press "AUTO OFF" button again.

TEMPERATURE SETTING IN COFFEE KEEPING WARM MODE

Press "CARAFE TEMP" button, select the temperature of the coffee in the keep warm mode. the "Low-Medium-High" selection will appear on the display.

REMARK: "Low" keep warm temperature: 172.4 ± 37.4 (°F),
"Medium" keep warm temperature: 177.8 ± 37.4 (°F),
"High" keep warm temperature: 183.2 ± 37.4 (°F).

MUTE FUNCTION

NOTE: Make sure the "PROGRAM" button is not selected/illuminated.

Press and hold the "CARAFE TEMP" button 3S, The mute indicator on the LED display lights up. When the mute logo is displayed, the machine will be muted. To cancel, press and hold the "CARAFE TEMP" button 3S again, the mute indicator is off.

BREW STRENGTH CONTROL

1. If you want a strong coffee, press the "BLOD/CLEAN" button, the BOLD indicator on the LED display lights up, the machine enter to strong coffee mode.
2. When the water in the water tank is used up, the machine will enter the heat preservation mode, and the BLOD indicator on the LED display will go out.
3. To cancel, press "BOLD/CLEAN" button again.

CLEANING AFTER A BREW

1. After the unit has cooled, remove the filter holder from the brew basket. If using a paper filter, discard it. If using the permanent filter, wash it thoroughly with soap and warm water or place on the top rack of the dishwasher.
2. Empty the water reservoir and hand-wash or place on the top rack of the dishwasher.

NOTE: For best results, we recommend rinsing the reservoir after brewing and refilling with fresh water the next time you brew.

3. We recommend cleaning your carafe with warm, soapy water, or placing it on the top rack of your dishwasher. If you want to clean the carafe more thoroughly, we recommend using a soft foam.

NOTE: When using the dishwasher to clean the carafe, please remove the lid first.

4. After the coffee maker has cooled, wipe down the main unit, showerhead, and water reservoir shelf with a cloth and warm water. DO NOT immerse the coffee maker in water.

DESCALING YOUR AÍRMSEN[®] COFFEE BREWER

NOTE: Make sure the “PROGRAM” button is not selected/illuminated.

1. Set the empty carafe beneath the brew basket.

2. Use a descaling solution specifically formulated for coffeemaker cleaning and follow the directions on the package. Fill the water reservoir up to, but not exceeding, the 12-Cup Line (60 fl. oz.).

OR

Add 16 oz. of white vinegar to the water reservoir, then fill the rest of the reservoir with water up to, but not exceeding, the 12-Cup Line (60 fl. oz.).

3. Once the water reservoir is filled with your cleaning solution or vinegar mixture, press and hold the "BOLD/-CLEAN" button for 3 seconds, CLEAN on the LED display lights up, then press the "BREW/OFF" button to enter the clean mode. The clean cycle takes approximately 25–35 minutes. To cancel the clean cycle, press and hold the "BOLD/CLEAN" button for 3 seconds again.

4. The unit will beep when the clean cycle successfully completes, CLEAN on the LED display will disappear. Refill the reservoir with fresh water up to, but not exceeding, the 12-Cup Line, and set the empty carafe beneath the brew basket. Run a full Brew cycle with water only to remove any cleaning solution that could affect the flavor of your coffee.

TROUBLESHOOTING GUIDE

There is sediment in my coffee.

- If using a permanent filter, the sediment at the bottom of the brewed coffee may be due to using finely ground coffee.
- To reduce the amount of sediment in the brewed coffee, use a slightly coarser grind or use a paper filter.

NOTE: We DO NOT recommend using a paper filter in

conjunction with the permanent filter, as this could cause water and/or coffee to clog or back up in the filter basket.

There are grounds in my coffee.

- Either the permanent filter or a paper filter must be inserted into filter holder when brewing.
- Using too many grounds can cause the filter holder to overflow. Once cooled, clean out the filter holder and refill using the appropriate amount of coffee (1 scoop per cup).
- Finely ground coffee can clog the filter holder. For best brewing results, use a medium-grind coffee.

Brew basket drips even after the brew cycle is completed.

- The removable filter holder valve may be clogged. Rinse the filter holder with water and press the valve repeatedly until the clog is cleared.

Paper filter is folding over.

- The unit is designed to take a #103 cone filter. Be sure you are using this size and shape, as larger sizes may fold over. Allow the filter holder to cool before handling. Be sure the paper filter is folded along its two seams and is pressed firmly into the filter holder. Alternatively, you can wet the sides of the paper filter to temporarily adhere it to the filter holder.
- If the problem persists, try using the permanent filter instead of a paper filter.

NOTE: When using a paper filter, DO NOT use the permanent filter.

Coffee is too weak.

- For a stronger coffee, use the Rich Brew setting, try darker-roast grounds, or use the permanent filter rather

than a paper filter. If you want an even bolder flavor, you can add more coffee grounds. Additional grounds do absorb water, so you may get more concentrated coffee but overall less liquid volume.

Coffee is too strong.

- For milder coffee, try the brew setting using light-roast grounds and a paper filter rather than the permanent filter. If you want an even milder flavor, you can use fewer grounds.

Brew will not start.

NOTE: The brew will begin, pause, and then continue. This process is used to evenly saturate the coffee grounds.

- Ensure the unit is powered on and the display is illuminated. If there are no lights, the machine is not getting power. Try a different outlet and press the Power button.
- Check to make sure there is water in the water reservoir.
- Make sure the carafe is in place. The brewer will not dispense coffee if the carafe is not under the brew basket. If it is not in place, the brew will remain in the brew basket, which could lead to overflow.
- If the brew still does not start, it may be time to run a clean cycle. Please refer to the Descaling Your AIRMSEN® Coffee Brewer section.

Brew cycle is too slow.

- A full carafe brew will take approximately 12–15 minutes. If a full carafe brew takes longer than expected, you may need to descale your unit.

Carafe overflowed.

- The carafe may not have been empty prior to brewing, or the water level exceeded the Max Fill line on the water

reservoir prior to brewing. Reminder, DO NOT add additional water to the reservoir after a brew or cleaning cycle has already started.

- For Classic brew, the carafe holds 60 fl. oz. To avoid overflows, make sure carafe is empty prior to brewing and the water reservoir is not filled past the 12-Cup Line.

Brew basket overflowed.

- Check that the carafe is in place with the lid secured. If the carafe is in place, the bottom of the filter holder may be clogged. This can happen with finely ground coffee or too many coffee grounds in the filter holder. Rinse the filter holder with water and press the valve repeatedly until the clog is cleared.

NOTE: We recommend using medium-grind coffee.

PRODUCT REGISTRATION

Please visit **www.airmsen.com** to register your new AIRMSEN product within thirty (30) days of purchase. You will be asked to provide the store name, date of purchase, and model number along with your name and address. The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge to have read and understood the instructions for use and warnings set forth in the accompanying instructions.

ONE (1) YEAR LIMITED WARRANTY

The 1 Year Limited Warranty applies to purchases made from authorized retailers of AIRMSEN Warranty coverage applies to the original owner and to the original product only and is not transferable.

AIRMOSEN warrants that the unit shall be free from defects in material and workmanship for a period of **1** year from the date of purchase when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in AIRMOSEN sole discretion, will be repaired or replaced up to 1 year from the original purchase date.
2. In the event a replacement unit is issued, the warranty coverage ends six (6) months following the receipt date of the replacement unit or the remainder of the existing warranty, whichever is later. AIRMOSEN reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as carafes, lids, brew baskets, permanent filters etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. You can contact AIRMOSEN customer service via **support@airmsen.com** com to obtain replacement parts.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.

4. Consequential and incidental damage.

5. Defects caused by repair persons not authorized by AIRMSEN. These defects include damages caused in the process of shipping, altering, or repairing the AIRMSEN product (or any of its parts) when the repair is performed by a repair person not authorized by AIRMSEN.

How to get service?

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, or if you have any questions about AIRMSEN coffee machine, please contact AIRMSEN customer service specialist through Amazon Buyer Message or **support@airmsen.com**. Our Customer Service Specialists can provide product support and warranty service options, including the possibility of upgrading to our VIP warranty service options for select product categories. So we may better assist you, please register your product online at **www.airmsen.com**

How to extend the warranty?

You can visit **AIRMSEN** official website and register your product through **www.airmsen.com** or scan the **QR** code on the User Manual. The warranty period will be extended to 2 years.



www.airmsen.com

Visit www.airmsen.com or scan the QR code for more information
EANXA Technology Co., Ltd
6A15, unit C, building B, Baoneng zhichuanggu,
Longgang District, Shenzhen, Guangdong, 518111 CN
Email: support@airmsen.com
Facebook: <https://www.facebook.com/airmsen/>



Intertek
3094153

CERTIFIED TO CSA STD. C22.2 NO 64
CONFORMS TO UL STD. 1082
CERTIFIÉ CONFORME C22.2 NO 64 DELA CANICSA
CONFORME À LA NORME 1082 UL