Quick Start Guide

This Quick Start Guide is designed for first time use. For safety and more information, refer to your USER MANUAL.





7. Press the Start button for 1.5 seconds and it will start churning.



6. Having the ingredients ready in the bowl, place the mixer (with the motor head) into the bowl by aligning the slots of the operating window.



8. When the ice cream is done, the machine will shut off automatically after 20 minutes with 3-second flashlight and buzzing sound. To enjoy the ice cream, simply take out the mixer component and the operational window.

P_{Cocinaré} TIPS & TRICKS FOR USERS

- Before putting the bowl into the freezer, please wipe the bowl dry from inside out, so to avoid water freezing which will cause the churning mixer stop working.
- Please place the bowl in the right vertical direction in the freezer with the opening facing upwards. Do not tilt or place upside down. (NOTE: The motor part can not be placed in the refrigerator).
- 3. The bowl should be placed in the freezer at -0.4 F (-18°C) to -4F (-20°C), (switch to 5th gear or more in the mechanical refrigerator) to ensure the freezing effect.
- The freezing time needs to be 10-12 hours, less than 10 hours may lead to poor effect or unsuccessful making of ice cream.
- Please refer to the recipe accompanying KRUSH to prepare the ingredients, the total amount of ingredients should not exceed 210ML;
- The ingredients need to be prepared in advance, use a blender or other tools to break up the ingredients and mix well.
- 7. In order to get a better taste, it is recommended that the prepared ingredients are freezed for 1–2 hours before production.
- 8. The Start button won't work when the device is being recharged. It cannot be charged and used simultaneously.
- 9. If no ingredients are put in the bowl, a red light will appear after pressing Start and will automatically shut down after 6 seconds of flashing. It does not affect the normal operation afterwards.
- 10. Use water or diluted kitchen cleaner to clean the freezer bowl. After rinsing and cleaning, wipe well with a dry cloth. The freezer bowl and the churning mixer can not be cleaned in the dishwasher, nor in the disinfection cabinet. To avoid heat damage, do not clean with liquid which is above 50°C/122°F.
- 11. If the ice cream reaches your desired result quicker than 20 minutes, press the Start button for 3 seconds to turn off the operation, no need to wait for the 20-minute auto shut down program.

Scan the QR code to get more info about the product and our services.



