



Driver—Webcam


1. Search for "device manager" in the lower-left corner, click it to enter the settings.

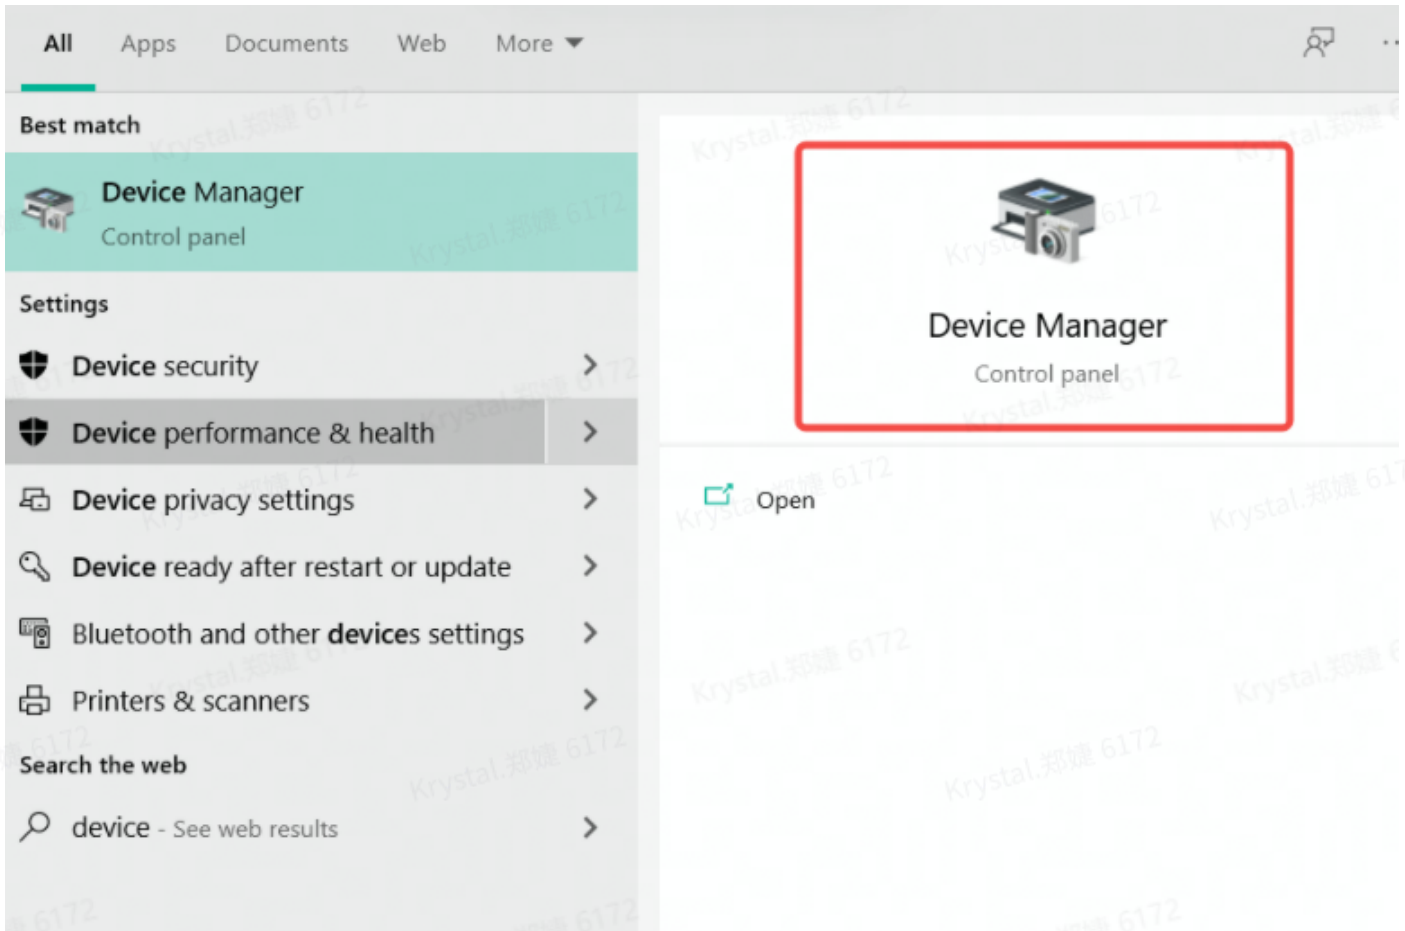


2. Select "Cameras", move your mouse to "HD Webcam eMeet Cxxx", then right-click.

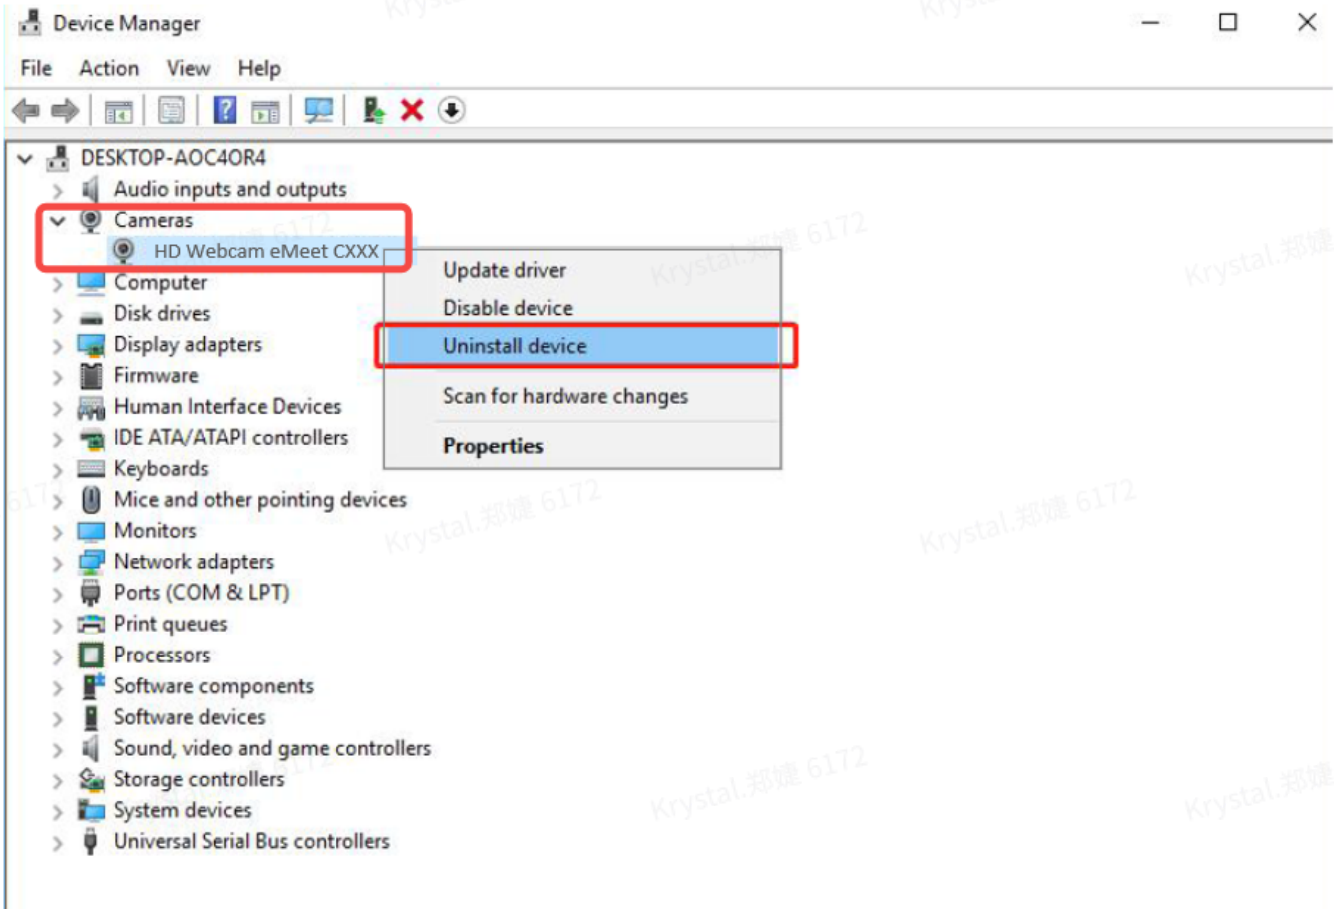

3. Select "Uninstall device", and click "Uninstall" to complete the uninstallation.

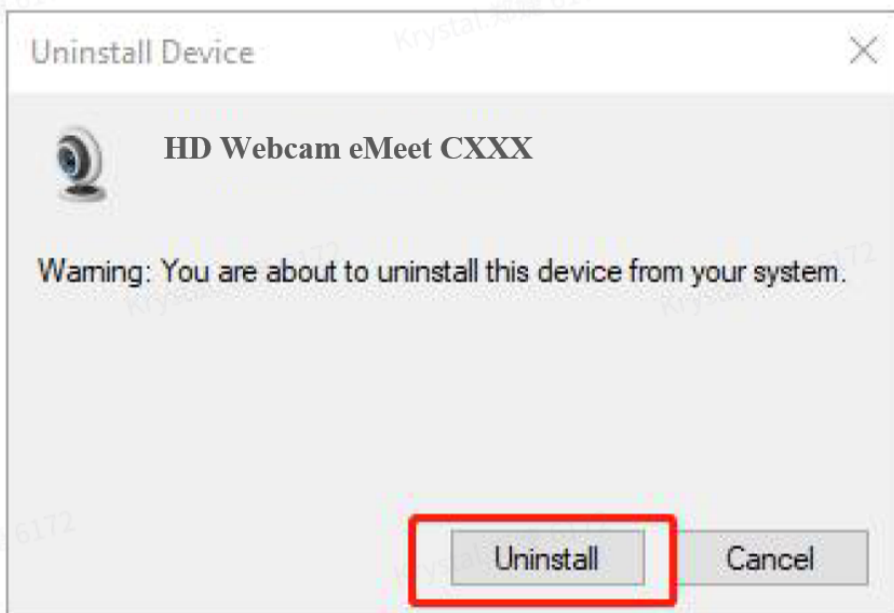

4. Select "Sound, video and game controllers", move your mouse to "eMeet Mxx", then right-click.

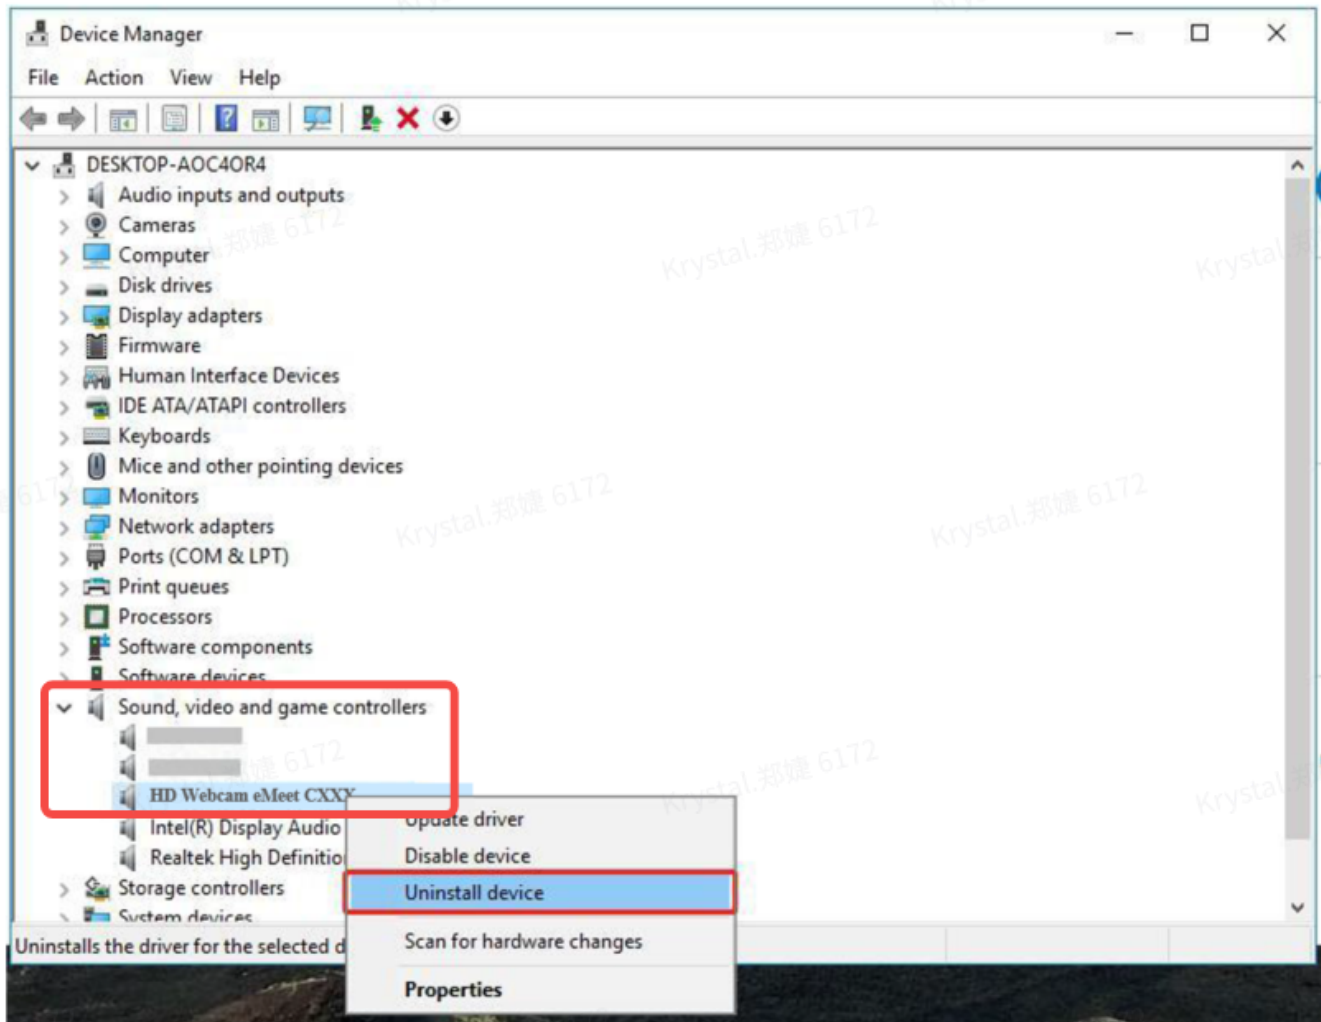

5. Select "Uninstall device", and click "Uninstall" to complete the uninstallation.



6. Re-plug the device into the computer, the device will appear again in the list.

