




Product Overview

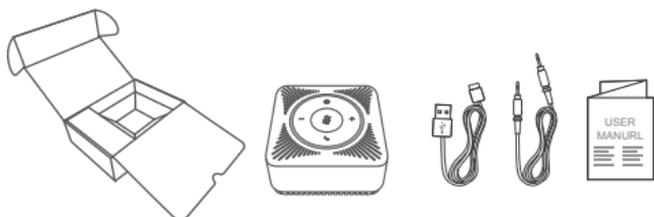

Product Features

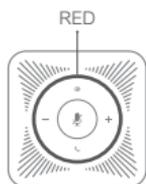


MIC MUTE

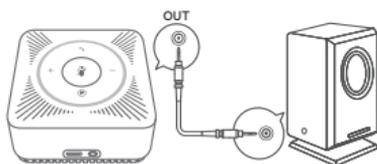

AUX OUT

Features

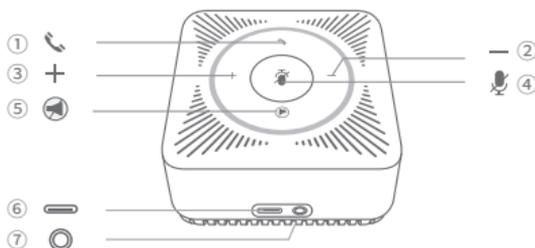

① Pick up & hang up Button

② Volume - button

③ Volume + button


④ Microphone mute button

⑤ Speaker mute button

⑥ USB power supply port

⑦ Audio output port

Instructions for Use

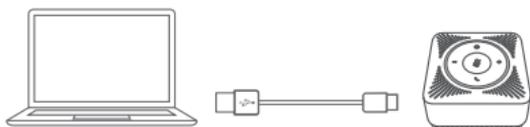

Use a USB Cable to Connect PC

When a USB cable is connected to a PC, the eMeet OfficeCore M0 automatically powers on.


When the USB cable is disconnected, the eMeet OfficeCore M0 automatically powers off.

Operation Guide

For Mac OS Users


Setting Default Microphone (Mac OS)

- Select System Preferences > Sound.
- Under the Sound tab, click Input, and then select eMeet M0.
- If necessary, adjust input volume at Settings for the selected device on the same panel.

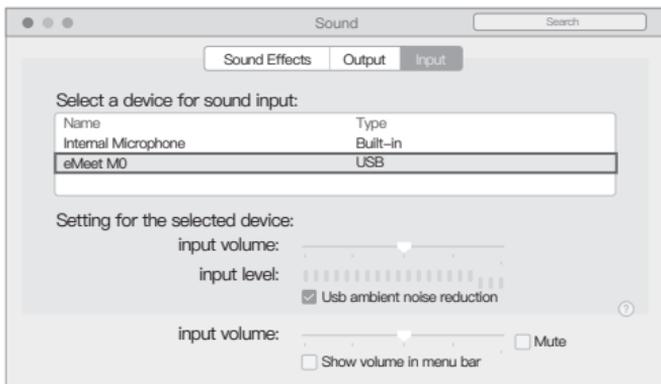

Set Default Speaker (Mac OS)


- Select System Preferences > Sound.
- Under the Sound tab, click Output, and then select eMeet M0.
- If necessary, adjust output volume at Settings for the selected device on the same panel.

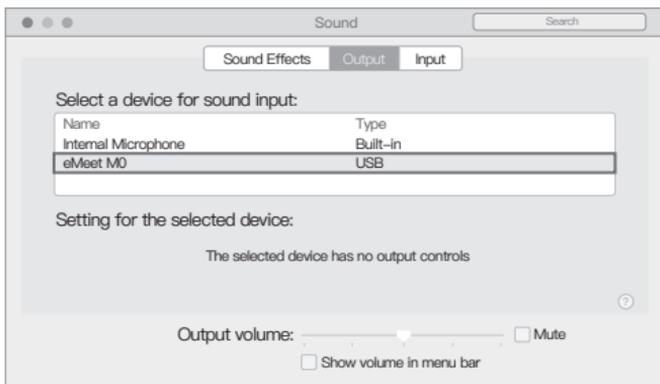

For Windows Users


Set Default Microphone (Windows Vista/7/8/8.1/10)

- Select Start > Control Panel > Hardware and Sound.
- Under the Sound tab, click Manage Audio Devices. Click the Record tab on the top of the displayed setup window.
- Under the Record tab, select eMeet M0, and then click the Set Default button. Click OK to save your changes.
- If necessary, you can make changes to the property (level) of the same panel to adjust input volume.

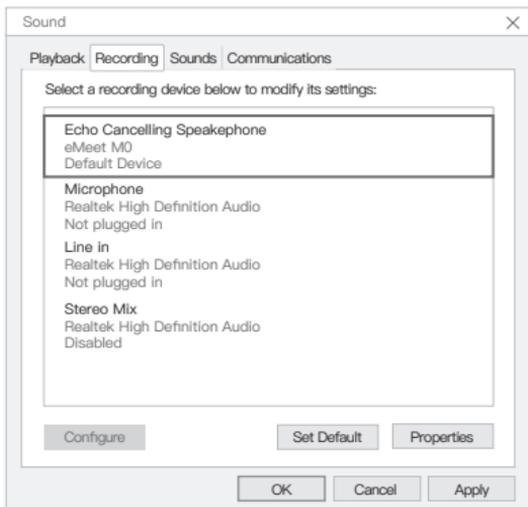

Set Default Speaker (Windows Vista/7/8/8.1/10)

- Select Start > Control Panel > Hardware and Sound.
- Under the Sound tab, click Manage Audio Devices. Click the Playback tab on the top of the displayed setup window.
- Under the Playback tab, select eMeet M0, and then click the Set as Default button. Click OK to save your changes.
- If necessary, you can make changes to the property (level) of the same panel to adjust output volume.

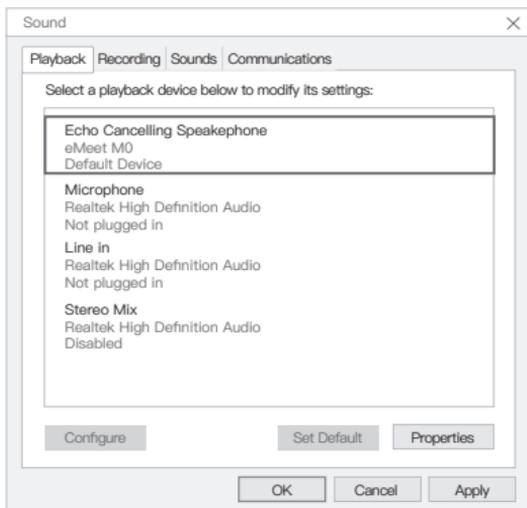

Product Parameters

Rated output power of speaker	3W RMS
Frequency response	20Hz~20KHz
SNR	≥ 80 dB
Microphone sensitivity	-26 dBFS
MIC Qty	4
Polar Pattern	360° omni-directional
Dimensions (mm)	80 x 80 x 40.7 ±0.5mm

FAQs

Question/Problems	Possible Reason	Troubleshooting
The eMeet M0 does not respond when the PC is connected with a USB cable.	①The USB cable is not properly inserted. ②The USB cable is damaged.	①Remove and insert the USB cable again. ②Replace the USB cable.
The speaker does not make sound after the eMeet M0 is connected.	①The speaker is not properly set. ②The eMeet M0 speaker is muted.	①Properly set the speaker according to "Instructions for Use" . ②Disable the speaker mute button of the eMeet M0.
The microphone does not make any sound after the eMeet M0 is connected.	①The microphone is not properly set. ②Enable the mute button of the eMeet M0 microphone.	①Properly set the microphone according to "Instructions for Use" . ②Disable the microphone mute button of the eMeet M0.
If the problem is not solved after trying the above methods	There may be a device driver recognition error.	Select Device Manager, locate the option for Sound, video and game controllers. Uninstall the driver of the eMeet M0. Then remove and insert the USB cable again.

Warranty

One-year limited warranty applies to all the eMeet products purchased from authorized dealers.

Contact us

For customer service and technical support, please contact us via.



support@emeet.ai



www.emeet.ai



US: + 1 8889595320(EST 9:00am-5:00pm Mon-Fri)